


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 1980 FORD Thunderbird OEM Service and Repair Workshop Manual

[Go to manual page](#)

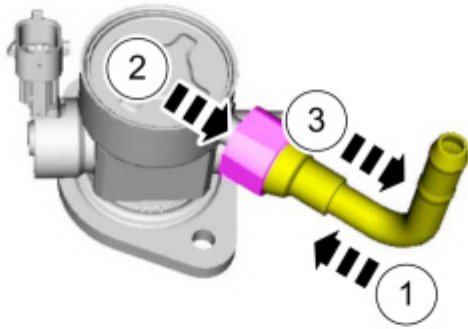


E168486

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


**Connect**

1.

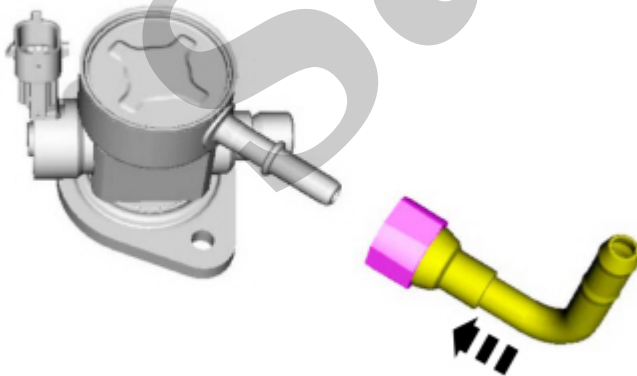

E168487

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

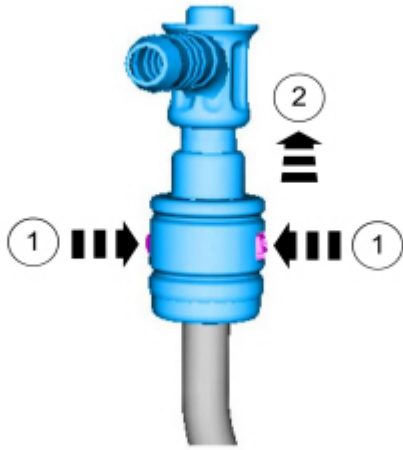

E152390

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

### Connect

#### 1. NOTE

Inspect and clean both quick release coupling ends.

Install the quick release coupling onto the tube until it is fully seated.




E152391

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Connect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

### Disconnect

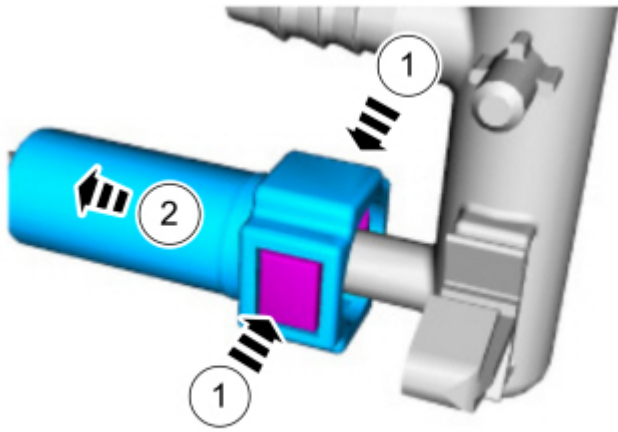

E253625


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

## Connect

### 1. 1. NOTE

Pull on the quick release coupling and the fitting to make sure it is securely fastened.

Snap the locking tab into place.

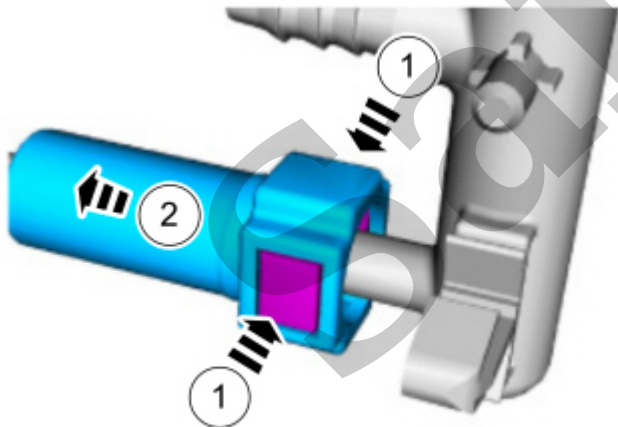


E253625

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Connect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

## Disconnect

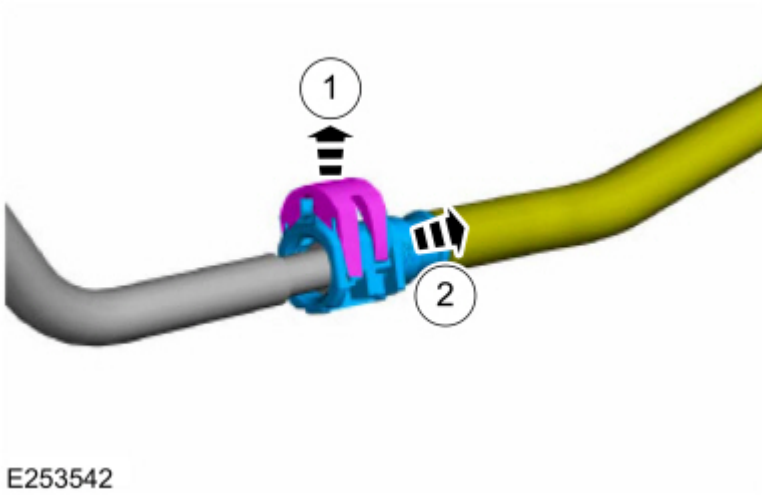

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


**Connect**

1. 1.


**NOTE**

Pull on the quick release coupling and the fitting to make sure it is securely fastened.

Snap the locking tab into place.

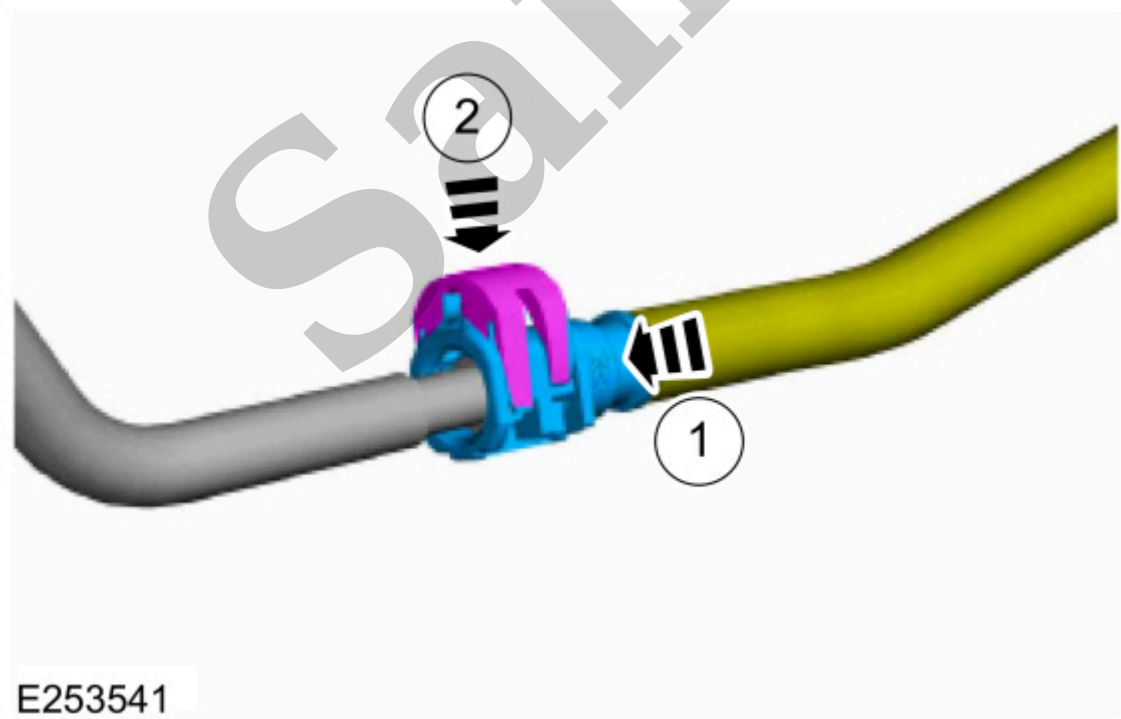

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

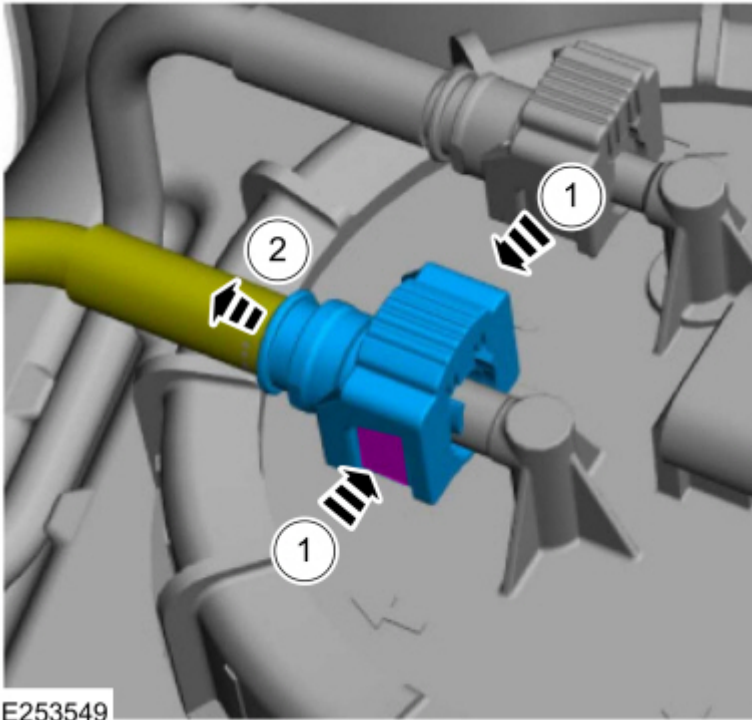

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

## Connect

1. 1.

### NOTE

Pull on the quick release coupling and the fitting to make sure it is securely fastened.

Snap the locking tab into place.

Do not use any tools. The use of tools may cause a deformity in the clip components which may cause fuel leaks.

## NOTE

### Type 19


1. If servicing a liquid fuel tube quick release coupling, release the fuel system pressure.

Refer to: [Fuel System Pressure Release](#)(310-00B Fuel System - General Information - 3.3L Duratec-V6, General Procedures).

2. Disconnect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

- 3.

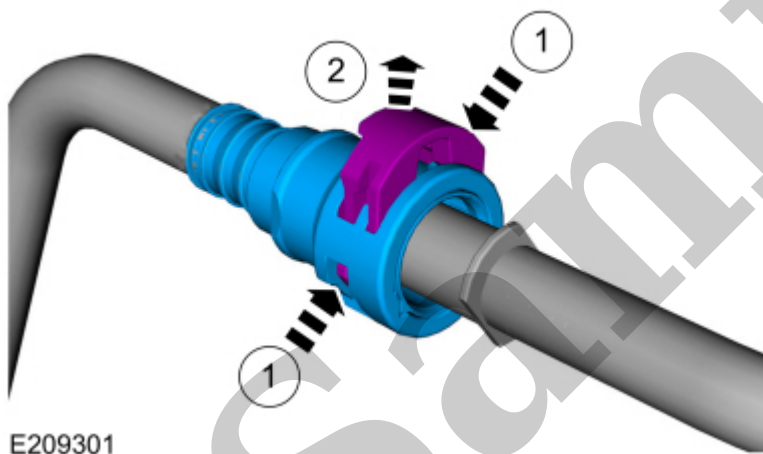

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

### Connect

1. 1.

## NOTE

Pull on the quick release coupling and the fitting to make sure it is securely fastened.

Snap the locking tab into place.

## Type 20


1. If servicing a liquid fuel tube quick release coupling, release the fuel system pressure.

Refer to: [Fuel System Pressure Release](#)(310-00B Fuel System - General Information - 3.3L Duratec-V6, General Procedures).

2. Disconnect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

- 3.

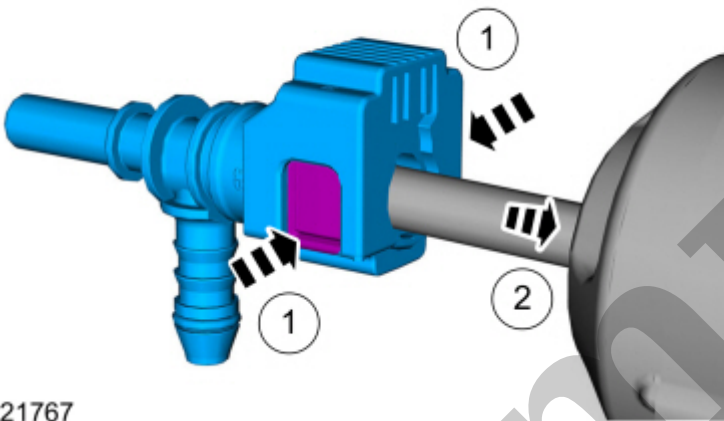

E221767

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

### Connect

1. **NOTE**

Pull on the quick release coupling and the fitting to make sure it is securely fastened.

Snap the locking tab into place.



## Type 21


1. If servicing a liquid fuel tube quick release coupling, release the fuel system pressure.

Refer to: [Fuel System Pressure Release](#)(310-00B Fuel System - General Information - 3.3L Duratec-V6, General Procedures).

2. Disconnect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

- 3.

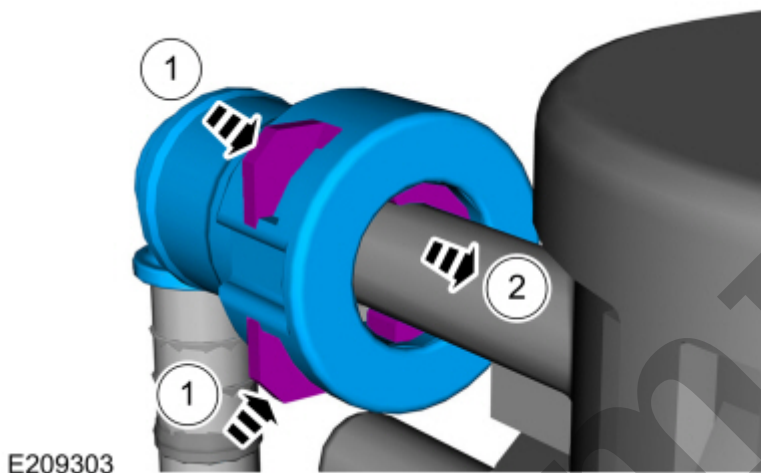

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

### Connect

1. 1.

#### NOTE

Pull on the quick release coupling and the fitting to make sure it is securely fastened.

Snap the locking tab into place.

## Type 22


1. If servicing a liquid fuel tube quick release coupling, release the fuel system pressure.

Refer to: [Fuel System Pressure Release](#)(310-00B Fuel System - General Information - 3.3L Duratec-V6, General Procedures).

2. Disconnect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).


- 3.

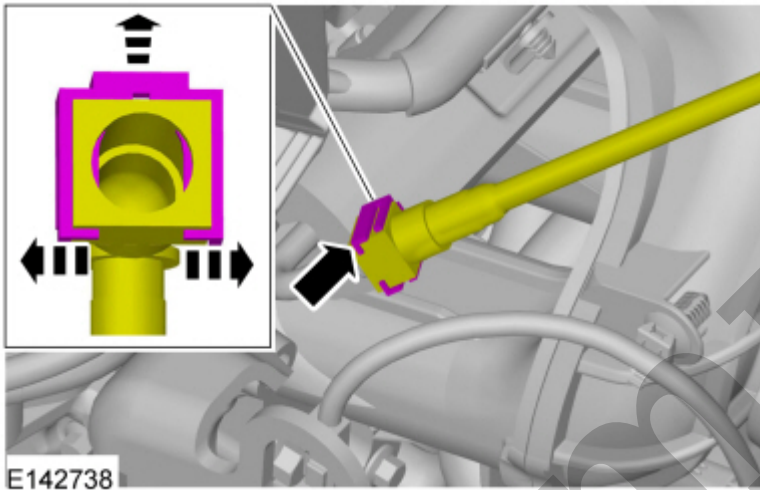

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

### Connect

- 1.

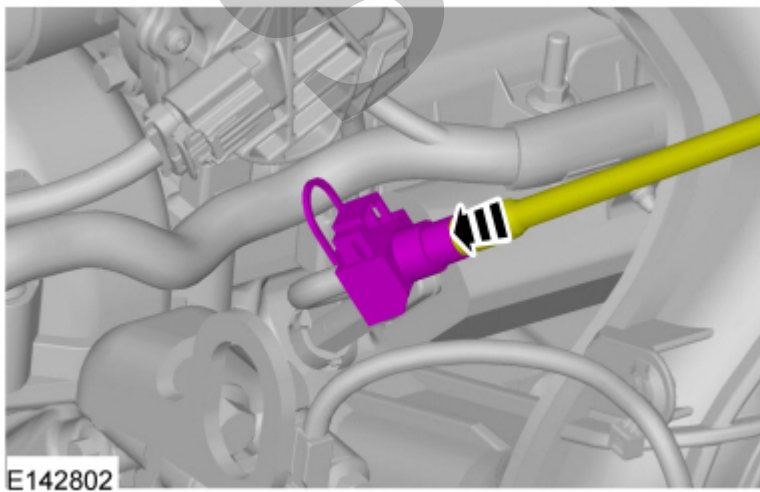

[Click here to learn about symbols, color coding, and icons used in this manual.](#)