

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1980 JEEP Wagoneer OEM Service and Repair Workshop Manual

[Go to manual page](#)

YOUR CURRENT VEHICLE

Front Door Hinge

FRONT DOOR HINGE

NOTE

It is not necessary to remove the door to replace one or both hinges. The hinges can be replaced one at a time.


REMOVAL

1. Mark the upper or lower hinge location to aid installation.

1 - Latch Cable
2 - Latch Cable End
3 - Wire Harness Connector

2. Release the latch cable from the door latch assembly and disconnect the latch cable end.

3. Disconnect the wire harness connector.

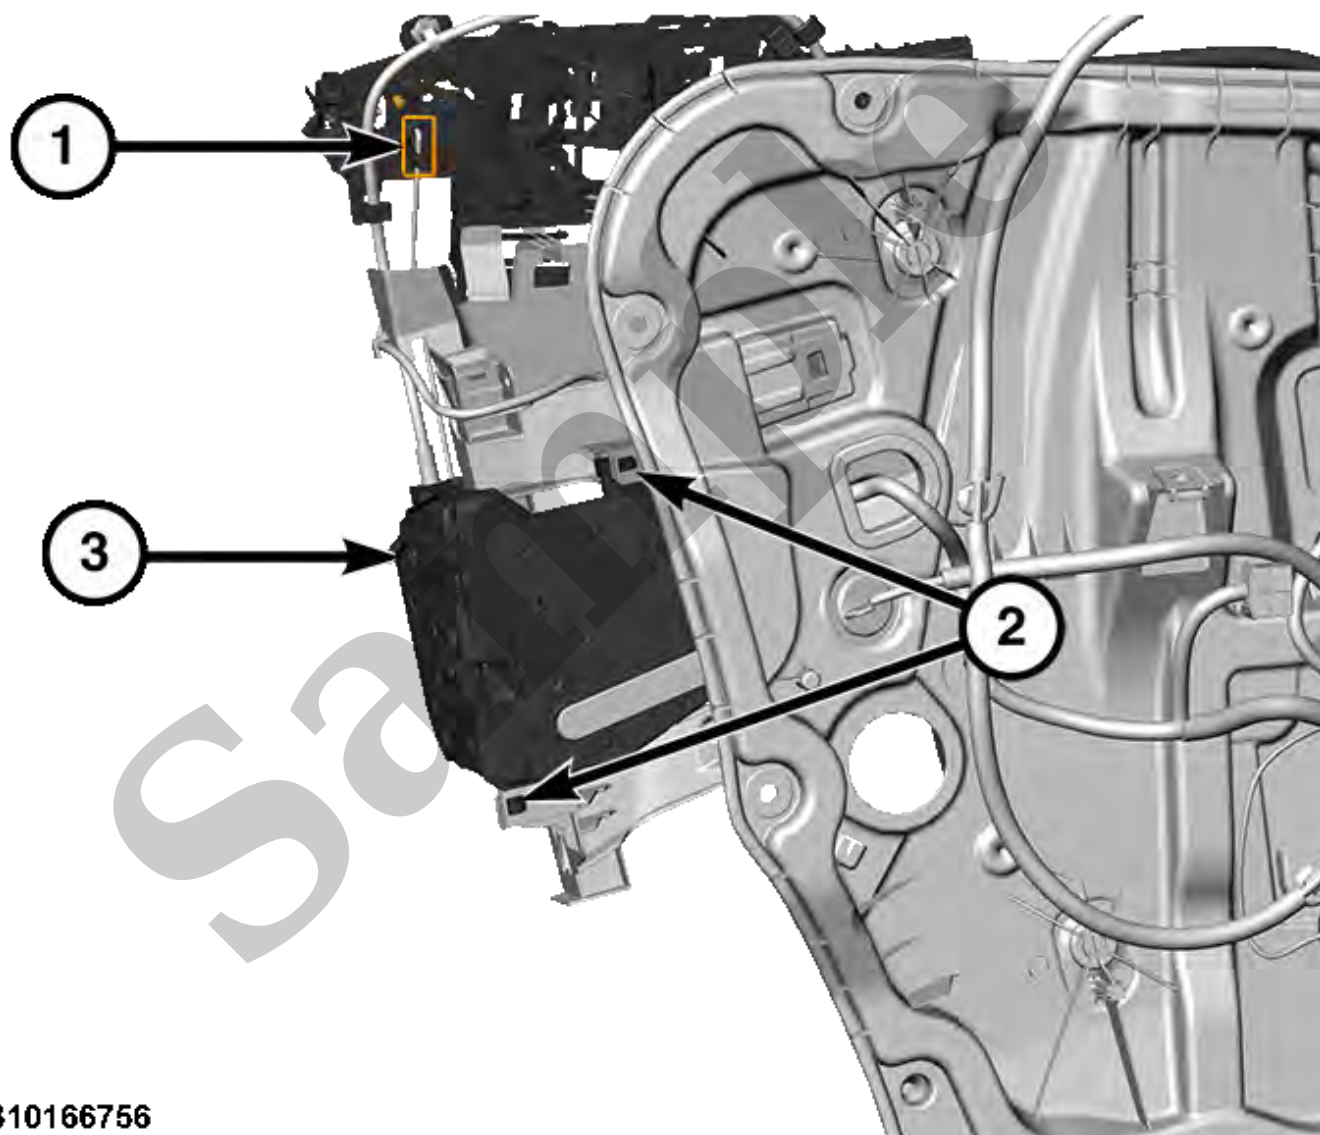

2310166756

1 - Door Lock Rod
2 - Latch Clips
3 - Door Latch Assembly

1 - Inner Belt Molding
2 - Glass Opening Flange

2. Using a trim stick or equivalent remove the inner belt molding from the glass opening flange.

INSTALLATION


Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- With firm hand pressure, push down until the belt molding is fully seated on the glass opening flange.

1 - Door Trim Interior Handle Bolt


2 - Trim Cover

1. Using a small flat bladed tool or equivalent, pull out on the interior door handle and remove the trim cover located in the door handle cavity.
2. Remove the door trim interior handle bolt.

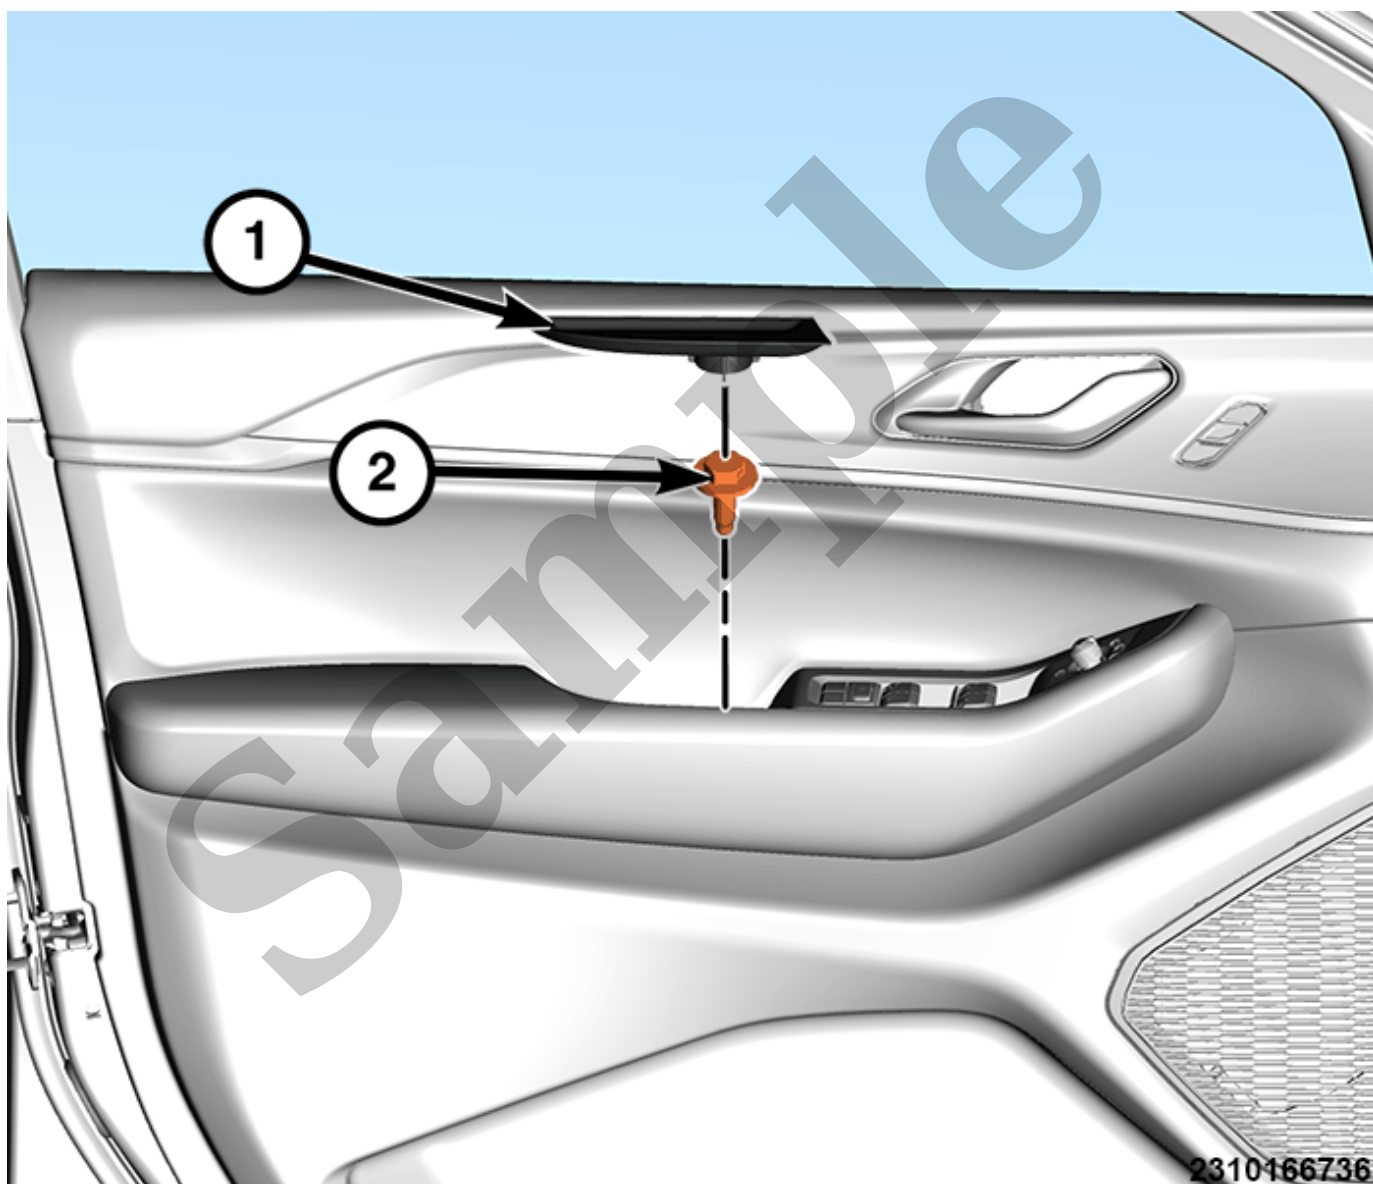

1 - Pull Cup Trim Mat


2 - Door Trim Pull Cup Bolt

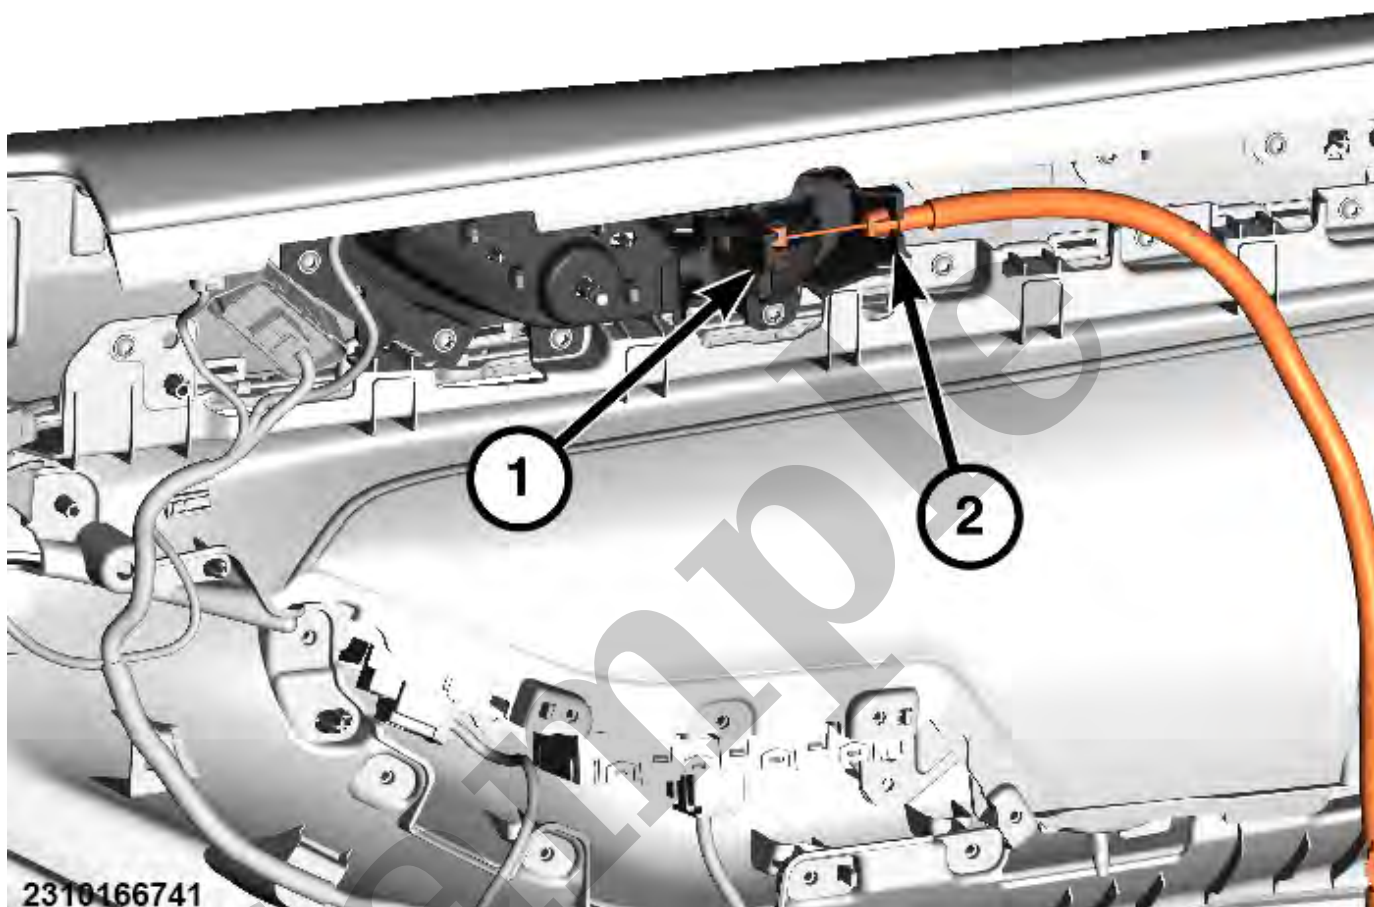

1 - Interior Handle Release Arm

2 - Interior Handle Release Cable

8. Disconnect the interior handle release cable and remove the door trim panel.

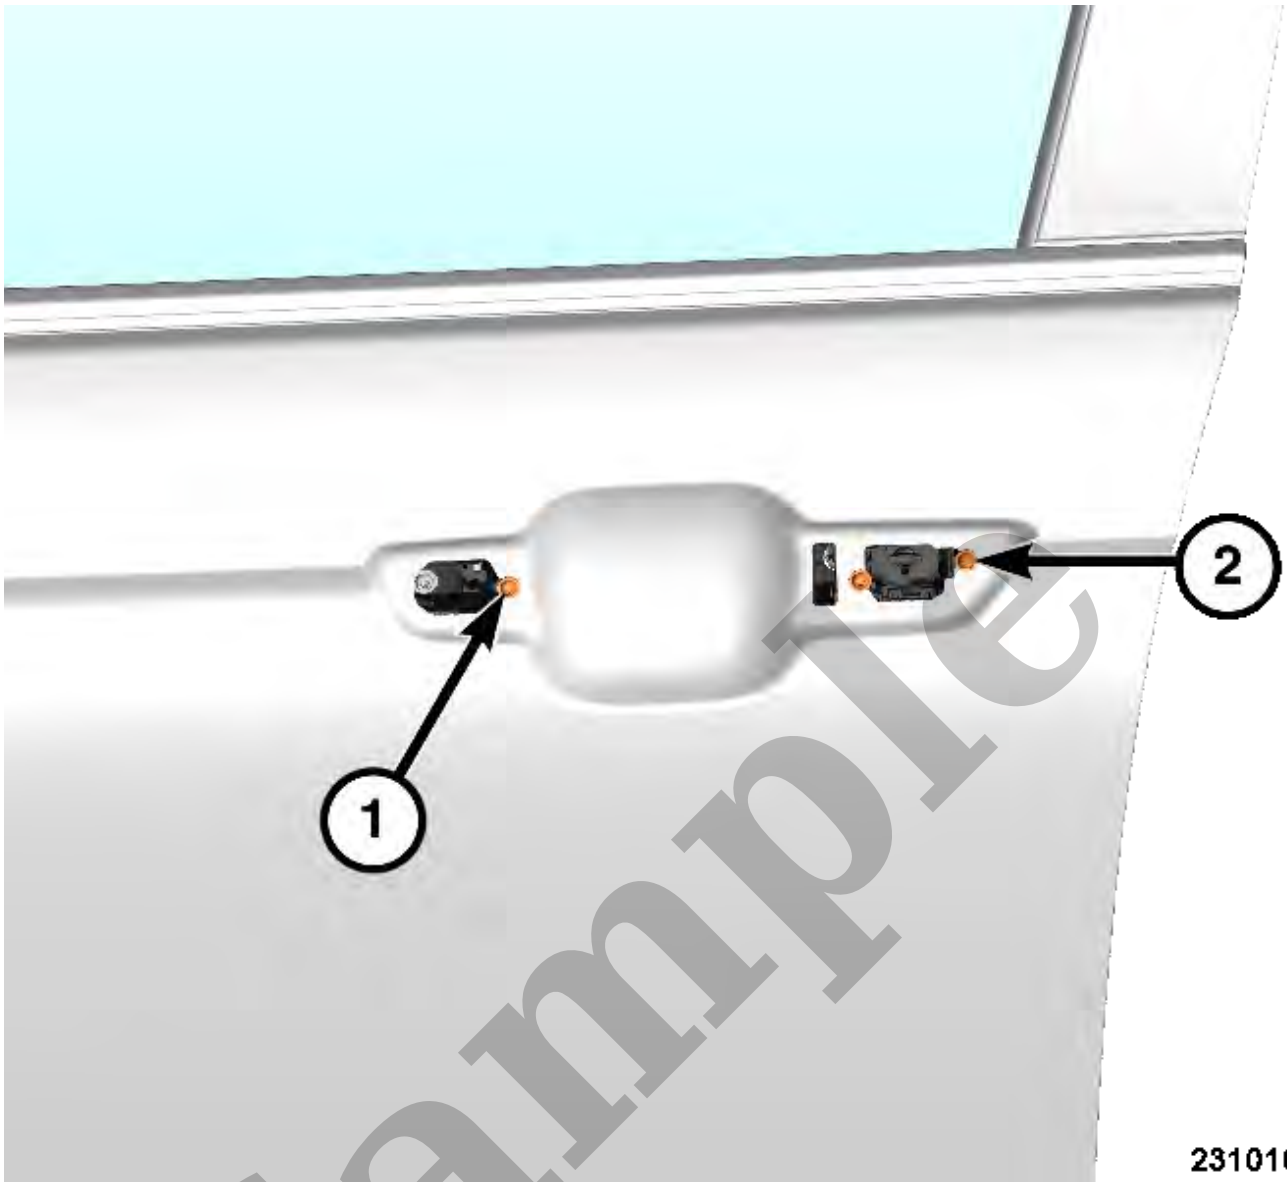


1 - Front Handle Support Bracket Screw

2 - Rear Handle Support Bracket Screws

5. Remove the front door trim panel ([Refer to Body/Door - Front/PANEL, Door Trim/Removal and Installation](#)).


1

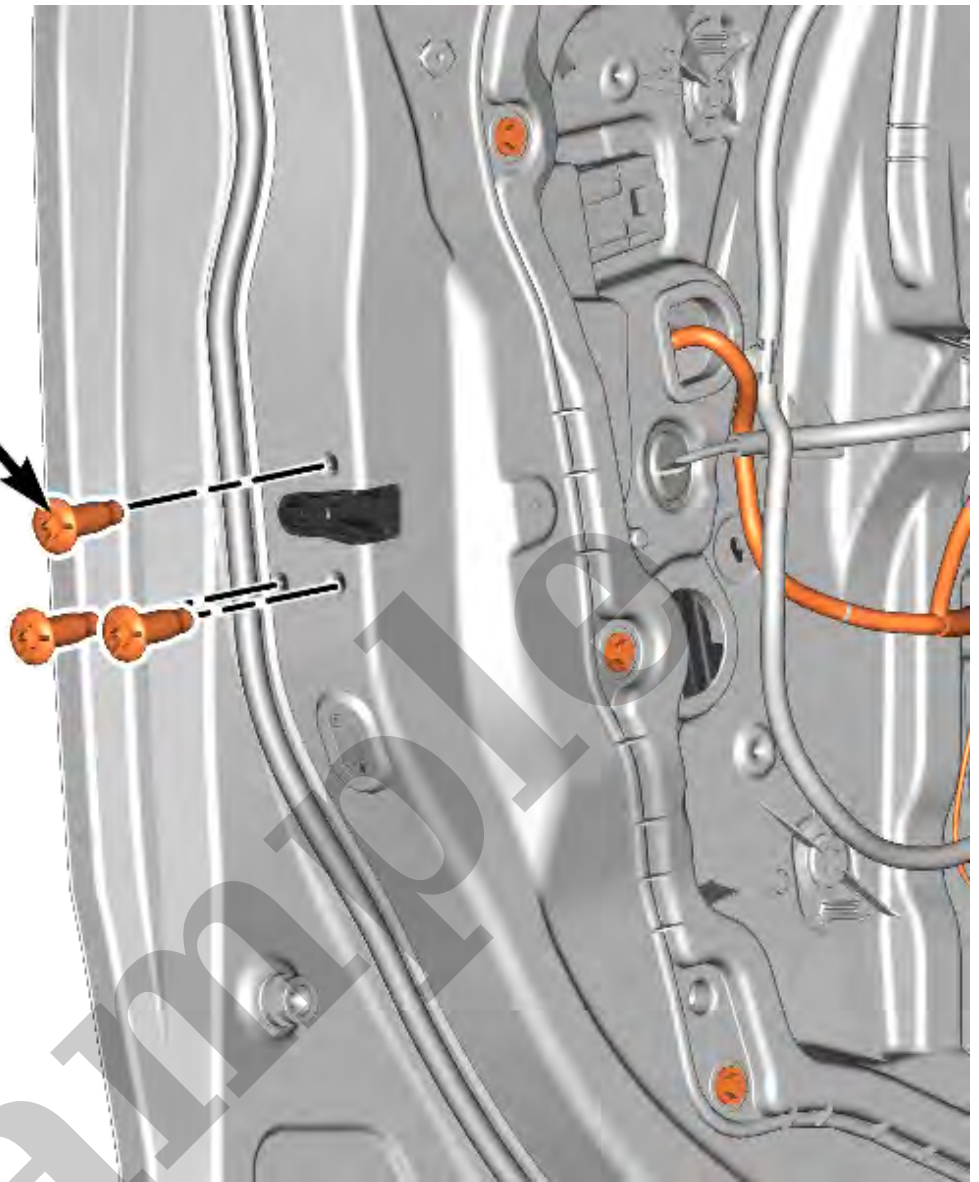

2310166750

1 - Front Door Latch Bolts

13. Remove the front door latch bolts.

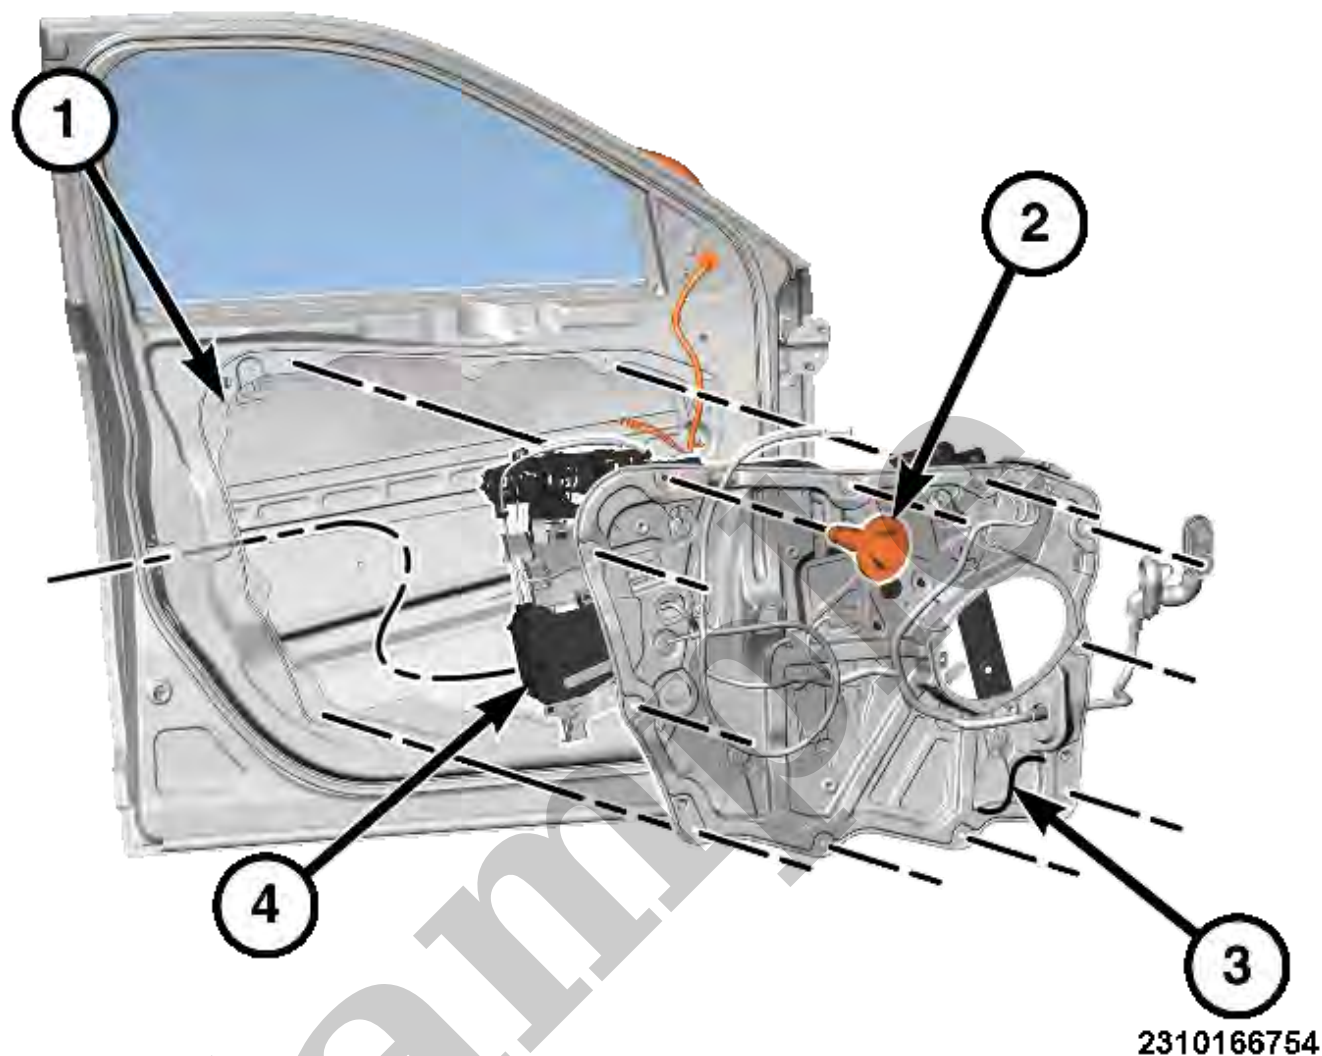

1 - Interior Door Panel

2 - Door Carrier Plate Bolts

3 - Carrier Plate

4 - Door Latch Assembly

18. Remove the door carrier plate bolts and separate the carrier plate from the door.

19. Move the carrier plate forward in the door and remove the door latch assembly from the door interior and remove the carrier plate.

INSTALLATION

YOUR CURRENT VEHICLE

Front Door Latch Striker

FRONT DOOR LATCH STRIKER

REMOVAL

