


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


1982 CHEVROLET Camaro OEM Service and Repair Workshop Manual

[Go to manual page](#)

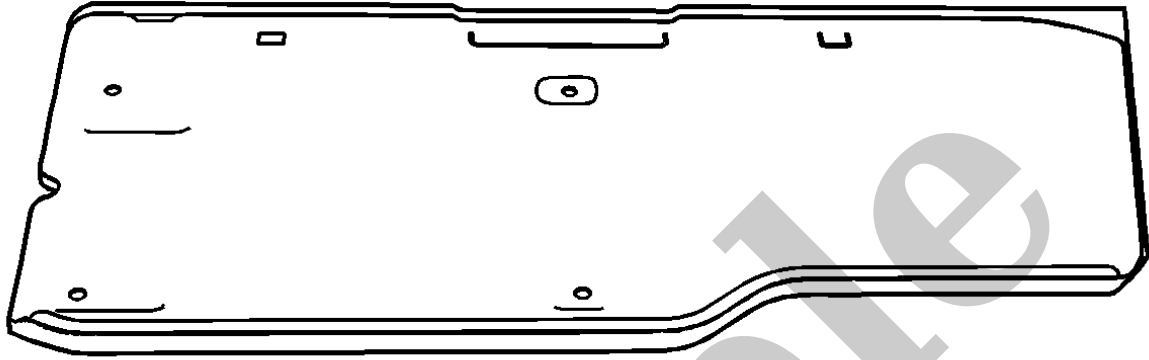

The floor panel is an LCM (Liquid Compression Mold) Composite and is bonded to the structure using panel bonding adhesive.

1. Disable the SIR system. Refer to [SIR Disabling and Enabling](#).
2. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#).
3. Remove all related panels and components.
4. Remove or reposition electrical components and wiring harness as necessary to avoid damage.
5. Remove wiring harness clips for transfer to new floor panel.

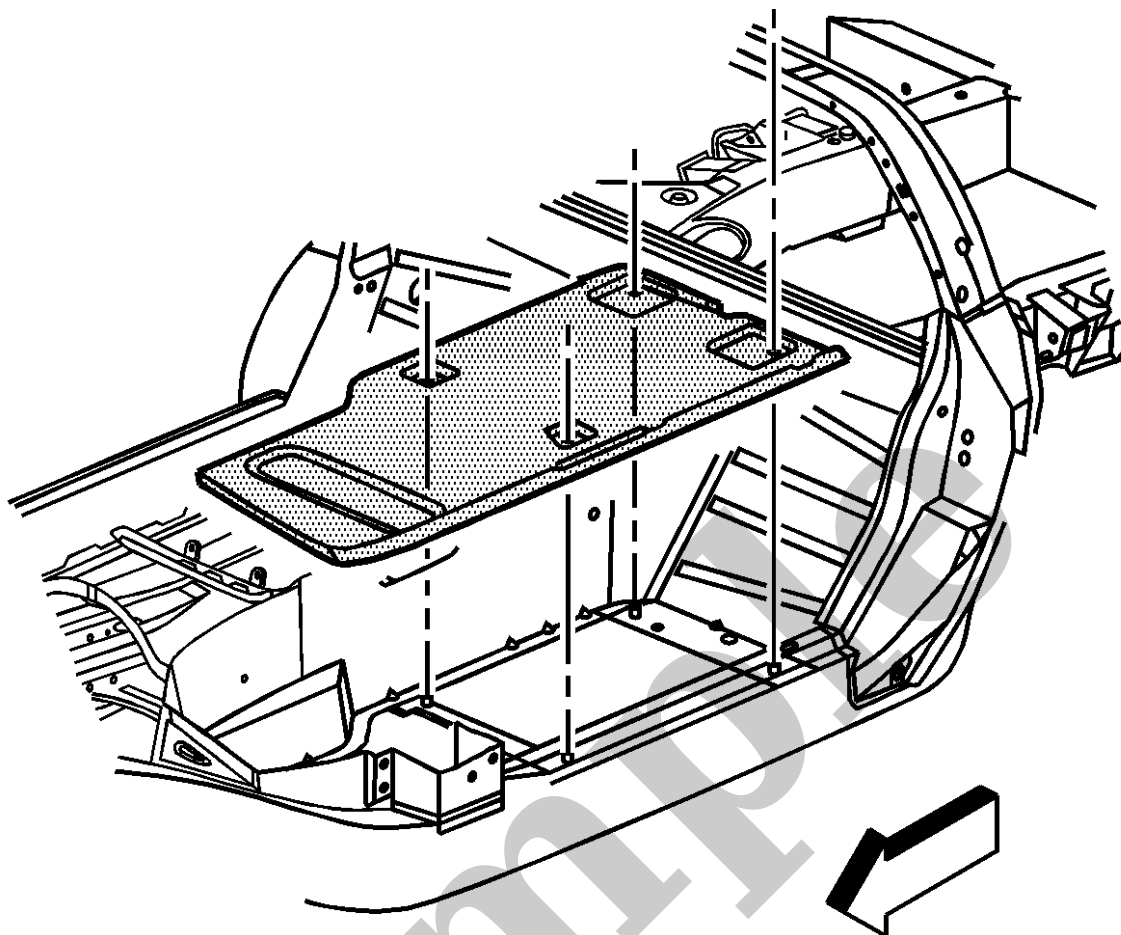


8.
Remove the floor panel from the vehicle.
9. Save any and all brackets, mounting studs, and accessories for transfer to the new floor.
10. Note the location and remove all remaining loose adhesive.
11. Inspect the structure and frame rails for damage.

Installation Procedure

1. Before applying adhesive dry fit the floor panel for proper fit and alignment.

2. **NOTE**

Note

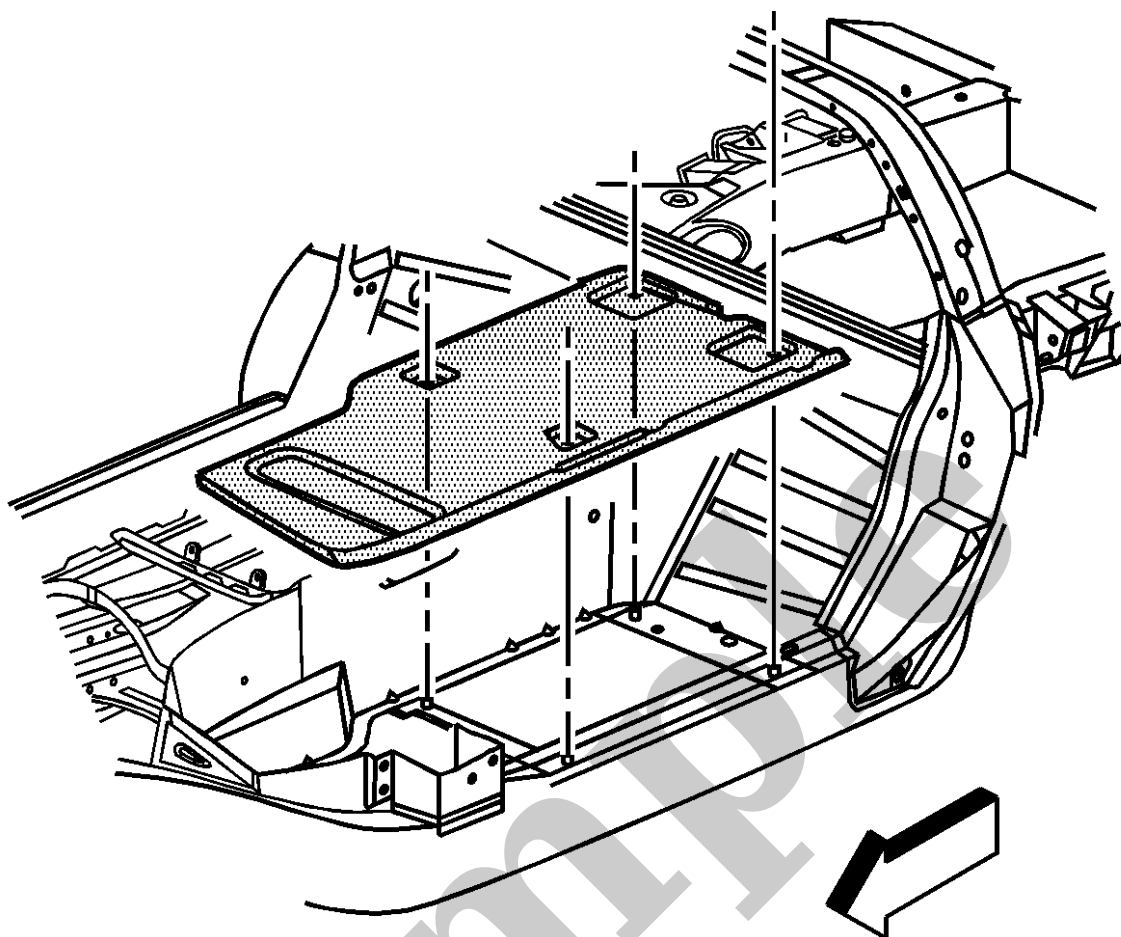

- 4.
- Install the floor panel to the vehicle.
5. Apply weight to the floor panel to set the adhesive.
6. Install the seat mounting nuts to set the adhesive at the cross brace.

7. **NOTE**

Note

Ensure that no adhesive is on the threads before installing nuts.

Smooth adhesive around perimeter of floor panel from underside of vehicle to form a consistent, leak-proof seal.

8. Clamp or mechanically fasten the front end panel into place as necessary.

YOUR CURRENT VEHICLE

Front Bumper Impact Bar Replacement

Front Bumper Impact Bar Replacement

Removal Procedure

1. **WARNING**

Warning

Refer to [Approved Equipment for Collision Repair Warning](#).

Disable the SIR system. Refer to [SIR Disabling and Enabling](#).

2. Disconnect the negative battery cable. Refer to [Battery Negative Cable Disconnection and Connection](#).
3. Remove all related panels and components.
4. Note the location and remove the sealers and anti-corrosion materials from the repair area. Refer to [Anti-Corrosion Treatment and Repair](#).