


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1982 FORD Thunderbird OEM Service and Repair Workshop Manual

[Go to manual page](#)

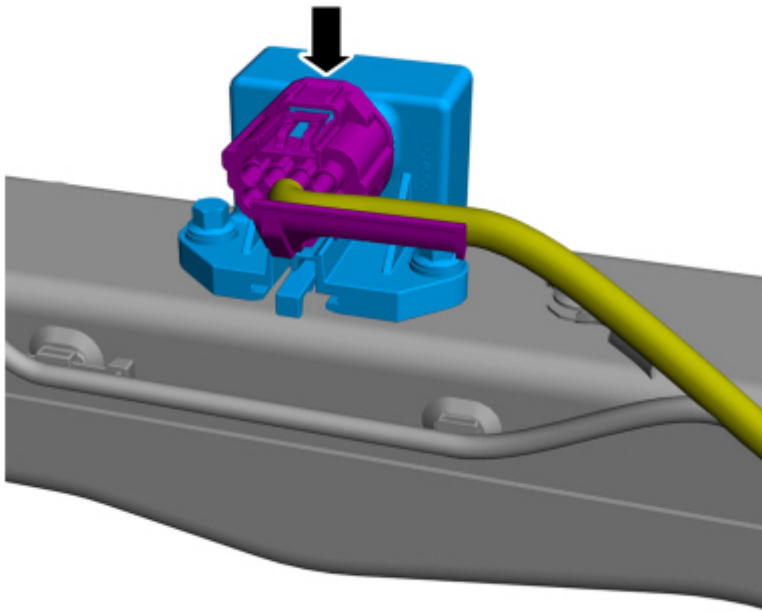

E337202

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

7. Cycle the ignition key and wait 3 seconds to pressurize the fuel system. Check for leaks before starting the engine.
8. When service on the fuel system is completed, start the engine and check for leaks.

Copyright © Ford Motor Company

Type 1


1. If servicing a liquid fuel tube quick release coupling, release the fuel system pressure.

Refer to: [Fuel System Pressure Release](#)(310-00B Fuel System - General Information - 3.3L Duratec-V6, General Procedures).

2. Disconnect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

- 3.

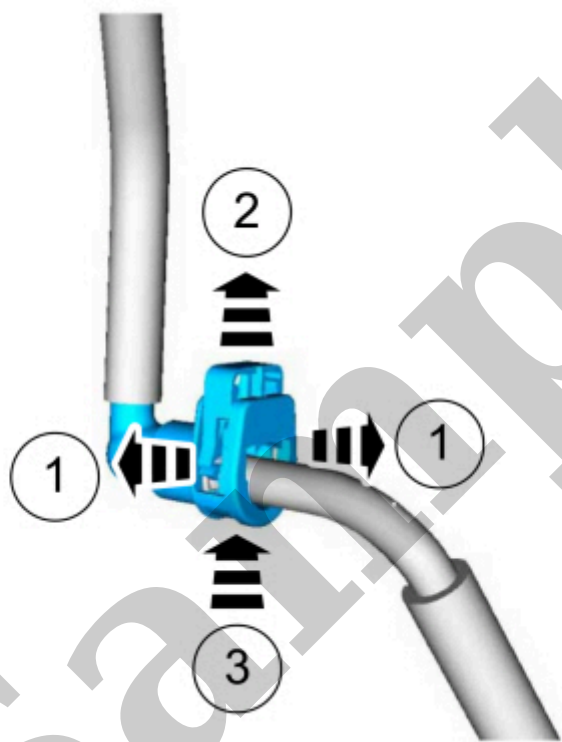

E151716


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

- 4.

2. NOTE

Make sure the retainer clip is fully seated and locked onto the tube by pulling on the quick connect coupling.

Press the retainer clip into the quick release coupling body until flush and the tabs are locked in place.

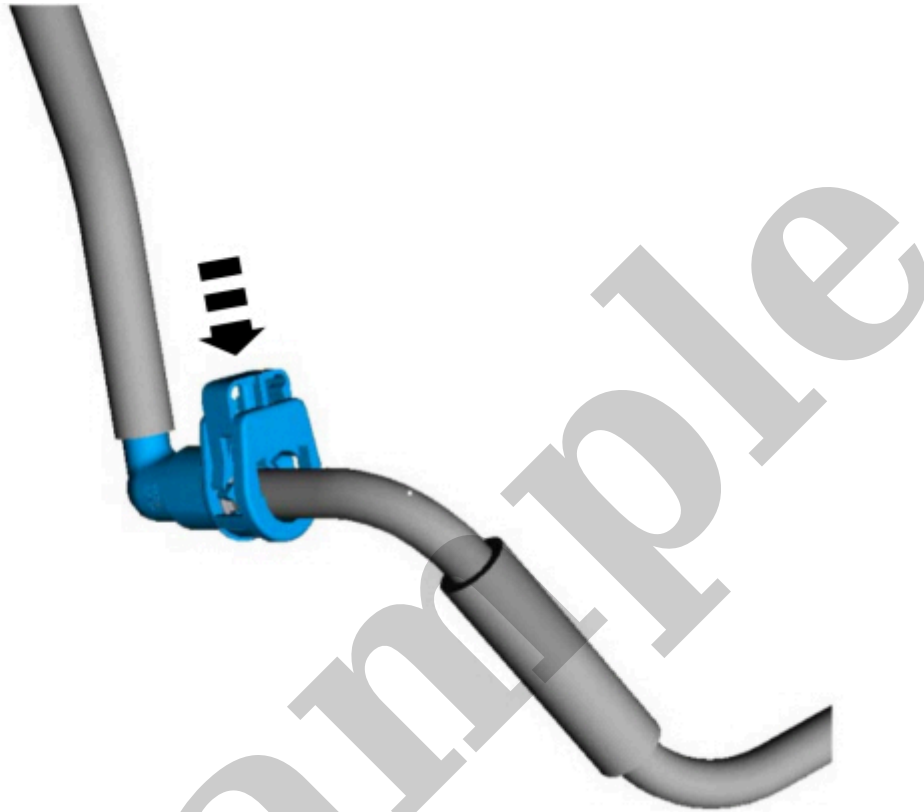

E151714

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


3. Connect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

Disconnect

NOTICE


When reusing liquid or vapor tube connections, make sure to use compressed air to remove any foreign material from the connector retaining clip area before separating from the tube or damage to the tube or connector retaining clip may occur.

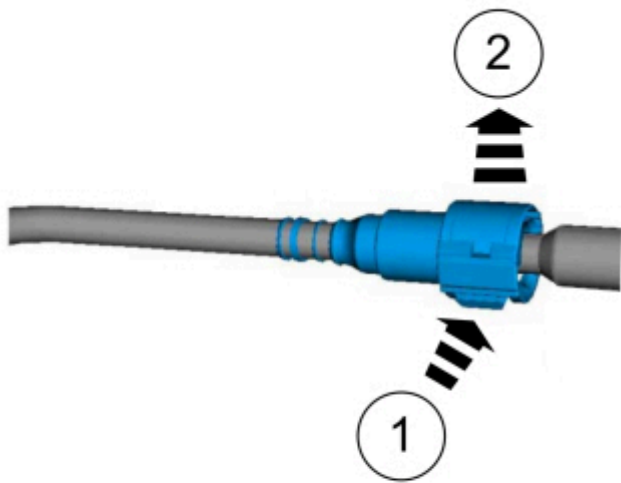

E151704

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4.

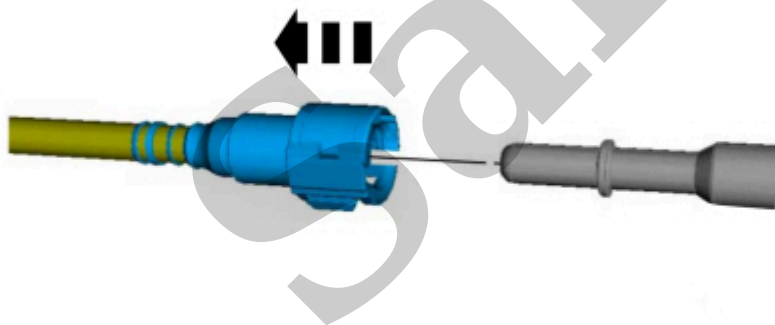

E151705

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Connect

3. Connect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

Disconnect

NOTICE

When reusing liquid or vapor tube connections, make sure to use compressed air to remove any foreign material from the connector retaining clip area before separating from the tube or damage to the tube or connector retaining clip may occur.

NOTICE

Fuel injection equipment is manufactured to very precise tolerances and fine clearances. It is essential that absolute cleanliness is observed when working with these components or component damage may occur. Always install blanking plugs to any open orifices or tubes.

NOTICE

Do not use any tools. The use of tools may cause a deformity in the clip components which may cause fuel leaks.

NOTE

Type 3


1. If servicing a liquid fuel tube quick release coupling, release the fuel system pressure.

Refer to: [Fuel System Pressure Release](#)(310-00B Fuel System - General Information - 3.3L Duratec-V6, General Procedures).

2. Disconnect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

3.

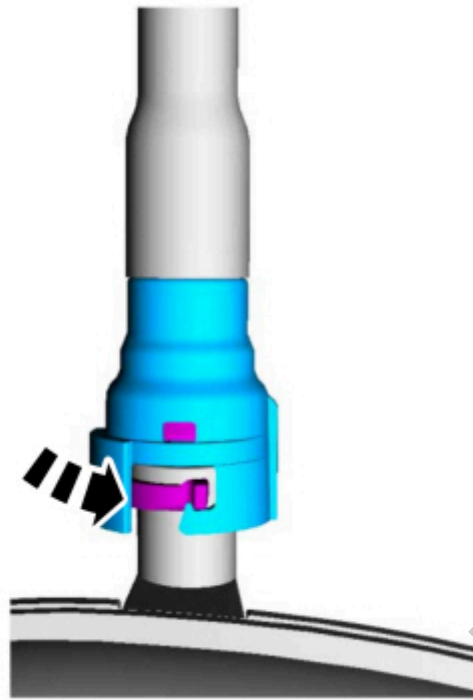

E151708

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Connect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

Disconnect

NOTICE


When reusing liquid or vapor tube connections, make sure to use compressed air to remove any foreign material from the connector retaining clip area before separating from the tube or damage to the tube or connector retaining clip may occur.

NOTICE

Fuel injection equipment is manufactured to very precise tolerances and fine clearances. It is essential that absolute cleanliness is observed when working with these components or component damage may occur. Always install blanking plugs to any open orifices or tubes.

NOTICE

Do not use any tools. The use of tools may cause a deformity in the clip components which may cause fuel

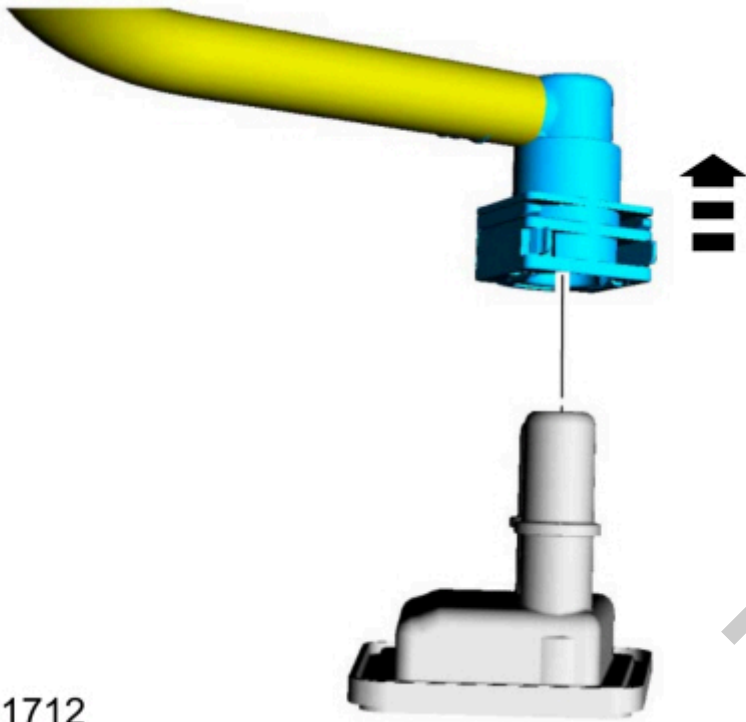


E151712

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


Connect

1.

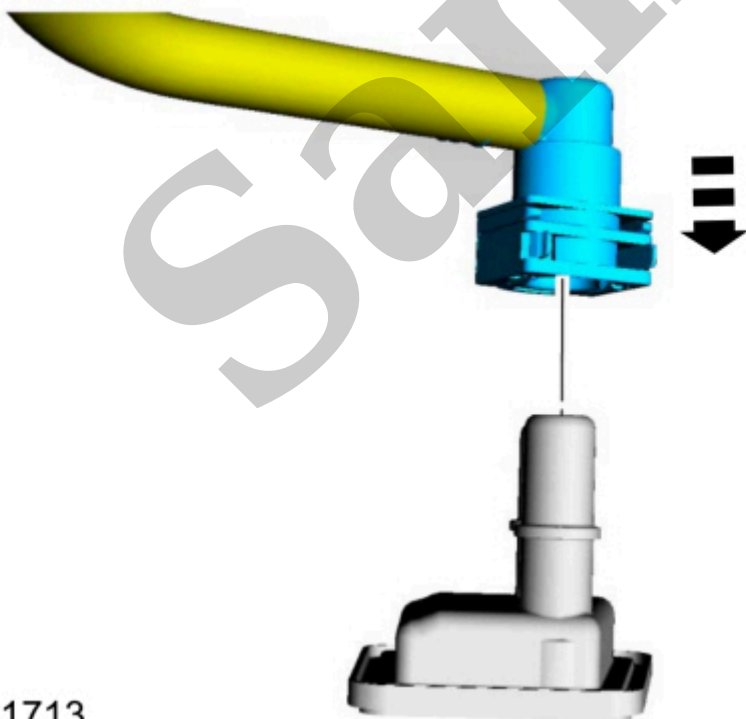

E151713


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

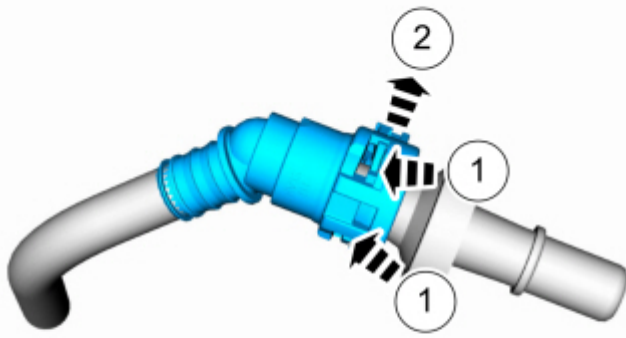

E169697

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4.

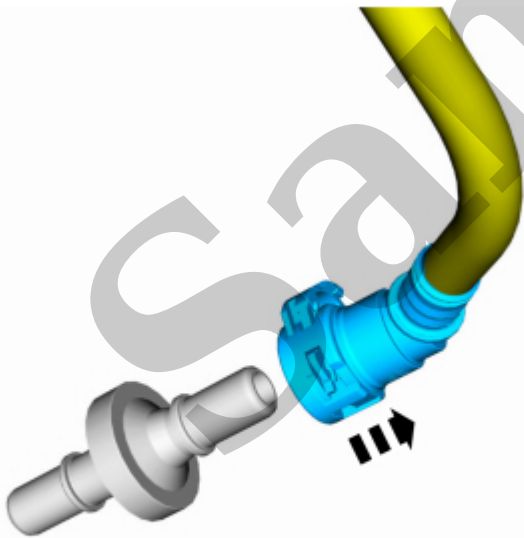

E169698

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Connect

Do not use any tools. The use of tools may cause a deformity in the clip components which may cause fuel leaks.

NOTE

Type 6


1. If servicing a liquid fuel tube quick release coupling, release the fuel system pressure.

Refer to: [Fuel System Pressure Release](#)(310-00B Fuel System - General Information - 3.3L Duratec-V6, General Procedures).

2. Disconnect the battery ground cable.

Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).

3. Press the tabs of the rear retainer clip and pull it to the outward position.

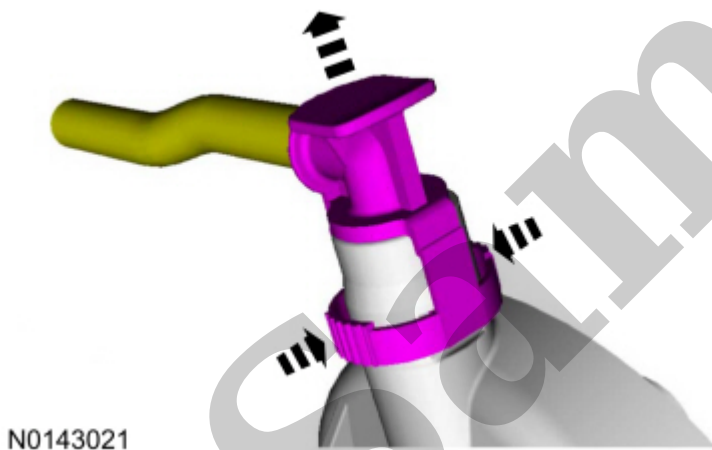

N0143021

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

- 4.