


# Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1987 VOLVO 480 OEM Service and Repair Workshop Manual

Go to manual page

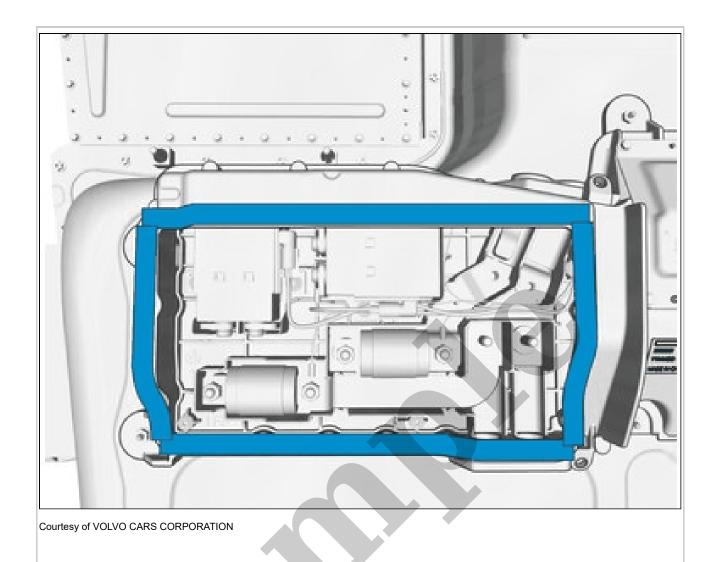


Remove the protective film.

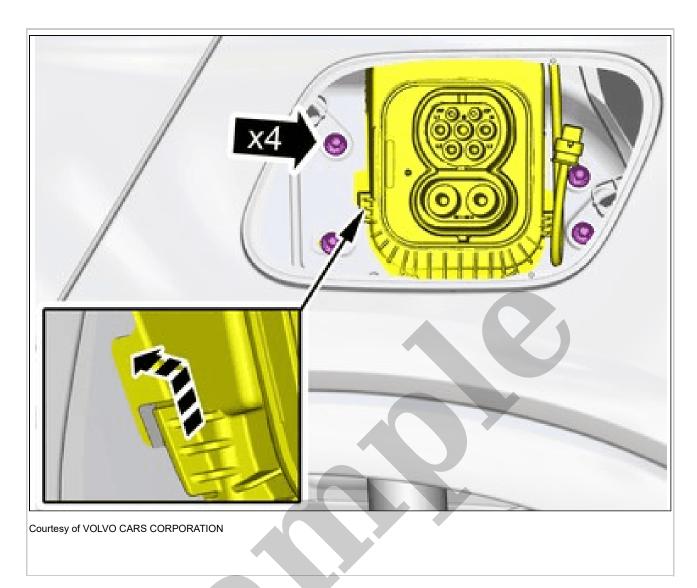


Remove the screws. Release the catches. Fold marked part aside.

Torque: M5, 5Nm

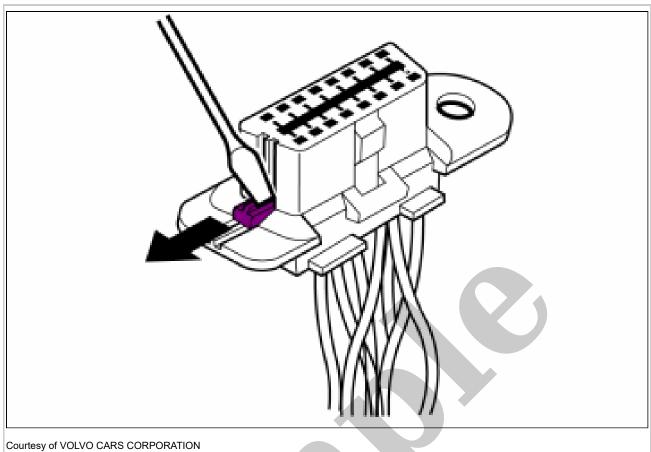

Release the catch.

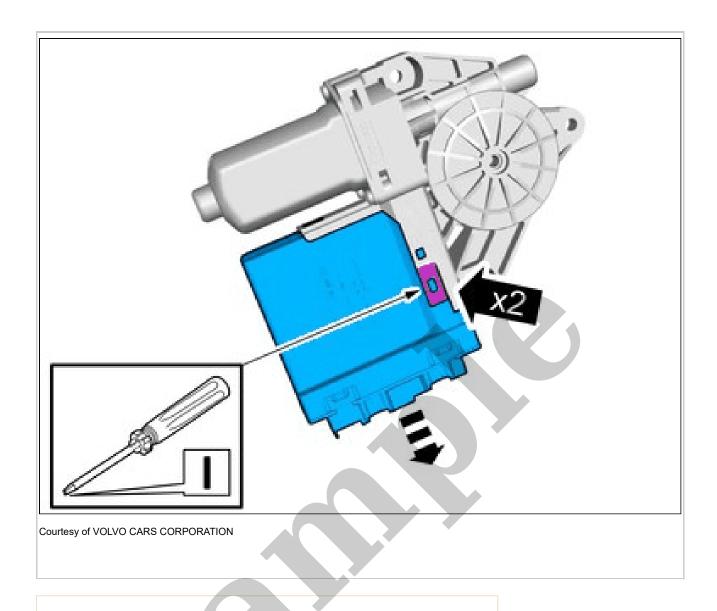

**CAUTION:** Be careful not to damage the catches.

Release the catches.
Remove the marked part. **Use:** Electrician's screwdriver


## DRIVER DOOR MODULE > DRIVER DOOR MODULE (DDM) [2018-2022] > INSTALLATION

To install, reverse the removal procedure.


Perform power window motor, initiation. Refer to: DOOR WINDOW MOTOR INITIALIZATION

**NOTE:** This step is only necessary when installing a new component.


Order and download the appropriate software according to: VIDA/Software/Hardware Changes

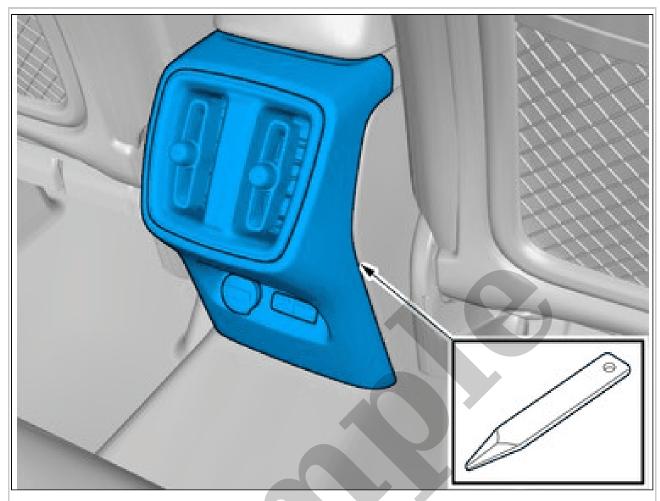

Courtesy of VOLVO CARS CORPORATION

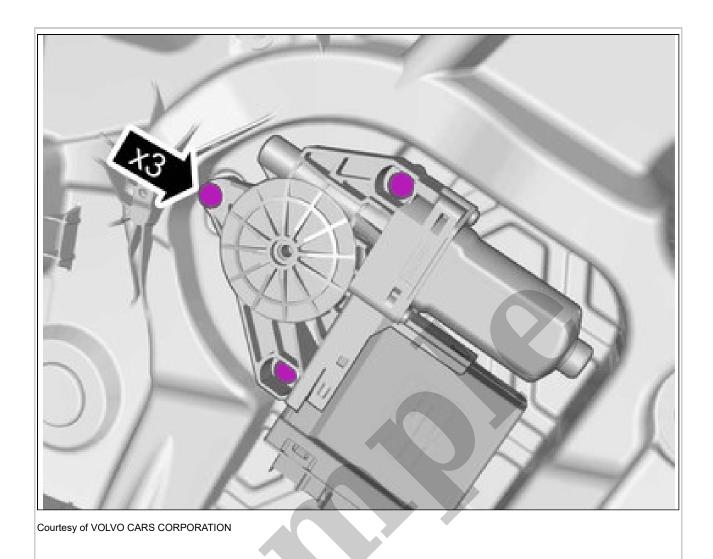

Remove the screws.

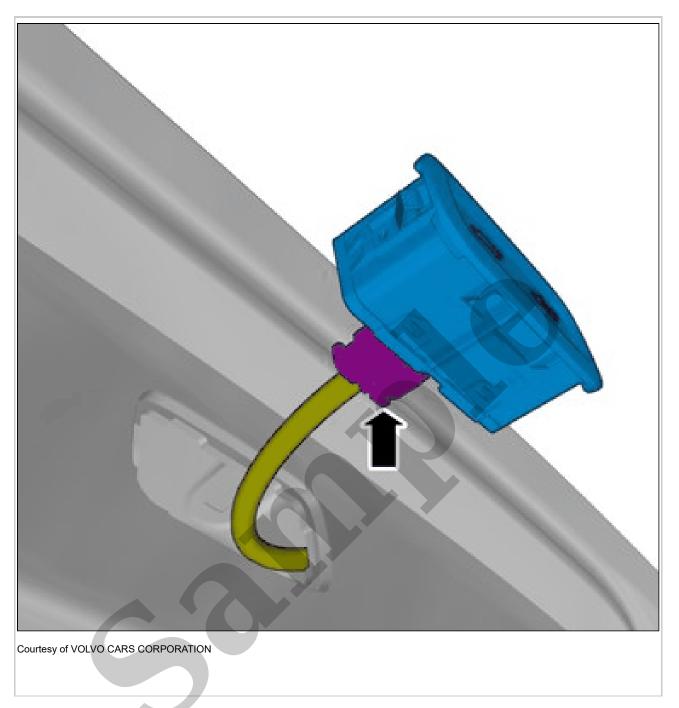

Disconnect the connector.

## POWER OPERATED TAILGATE SWITCH > POWER OPERATED TAILGATE SWITCH [2018-2022] > INSTALLATION

To install, reverse the removal procedure.

### REAR DOOR MODULE RDM > REAR DOOR MODULE RDM [2018-2022] > REMOVAL

Set the vehicle to Inactive mode, described in user mode. Refer to: USAGE MODE Remove panel side door rear. Refer to: PANEL REAR DOOR


#### **APPLIES TO THE PASSENGER SIDE**

VIDA/Software/All/PDM Reload

Perform power window motor, initiation. Refer to: DOOR WINDOW MOTOR INITIALIZATION

## ROTARY SWITCH, SUN ROOF > ROTARY SWITCH, SUN ROOF [2018-2022] > REMOVAL

Set the vehicle to Inactive mode, described in user mode. Refer to: USAGE MODE

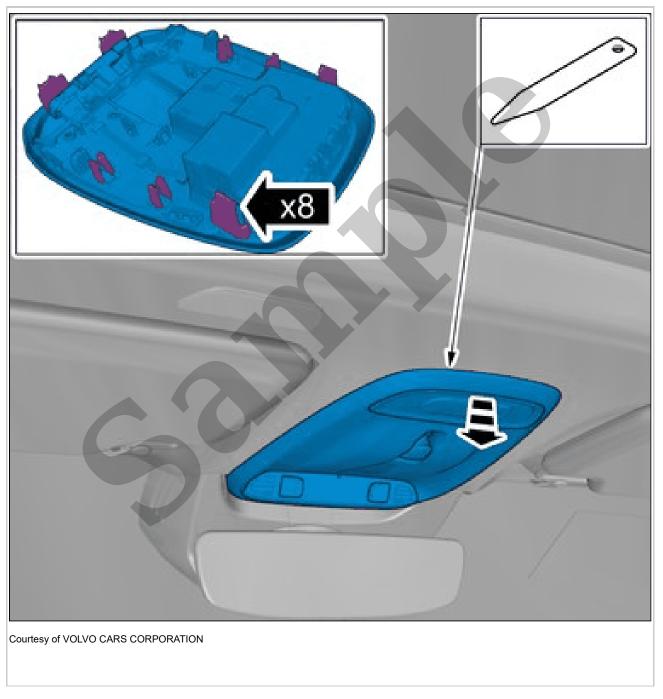

Remove the marked part.



**NOTE:** The graphic shows the back of the component before removal.