


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1989 FORD Fiesta 3 Doors OEM Service and Repair Workshop Manual

[Go to manual page](#)

Sand to remove the e-coat from the mating surface and clean.

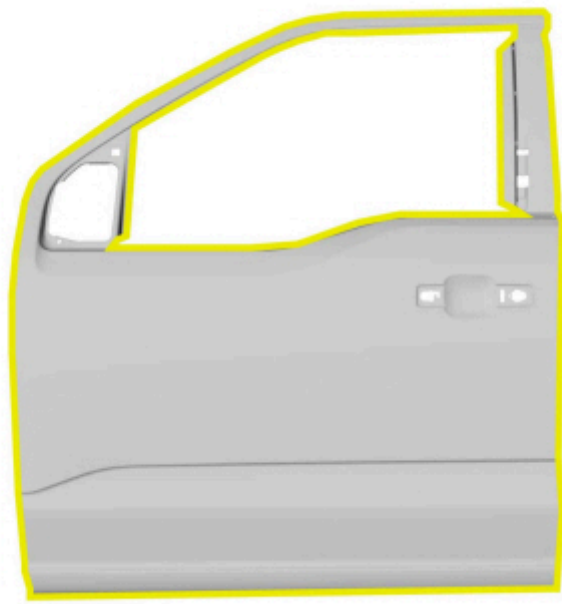


E329033

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. Apply adhesive.

 Material : Metal Bonding Adhesive / TA-1, TA-1-B, 3M™ 08115, LORD Fusor® 108B, Henkel Teroson EP 5055



E329036

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Install the door on the vehicle.




E329037

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

7. Check the door panel for proper fit and alignment.

Use the General Equipment: 6.5 mm Drill Bit

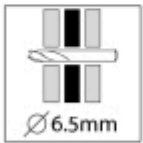

E329039

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

10. **NOTE**


SPR (self-piercing rivet) fasteners may not be placed directly over original SPR (self-piercing rivet) location. They must be placed adjacent to original location matching original quantity.

NOTE

Blind rivet or solid rivet fasteners may be used in place of SPR (self-piercing rivet) fasteners after enlarging holes to 6.5 mm.

Install fasteners.



| Item | SPR (self-piercing rivet) Number | SPR (self-piercing rivet) Code | Henrob® Car-O-Liner®, CMO®, Chief®, Spanesi® Wielande and Schill® Mandrel | Pro-Spot® Mandrel | Blind Rivet | Solid Rivet | Rivnut® |
|------|----------------------------------|--------------------------------|---|-------------------|-------------|-------------|---------|
| | | | | | | | |

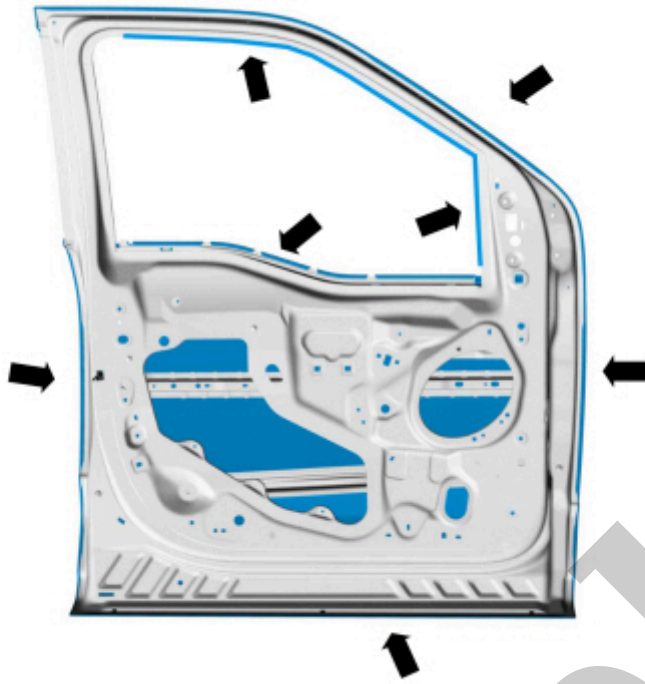

E329769

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

 12. Sand and clean for primer application.

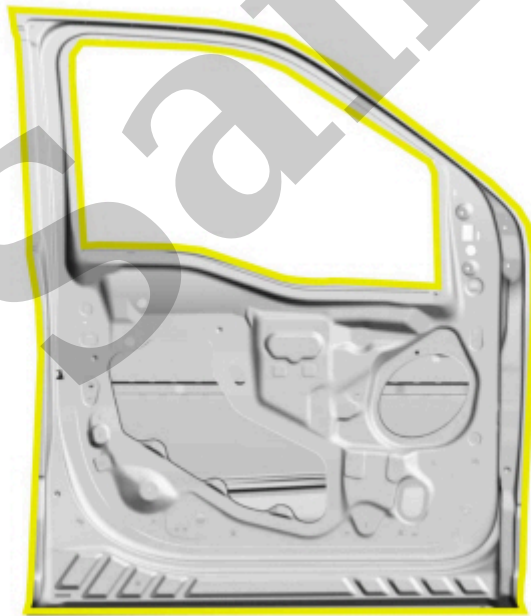

E329041

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

13. Apply a Ford approved primer to the flange area.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

15. Refinish the door shell flange using a Ford approved paint system and typical refinishing techniques.


16. Install the door.

Refer to: [Front Door - Regular Cab/SuperCrew](#)(501-03 Body Closures, Removal and Installation).

Refer to: [Front Door - SuperCab](#)(501-03 Body Closures, Removal and Installation).

17. Apply NVH (noise, vibration and harshness) foam as indicated.

Material : Flexible Foam Repair / 3M™ 08463, LORD Fusor® 121

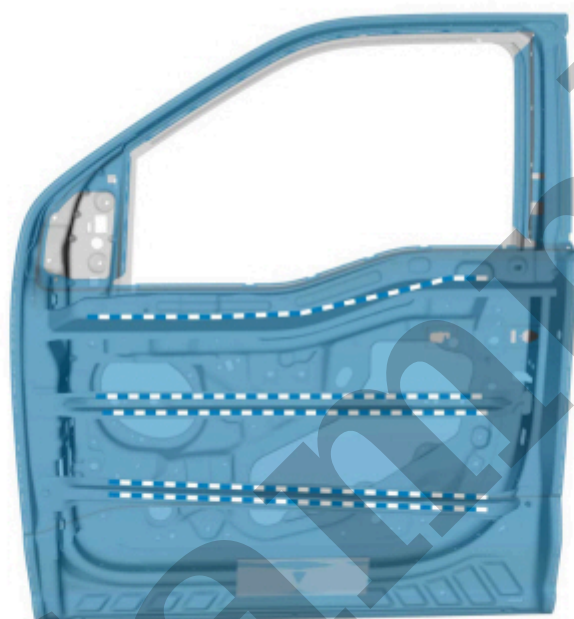

E329066

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

18. Install a butyl NVH (noise, vibration and harshness) patch as indicated (obtain locally).

21. Install the exterior door handle.

Refer to: [Exterior Front Door Handle](#)(501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

22. Install the exterior mirror.

Refer to: [Exterior Mirror - Vehicles With: Long Arm Mirrors](#)(501-09 Rear View Mirrors, Removal and Installation).

Refer to: [Front Door - SuperCab](#)(501-03 Body Closures, Removal and Installation).

23. Install the front door window glass.

Refer to: [Front Door Window Glass](#)(501-11 Glass, Frames and Mechanisms, Removal and Installation).

24. Install the exterior door trim.

Refer to: [Front Door Upper Moulding](#)(501-08 Exterior Trim and Ornamentation, Removal and Installation).

25. Align the door as necessary.

Refer to: [Front Door Alignment - Regular Cab/SuperCrew](#)(501-03 Body Closures, General Procedures).

Refer to: [Front Door Alignment - SuperCab](#)(501-03 Body Closures, General Procedures).

Copyright © Ford Motor Company

Refer to: [High Voltage System Health and Safety Precautions - Overview](#)(100-00 General Information, Description and Operation).

NOTE

LH (left-hand) side shown, RH (right-hand) side similar.

2. Inspect the door hinges for excessive wear or damage. Install new or rebuild as necessary.



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Remove the exterior door handle.

Refer to: [Exterior Rear Door Handle - SuperCrew](#)(501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

4. Remove the door window glass.




E329045

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

9. Remove the SPR (self-piercing rivet) fasteners as indicated.

Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer

Use the General Equipment: Belt Sander

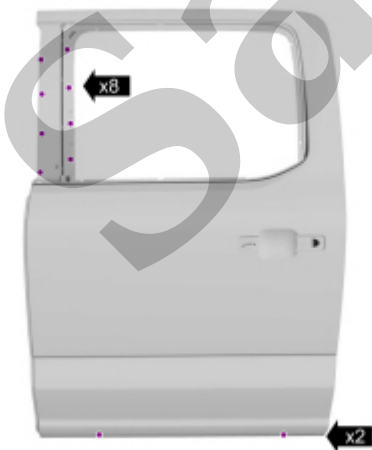

E329046

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

10. Carefully grind the

outer layer only

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

12. **NOTE**

The use of heat may aid in door panel removal.

Remove the door skin outer panel.

Use the General Equipment: Hot Air Gun



E329049

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

13. Remove the remaining portion of the door outer panel hem flange.

Use the General Equipment: Knife

Use the General Equipment: Hot Air Gun