

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1989 NISSAN Bluebird Hatchback OEM Service and Repair Workshop Manual

[Go to manual page](#)

6. PERFORM SELF-DIAGNOSIS (2)

 With CONSULT

1. Connect 12V battery negative terminal.
2. Power switch OFF to ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to **READY**.

3. Power switch OFF and disconnect CONSULT from data link connector.
4. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

5. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to **READY**.

6. Erase self-diagnosis result for “BRAKE”.
7. Power switch OFF and disconnect CONSULT from data link connector.
8. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

9. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to **READY**.

10. Perform self-diagnosis for “BRAKE”.

Is DTC “B14E0-13” detected?

YES>>

[GO TO 7.](#)

NO>>

INSPECTION END

7. CHECK ELECTRICALLY-DRIVEN INTELLIGENT BRAKE UNIT POWER SUPPLY AND GROUND CIRCUIT

1. Power switch OFF and disconnect CONSULT from data link connector.
2. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:

Never operate the vehicle.

3. Disconnect 12V battery negative terminal.
4. Disconnect electrically-driven intelligent brake unit harness connector.
5. Check the electrically-driven intelligent brake unit power supply and ground circuit. Refer to [Diagnosis Procedure](#).

Is the inspection result normal?

YES>>

[GO TO 8.](#)

NO>>

Repair / replace harness, connector, terminal, fuse, or fusible link. [GO TO 8.](#)

8. PERFORM SELF-DIAGNOSIS (3)

 With CONSULT

1. Power switch OFF to ON without depressing the brake pedal.

CAUTION:

Never set the vehicle to READY.

2. Power switch OFF and disconnect CONSULT from data link connector.
3. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:

Never operate the vehicle.

4. Power switch ON without depressing the brake pedal.

CAUTION:

Never set the vehicle to READY.

5. Erase self-diagnosis result for “BRAKE”.
6. Power switch OFF and disconnect CONSULT from data link connector.
7. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:

Never operate the vehicle.

8. Power switch ON without depressing the brake pedal.

CAUTION:

Never set the vehicle to READY.

9. Perform self-diagnosis for “BRAKE”.

Is DTC “B14E0-13” detected?

YES>>

[GO TO 9.](#)

NO>>

INSPECTION END

9. CHECK WHEEL SENSOR HARNESS

1. Power switch OFF and disconnect CONSULT from data link connector.
2. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

3. Disconnect 12V battery negative terminal.
4. Disconnect electrically-driven intelligent brake unit harness connector.
5. Disconnect front left wheel sensor harness connector.
6. Check the continuity between electrically-driven intelligent brake unit harness connector and front left wheel sensor harness connector.
 - Measurement connector and terminal for power supply circuit

Electrically-driven intelligent brake unit		Front left wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
B64	4	B176	1	Existed

- Measurement connector and terminal for signal circuit

Electrically-driven intelligent brake unit		Front left wheel sensor		Continuity
Connector	Terminal	Connector	Terminal	
B64	21	B176	2	Existed

Is the inspection result normal?

YES>>

[GO TO 12.](#)

NO>>

Repair / replace harness or connector. [GO TO 10.](#)

10. PERFORM SELF-DIAGNOSIS (4)

 With CONSULT

1. Connect electrically-driven intelligent brake unit harness connector.
2. Connect front left wheel sensor harness connector.
3. Connect 12V battery negative terminal.
4. Power switch OFF to ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

5. Power switch OFF and disconnect CONSULT from data link connector.

6. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

7. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

8. Erase self-diagnosis result for "BRAKE".

9. Power switch OFF and disconnect CONSULT from data link connector.

10. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

11. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

12. Perform self-diagnosis for "BRAKE".

Is DTC "B14E0-13" detected?

YES>>

[GO TO 11.](#)

NO>>

INSPECTION END

11. CHECK WHEEL SENSOR OUTPUT SIGNAL

1. Disconnect 12V battery negative terminal.

2. Disconnect electrically-driven intelligent brake unit harness connector.

3. Disconnect front left wheel sensor harness connector.

4. Connect ABS active wheel sensor tester (SST: J-45741-A) to front left wheel sensor using appropriate adapter.

5. Turn the ABS active wheel sensor tester power switch ON.



NOTE:

The green POWER indicator should illuminate. If the POWER indicator does not illuminate, replace the battery in the ABS active wheel sensor tester before proceeding.

6. Spin the wheel of the vehicle by hand and observe the red SENSOR indicator on the ABS active wheel sensor tester. The red SENSOR indicator should flash ON and OFF to indicate an output signal.



NOTE:

If the red SENSOR indicator illuminates but does not flash, reverse the polarity of the tester leads and retest.

Does the ABS active wheel sensor tester detect a signal?

YES>>

Replace the electrically-driven intelligent brake unit. Refer to [ELECTRICALLY-DRIVEN INTELLIGENT BRAKE UNIT : Removal & Installation](#).

NO>>

[GO TO 12.](#)

12. REPLACE WHEEL SENSOR

1. Replace the front left wheel sensor. Refer to [Removal and Installation](#).
2. Connect electrically-driven intelligent brake unit harness connector.
3. Connect 12V battery negative terminal.
4. Power switch OFF to ON without depressing the brake pedal.

CAUTION:

Never set the vehicle to READY.

5. Power switch OFF and disconnect CONSULT from data link connector.
6. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:

Never operate the vehicle.

7. Power switch ON without depressing the brake pedal.

CAUTION:

Never set the vehicle to READY.

8. Erase self-diagnosis result for "BRAKE".
9. Power switch OFF and disconnect CONSULT from data link connector.
10. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:

Never operate the vehicle.

11. Power switch ON without depressing the brake pedal.

CAUTION:

Never set the vehicle to READY.

12. Perform self-diagnosis for "BRAKE".

Is DTC "B14E0-13" detected?

YES>>

Replace the electrically-driven intelligent brake unit. Refer to [Removal and Installation](#).

NO>>

INSPECTION END

Sample

DTC DETECTION LOGIC

DTC No.		CONSULT screen terms	DTC detection condition		
B14E0	1C	Wheel sensor	1	Diagnosis condition	Power switch is ON.
				Signal (terminal)	Front left wheel sensor signal
				Threshold	When front left wheel sensor power supply voltage is 6.7 V or less.
				Diagnosis delay time	1 second or less
			2	Diagnosis condition	Power switch is ON.
				Signal (terminal)	Front left wheel sensor signal
				Threshold	When an open circuit is detected in front left wheel sensor circuit (power supply line).
				Diagnosis delay time	1 second or less
			3	Diagnosis condition	Power switch is ON.
				Signal (terminal)	Front left wheel sensor signal
				Threshold	When short circuit to ground side is detected in front left wheel sensor circuit (power supply line).
				Diagnosis delay time	1 second or less

POSSIBLE CAUSE

- Harness or connector
- Front left wheel sensor
- Electrically-driven intelligent brake unit
- Electrically-driven intelligent brake unit power supply

FAIL-SAFE

The following functions are suspended.

- Cooperative regenerative brake function
- e-Step function

1. PRECONDITIONING


If “Confirmation Procedure” has been previously conducted, always power switch OFF, get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

>>

[GO TO 2.](#)

2. CHECK DTC DETECTION

 With CONSULT

1. Power switch OFF to ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

2. Power switch OFF and disconnect CONSULT from data link connector.
3. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

4. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

5. Erase self-diagnosis result for “BRAKE”.
6. Power switch OFF and disconnect CONSULT from data link connector.
7. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

8. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

9. Perform self-diagnosis for “BRAKE”.

Is DTC “B14E0-1C” detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

Sample