


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1990 MAZDA 323 (BF) Station Wagon OEM Service and Repair Workshop Manual

[Go to manual page](#)

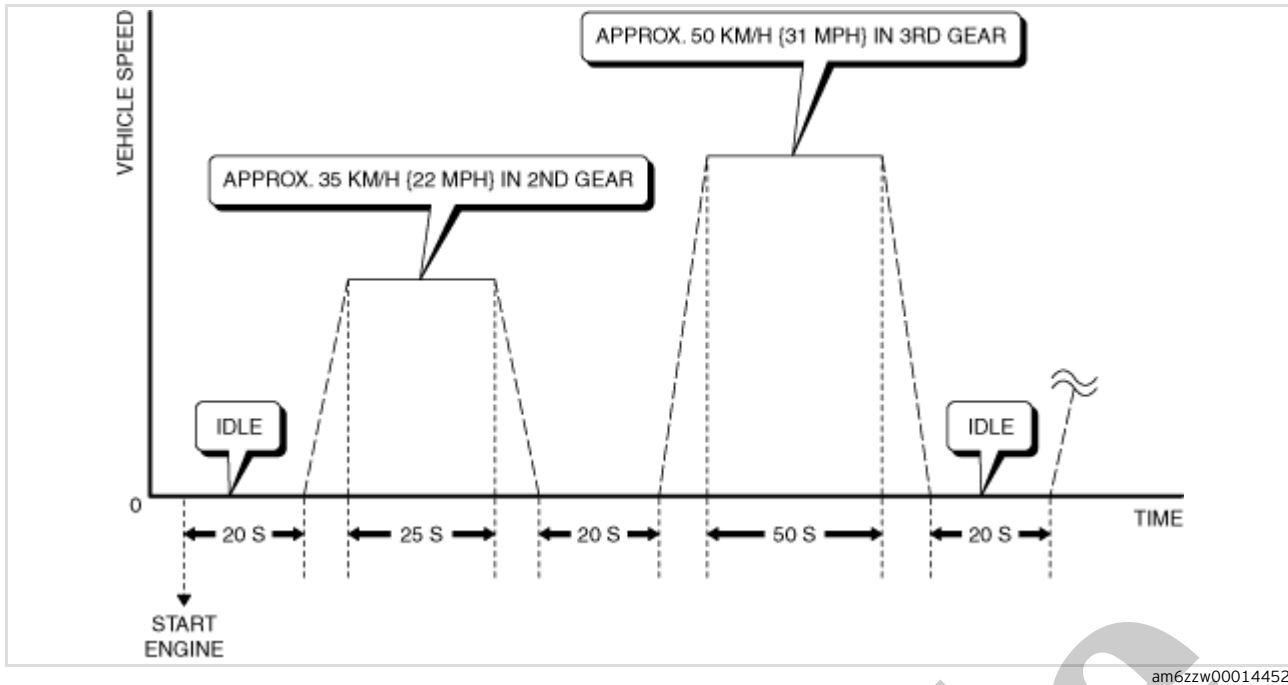

4. Stop the engine.

5. Verify no DTCs are available.

DTC TABLE [PCM (SKYACTIV-D 2.2)]

SM2896289

id0102j580150

×: Applicable--: Not applicable

DTC No.	Check engine light	Master warning indication/master warning light	Charging system warning indication/charging system warning light	Engine oil warning indication/engine oil warning light	Engine oil level warning indication/Engine oil level warning light	Wrench warning indication	Diesel particulate filter indication/Diesel particulate filter indicator light	Glow Indicator Light	SCR warning indication/CR warning light
B10A2:00	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0016:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0031:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0032:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0034:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0035:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0047:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

DTC No.	Check engine light	Master warning indication/master warning light	Charging system warning indication/charging system warning light	Engine oil warning indication/engine oil warning light	Engine oil level warning indication/Engine oil level warning light	Wrench warning indication	Diesel particulate filter indication/Diesel particulate filter indicator light	Glow Indicator Light	SCR warning indication/CR warning light
P0101:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0102:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0103:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0106:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0107:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0108:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0111:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0112:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0113:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0116:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0117:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

DTC No.	Check engine light	Master warning indication/master warning light	Charging system warning indication/charging system warning light	Engine oil warning indication/engine oil warning light	Engine oil level warning indication/Engine oil level warning light	Wrench warning indication	Diesel particulate filter indication/Diesel particulate filter indicator light	Glow Indicator Light	SCR warning indicator/CR warning light
P01CF:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P01D0:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P01D1:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P01D2:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0201:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0202:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0203:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0204:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

DTC No.	Check engine light	Master warning indication/master warning light	Charging system warning indication/charging system warning light	Engine oil warning indication/engine oil warning light	Engine oil level warning indication/Engine oil level warning light	Wrench warning indication	Diesel particulate filter indication/Diesel particulate filter indicator light	Glow Indicator Light	SCR warning indicator/CR warning light
P02CD:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P02CE:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P02CF:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

DTC No.	Check engine light	Master warning indication/master warning light	Charging system warning indication/charging system warning light	Engine oil warning indication/engine oil warning light	Engine oil level warning indication/Engine oil level warning light	Wrench warning indication	Diesel particulate filter indication/Diesel particulate filter indicator light	Glow Indicator Light	SCR warning indicator/SCR warning light
P0343:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P039A:00	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P03A4:00	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P03AE:00	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P03B8:00	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0401:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0402:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0404:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0405:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0406:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

DTC No.	Check engine light	Master warning indication/master warning light	Charging system warning indication/charging system warning light	Engine oil warning indication/engine oil warning light	Engine oil level warning indication/Engine oil level warning light	Wrench warning indication	Diesel particulate filter indication/Diesel particulate filter indicator light	Glow Indicator Light	SCR warning indication/CR warning light
P052F:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0532:00	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0533:00	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P053B:00	OFF	Indication/illumination	OFF	OFF	OFF	OFF	OFF	OFF	
P053C:00	OFF	Indication/illumination	OFF	OFF	OFF	OFF	OFF	OFF	
P0545:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0546:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P055F:00	ON	OFF	OFF	Indication/illumination ^{*9}	OFF	OFF	OFF	OFF	
P0601:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0602:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0606:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

DTC No.	Check engine light	Master warning indication/master warning light	Charging system warning indication/charging system warning light	Engine oil warning indication/engine oil warning light	Engine oil level warning indication/Engine oil level warning light	Wrench warning indication	Diesel particulate filter indication/Diesel particulate filter indicator light	Glow Indicator Light	SCR warning indicator/CR warning light
P0674:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P067A:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0685:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0698:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P0699:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P06A4:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P06A5:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P06B8:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P06B9:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	

DTC No.	Check engine light	Master warning indication/master warning light	Charging system warning indication/charging system warning light	Engine oil warning indication/engine oil warning light	Engine oil level warning indication/Engine oil level warning light	Wrench warning indication	Diesel particulate filter indication/Diesel particulate filter indicator light	Glow Indicator Light	SCR warning indicator/CR warning light
P1055:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P1056:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P1057:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P1058:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P106A:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P106B:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P106C:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	
P106D:00	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	