


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1991 JEEP Wagoneer OEM Service and Repair Workshop Manual

Go to manual page

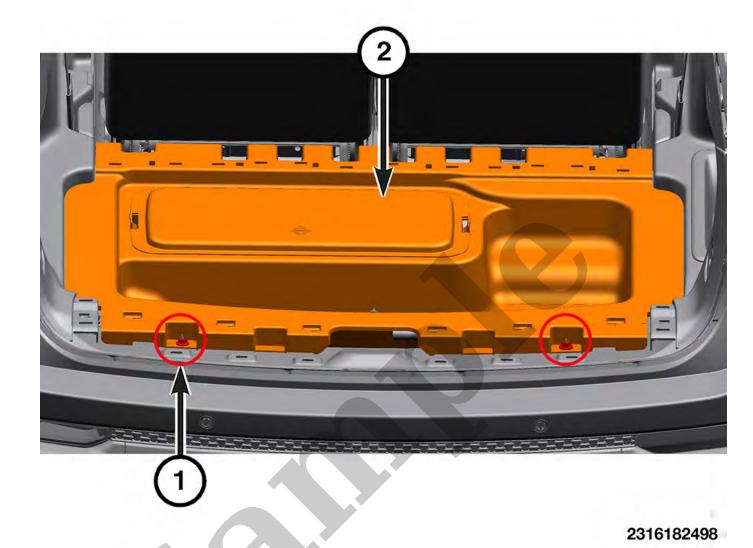

- 1 Fasteners
- 2 Cargo Load Floor
- 4. Remove the fasteners and remove the cargo load floor.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Install all fasteners and tighten securely.
- Hand tap the rear seat gap hider to fully engage retaining tabs to the floor.
- Verify the rear scuff plate retaining tabs are fully seated.



2316190227

1 - Screws	4 - Cargo Load Floor
2 - Push-Pin Fasteners	5 - Nuts
3 - Jack Assembly	

- 4. Using trim stick or equivalent, remove the push-pin fasteners from the second row seat gap hiders.
- 5. Remove the jack assembly.
- 6. Remove the screws and nuts that secure the cargo load floor. Remove the cargo load floor from the vehicle.

INSTALLATION


Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.


- Install all fasteners and tighten securely.
- Verify the rear scuff plate retaining tabs are fully seated.

YOUR CURRENT VEHICLE

A-Pillar Trim Panel

A-PILLAR TRIM PANEL

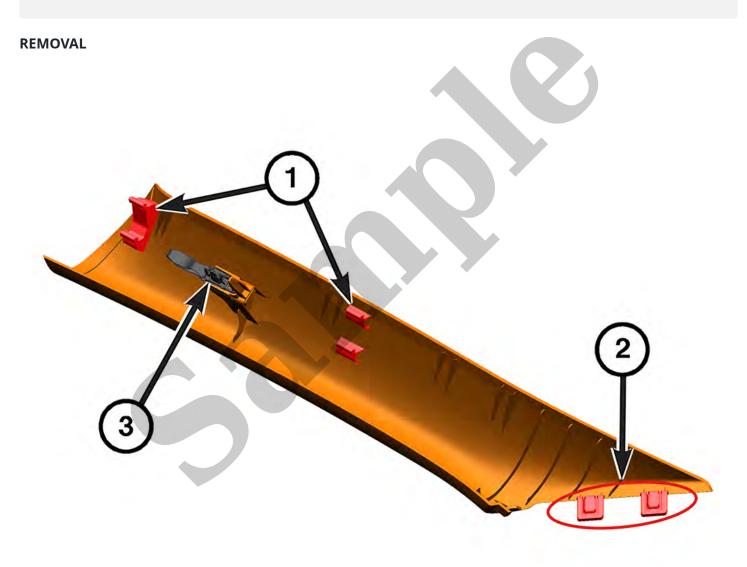

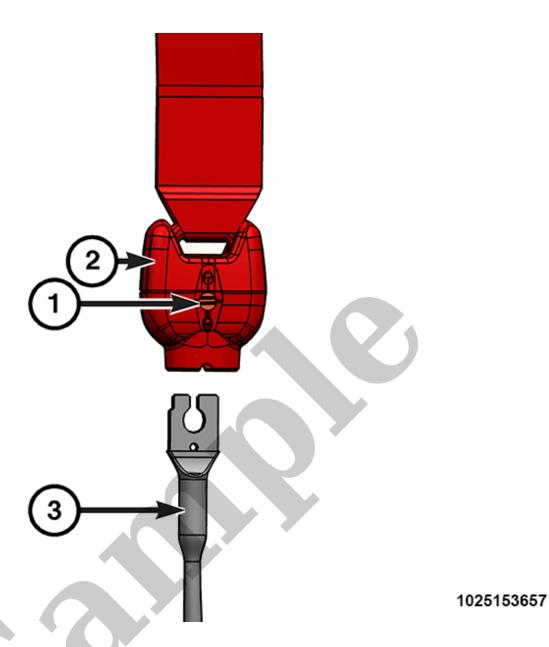

- 1 Tensioner Quick Connect Screw
- 2 Seat Belt Retractor Lower Buckle
- 3 Tensioner Cable
- 3. Using a flat blade screwdriver rotate the tensioner quick connect screw counterclockwise to disconnect the front seat belt retractor lower buckle to the tensioner cable.

List 1

- 23 Body / Interior / PLATE, Scuff, Rear Door Sill / Removal and Installation
- 23 Body / Interior / PLATE, Scuff, Liftgate / Removal and Installation



1 - Trim Panel

2. Using a trim stick or equivalent remove the trim panel between the C-pillar and the D-pillar.



- 1 Fastener Cover
- 2 Fastener
- 3 Seat Belt Closeout
- 4 C-Pillar Upper Trim Panel

3. Remove the fastener cover and remove the fastener from the C-pillar.

1 - Cowl Trim Panel


- 1. Using a trim stick or equivalent, disengage the retaining tabs of the cowl trim panel from the retainer clips in the door sill.
- 2. Pull the cowl trim panel rearward. If equipped, disconnect the wire harness connector.
- 3. Remove the cowl trim panel from the vehicle.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

• Push the cowl trim panel forward and then down to engage the retaining tabs that secure the cowl sill trim panel to the door sill.



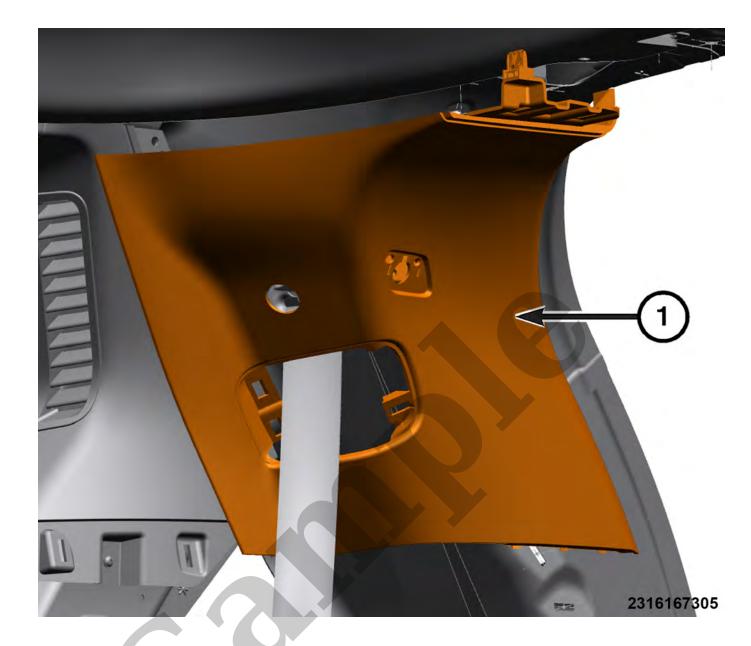

- 1 D-Pillar Rearward Trim Panel
- 6. Using a trim stick or equivalent, release the retaining clips to separate the D-pillar rearward trim panel from the inboard D-pillar.
- 7. Release the retaining clips to separate the D-pillar rearward trim panel from the D-pillar.
- 8. Pull the seat belt through the trim and remove the D-pillar rearward trim panel.
- 9. Remove the quarter panel trim panel (Refer to Body/Interior/PANEL, Quarter Trim, Rear/Removal and Installation).

- 1 Rear Header Trim Panel
 - 1. Using a trim stick or equivalent, disengage the retaining tabs of the rear header trim panel from the inner roof panel and remove the trim panel.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle. The steps listed below are calling out specific procedures that should be followed during installation.

- Position the rear header trim panel to the roof panel.
- Seat the retaining tabs that secure the rear header trim panel to the inner roof panel fully.

