

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1991 NISSAN Prairie OEM Service and Repair Workshop Manual

[Go to manual page](#)

6. Set the vehicle to READY.

7. Erase self-diagnosis result for "BRAKE".

8. Select "BRAKE" and "Data monitor", check "Front LH wheel speed", "Front RH wheel speed", "Rear LH wheel speed", and "Rear RH wheel speed".



NOTE:

Set the "Data monitor" recording speed to "10 msec".

9. Read a value (wheel speed) of all wheel sensor.



NOTE:

Vehicle must be driven after repair or replacement to erase the previous DTCs.

Note the difference at 50 km/h (31 MPH) between the wheel speed detected by rear right wheel sensor and the maximum/minimum wheel speed detected by the other rear right wheel sensor, is the difference within 5%, respectively?

YES>>

[GO TO 23.](#)

NO>>

[GO TO 24.](#)

23. PERFORM SELF-DIAGNOSIS (7)

 With CONSULT

1. Stop the vehicle.
2. Power switch OFF.
3. Power switch OFF to ON without depressing the brake pedal.

CAUTION:

Never set the vehicle to READY.

4. Power switch OFF and disconnect CONSULT from data link connector.
5. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:

Never operate the vehicle.

6. Power switch ON without depressing the brake pedal.

CAUTION:

Never set the vehicle to READY.

7. Erase self-diagnosis result for "BRAKE".

8. Power switch OFF and disconnect CONSULT from data link connector.

9. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

10. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

11. Perform self-diagnosis for “BRAKE”.

Is DTC “B14E3–09” detected?

YES>>

[GO TO 24.](#)

NO>>

INSPECTION END

24. REPLACE SENSOR ROTOR

 With CONSULT

1. Replace the rear right sensor rotor. Refer to [REAR SENSOR ROTOR : Removal & Installation](#).
2. Power switch OFF to ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

3. Power switch OFF and disconnect CONSULT from data link connector.
4. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

5. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

6. Erase self-diagnosis result for “BRAKE”.
7. Set the vehicle to READY.
8. Drive the vehicle at approximately 50 km/h (31 MPH) or more for approximately 2 minutes.



NOTE:
Vehicle must be driven after repair or replacement to erase the previous DTCs.

9. Stop the vehicle.
10. Power switch OFF and disconnect CONSULT from data link connector.
11. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

12. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

13. Perform self-diagnosis for “BRAKE”.

Is DTC “B14E3–09” detected?

YES>>

Replace the electrically-driven intelligent brake unit. Refer to [Removal and Installation](#).

NO>>

INSPECTION END

DTC DETECTION LOGIC

DTC No.		CONSULT screen terms	DTC detection condition		
B14E3	11	Wheel sensor	1	Diagnosis condition	Power switch is ON.
				Signal (terminal)	Rear right wheel sensor signal
				Threshold	When an open circuit is detected in rear right wheel sensor circuit (signal line).
				Diagnosis delay time	1 second or less
			2	Diagnosis condition	Power switch is ON.
				Signal (terminal)	Rear right wheel sensor signal
				Threshold	When short circuit to ground side is detected in rear right wheel sensor circuit (signal line).
				Diagnosis delay time	1 second or less

POSSIBLE CAUSE

- Harness or connector
- Rear right wheel sensor

FAIL-SAFE

The following functions are suspended.

- Cooperative regenerative brake function
- e-Step function

1. PRECONDITIONING

If “Confirmation Procedure” has been previously conducted, always power switch OFF, get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

>>

[GO TO 2.](#)

2. CHECK DTC DETECTION

 With CONSULT

1. Power switch OFF to ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

2. Power switch OFF and disconnect CONSULT from data link connector.
3. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

4. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

5. Erase self-diagnosis result for “BRAKE”.
6. Power switch OFF and disconnect CONSULT from data link connector.
7. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

8. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

9. Perform self-diagnosis for “BRAKE”.

Is DTC “B14E3-11” detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

Sample

CAUTION:

Never check between wheel sensor harness connector terminals.

1. CHECK 12V BATTERY

1. Power switch OFF and disconnect CONSULT from data link connector.
2. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:

Never operate the vehicle.

3. Check the 12V battery terminal connections.
4. Check the 12V battery.

Is the inspection result normal?

YES>>

[GO TO 2.](#)

NO>>

Repair or replace error-detected parts. [GO TO 2.](#)

2. PERFORM SELF-DIAGNOSIS (1)

 With CONSULT

1. Connect 12V battery cable to negative terminal.
2. Power switch OFF to ON without depressing the brake pedal.

CAUTION:

Never set the vehicle to READY.

3. Power switch OFF and disconnect CONSULT from data link connector.
4. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:

Never operate the vehicle.

5. Power switch ON without depressing the brake pedal.

CAUTION:

Never set the vehicle to READY.

6. Erase self-diagnosis result for "BRAKE".
7. Power switch OFF and disconnect CONSULT from data link connector.
8. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

9. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

10. Perform self-diagnosis for "BRAKE".

Is DTC "B14E3-11" detected?

YES>>

[GO TO 3.](#)

NO>>

INSPECTION END

3. CHECK WHEEL SENSOR

1. Power switch OFF and disconnect CONSULT from data link connector.
2. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

3. Disconnect 12V battery negative terminal.
4. Check the rear right wheel sensor for damage.

Is the inspection result normal?

YES>>

[GO TO 5.](#)

NO>>

[GO TO 4.](#)

4. REPLACE WHEEL SENSOR (1)

 With CONSULT

1. Replace the rear right wheel sensor. Refer to [REAR WHEEL SENSOR : Removal & Installation](#).
2. Connect 12V battery negative terminal.
3. Power switch OFF to ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

4. Power switch OFF and disconnect CONSULT from data link connector.
5. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

6. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

7. Erase self-diagnosis result for “BRAKE”.
8. Power switch OFF and disconnect CONSULT from data link connector.
9. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

10. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

11. Perform self-diagnosis for “BRAKE”.

Is DTC “B14E3–11” detected?

YES>>

[GO TO 5.](#)

NO>>

INSPECTION END

5. CHECK CONNECTOR

1. Power switch OFF and disconnect CONSULT from data link connector.
2. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

3. Disconnect 12V battery negative terminal.
4. Check the electrically-driven intelligent brake unit harness connector for disconnection or looseness.
5. Check the rear right wheel sensor harness connector for disconnection or looseness.

Is the inspection result normal?

YES>>

[GO TO 7.](#)

NO>>

Repair / replace harness or connector, securely lock the connector. [GO TO 6.](#)