

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1992 JEEP Wagoneer OEM Service and Repair Workshop Manual

[Go to manual page](#)




1 - Trim Cover

7. Using a trim stick or equivalent, remove the release handle trim cover.
8. Release the seat back cover from the tabs on the release handle.
9. Using a trim tool, carefully release the venting pad from the vent motor, if equipped.
10. Remove the seat back cover and seat back foam as an assembly from the seat back frame.
11. Pull the seat back cover away from the seat foam, release the velcro and cut the hog rings to separate the foam from the seat back cover.

INSTALLATION

Follow the removal procedure in reverse for general reassembly of the components on the vehicle.

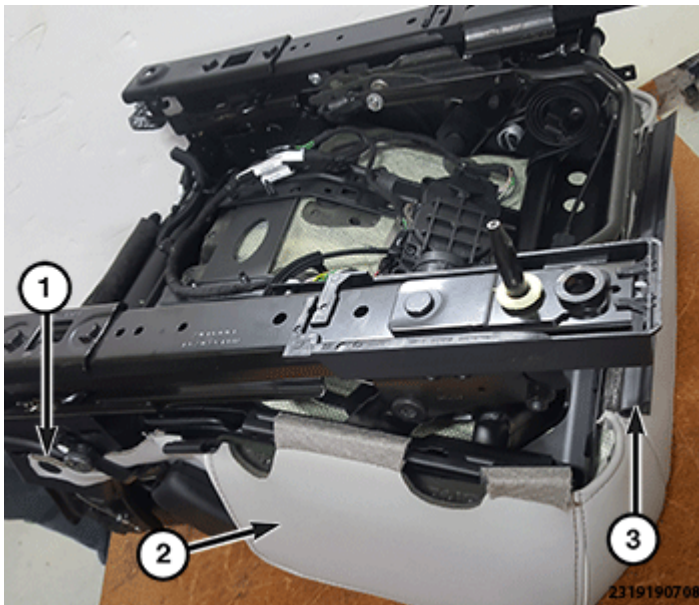

1 - Push-Pin Fastener

2 - Seat Cushion Cover

3 - J-Strips

5. Remove the push-pin fasteners from the backside of the cushion cover.
6. Remove the J-Strips from around the cushion cover.
7. Remove the lower cover strap hooks from seat frame.




2319190709

1 - Seat Cushion Cover

1 - Seat Cushion Latch

2. Underneath the front of the seat cushion, release the two seat cushion latches.

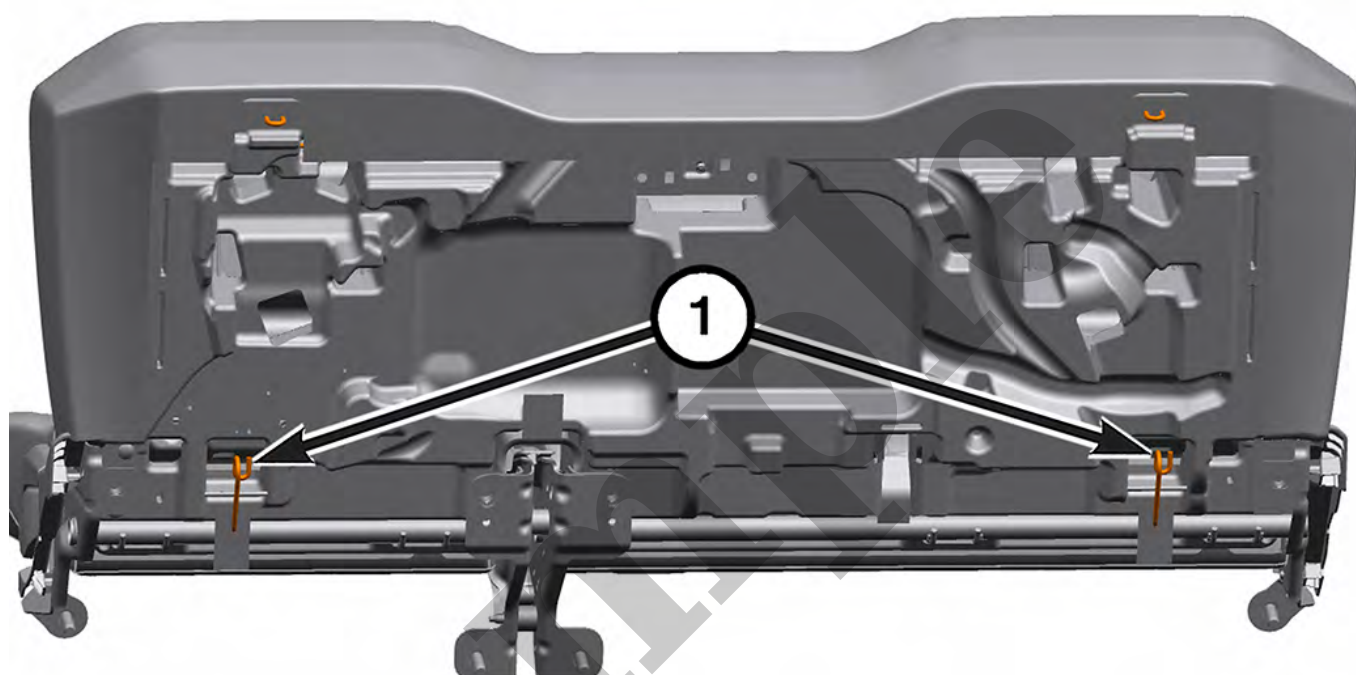

2319187425

1 - Rearward Cushion Hooks


3. Push the cushion toward the rear of the vehicle and lift up from the rear of the cushion to release the cushion from the rearward cushion hooks.
4. Remove the second row outboard left short wheelbase buckle and feed the seat belt webbing through the seat cushion opening ([Refer to Restraints/BUCKLE, Seat Belt/Removal and Installation](#)).

Bucket Seat - Long Wheelbase Model

BUCKET SEAT - LONG WHEELBASE MODEL

REMOVAL

1. Gain access to the seat through the rear doors. If equipped with a rear floor console, remove the rear console for service ([Refer to Body/Interior/CONSOLE, Floor/Removal and Installation](#))([Refer To List 1](#)).
2. Remove the side shields ([Refer to Body/Seats/SIDE SHIELDS, Seat Cushion, Front/Removal and Installation](#))([Refer To List 2](#)).
3. Release and tilt seat into forward rear entry position.

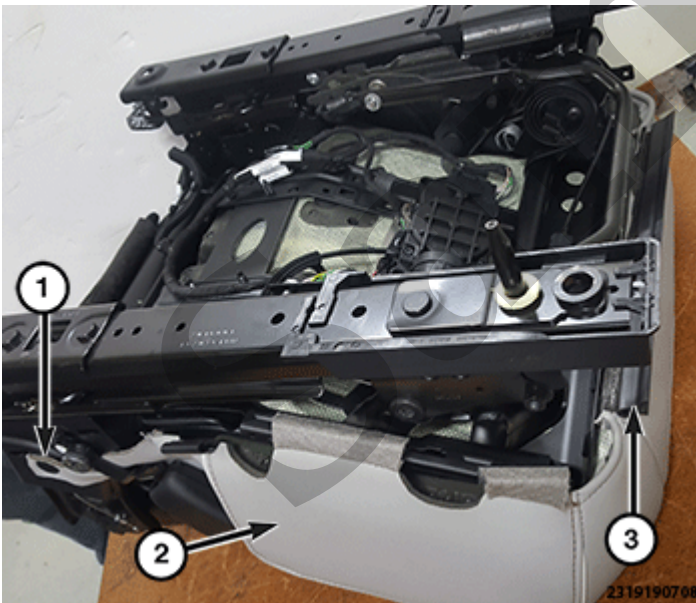


1 - Push-Pin Fastener

2 - Seat Cushion Cover

3 - J-Strips

3. If necessary, remove the fasteners that secure the release handle and slide the release handle to remove it from the seat back frame.

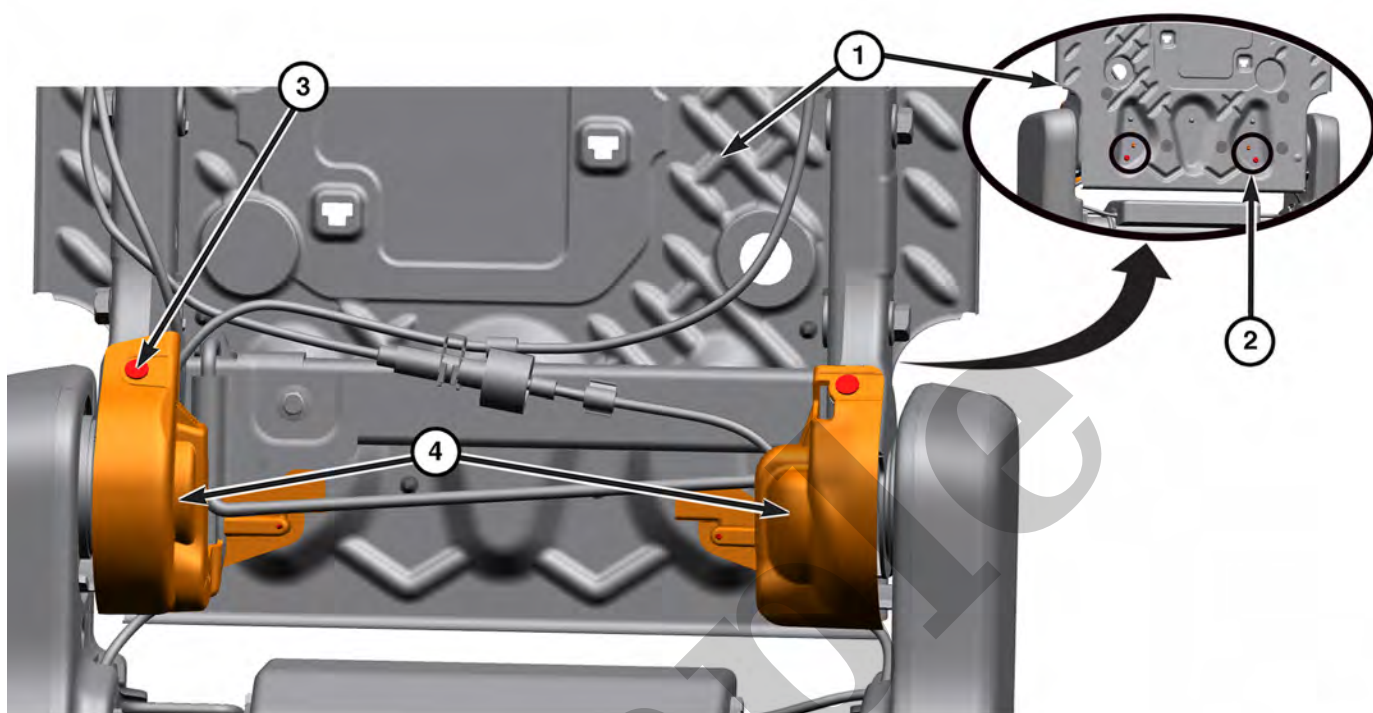

2319190701

1 - Seat Back Frame

2 - Screws

3 - Push-Pin Fasteners

4 - Adjuster Guards


4. Remove the screws from the back side of the seat back frame.
5. Working on the front side of the seat back frame, remove the push-pin fasteners and remove the adjuster guards from the seat back frame.

Refer To List:

List 1

- [23 - Body / Seats, Front / COVER, Seat Back, Front / Removal and Installation](#)
- [23 - Body / Seats, Second Row / COVER, Seat Back, Second Row / Removal and Installation](#)
- [23 - Body / Seats, Third Row / COVER, Seat Back, Third Row / Removal and Installation](#)

Sample

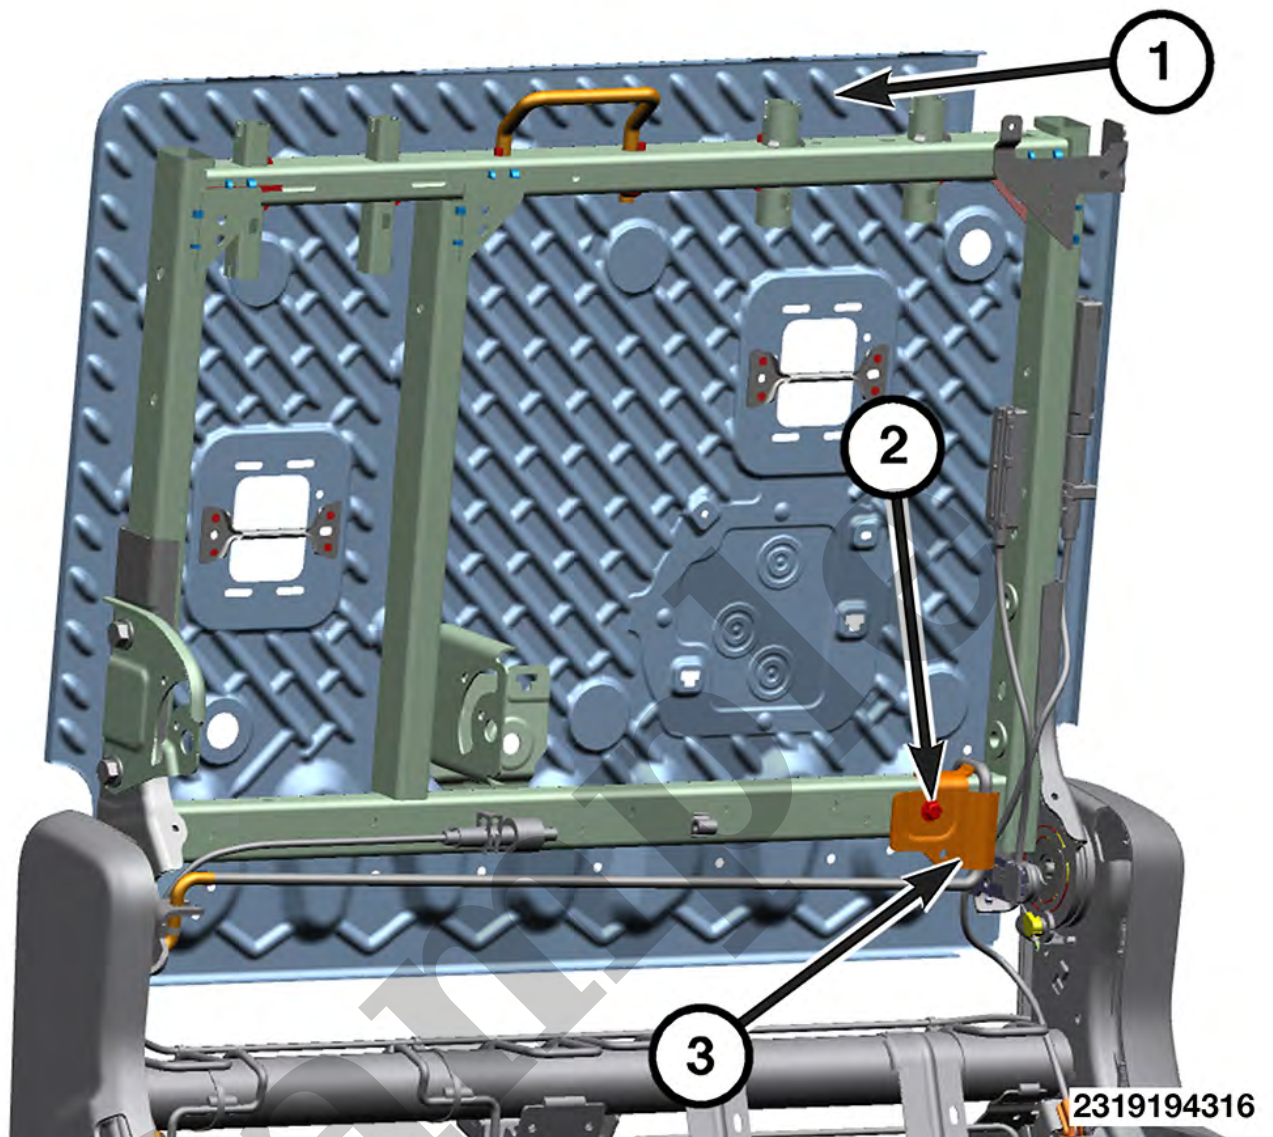

1 - Seat Back Frame

2 - Tension Rod Bracket to Seat Back Bolt

3 - Tension Rod Bracket

8. Remove the tension rod bracket to seat back frame bolt. Remove the tension bracket.


YOUR CURRENT VEHICLE

60-40% Bench Seat - Short Wheelbase

60-40% BENCH SEAT - SHORT WHEELBASE

REMOVAL

1. Remove both the left and right seat back covers ([Refer to Body/Seats/COVER, Seat Back/Removal and Installation](#))([Refer To List 1](#)).
2. Remove the second row center seat belt retractor ([Refer to Restraints/RETRACTOR, Second Row Center Seat Belt/Removal and Installation](#)).
3. If equipped, remove the rear seat back vented motors ([Refer to Electrical/Heated/Cooled Accessories/MOTOR, Second Row Seat Back Vented Seat/Removal and Installation](#))([Refer To List 2](#)).

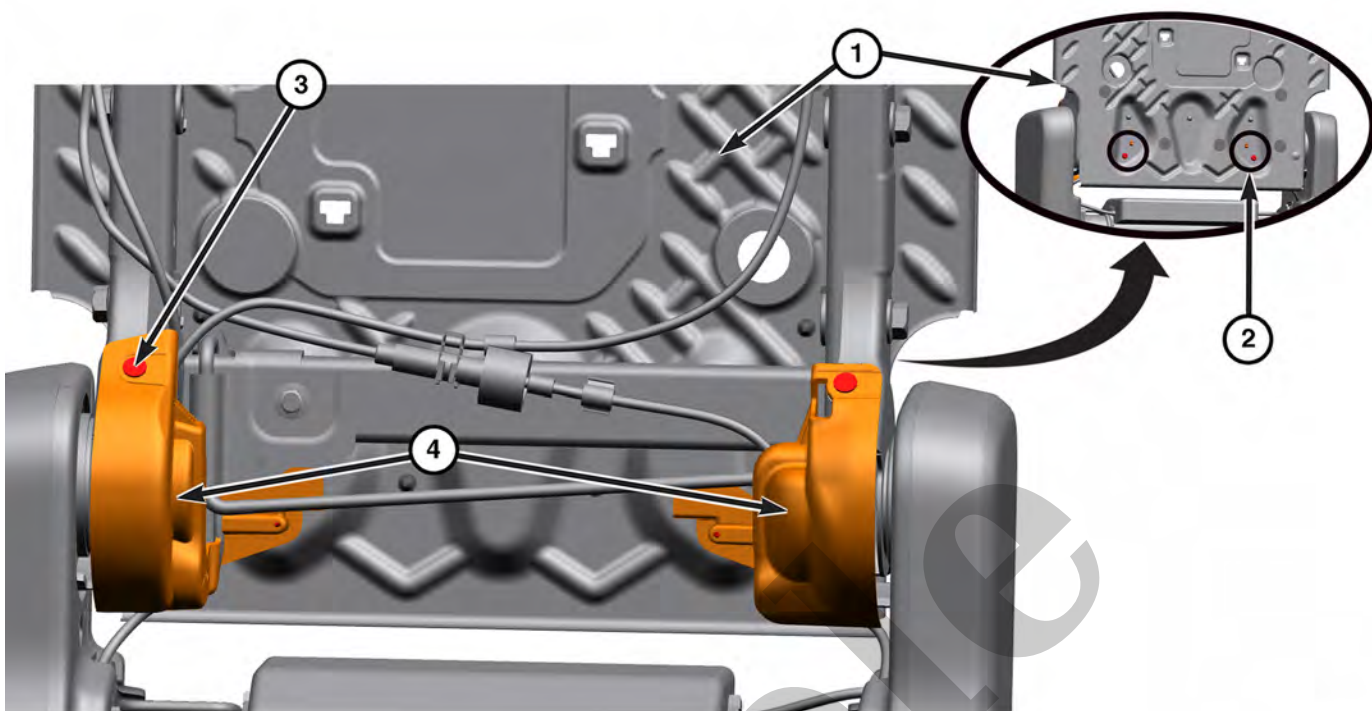

2319190701

1 - Seat Back Frame
2 - Screws
3 - Push-Pin Fasteners
4 - Adjuster Guards

3. Remove the screws from the back side of the seat back frame.

4. Working on the front side of the seat back frame, remove the push-pin fasteners and remove the adjuster guards from the seat back frame.