

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1993 NISSAN Skyline GT-R V-Spec (R32) OEM Service and Repair Workshop Manual

[Go to manual page](#)

1. PRECONDITIONING

If “Confirmation Procedure” has been previously conducted, always power switch OFF, get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

>>

[GO TO 2.](#)

2. CHECK DTC DETECTION

 With CONSULT

1. Power switch OFF to ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

2. Power switch OFF and disconnect CONSULT from data link connector.
3. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

4. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

5. Erase self-diagnosis result for “BRAKE”.
6. Power switch OFF and disconnect CONSULT from data link connector.
7. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

8. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

9. Perform self-diagnosis for “BRAKE”.

Is DTC “U2140-87” detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

Sample

DTC Diagnosis Procedure

SIEMD-7267259

Refer to [Trouble Diagnosis Flow Chart](#).

Sample

DTC DETECTION LOGIC

DTC No.		CONSULT screen terms	DTC detection condition		
U2143	87	Controller area network communication error (Vehicle control module/Hybrid control module)	1	Diagnosis condition	When power switch is ON.
				Signal (terminal)	CAN communication signal
				Threshold	When not receiving from VCM.
				Diagnosis delay time	2 seconds or more
			2	Diagnosis condition	When power switch is ON.
				Signal (terminal)	CAN communication signal
				Threshold	When not transmitting to VCM.
				Diagnosis delay time	2 seconds or more

POSSIBLE CAUSE

- VCM
- CAN communication line

FAIL-SAFE

Normal control

1. PRECONDITIONING

If “Confirmation Procedure” has been previously conducted, always power switch OFF, get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

>>

[GO TO 2.](#)

2. CHECK DTC DETECTION

 With CONSULT

1. Power switch OFF to ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

2. Power switch OFF and disconnect CONSULT from data link connector.
3. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

4. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

5. Erase self-diagnosis result for “BRAKE”.
6. Power switch OFF and disconnect CONSULT from data link connector.
7. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

8. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

9. Perform self-diagnosis for “BRAKE”.

Is DTC “U2143-87” detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

Sample

DTC Diagnosis Procedure

SIEMD-7267266

Refer to [Trouble Diagnosis Flow Chart](#).

Sample

DTC DETECTION LOGIC

DTC No.		CONSULT screen terms	DTC detection condition		
U2148	87	CAN communication error brake control unit	1	Diagnosis condition	When power switch is ON.
				Signal (terminal)	CAN communication signal
				Threshold	When not receiving from ABS actuator and electric unit (control unit).
				Diagnosis delay time	2 seconds or more
			2	Diagnosis condition	When power switch is ON.
				Signal (terminal)	CAN communication signal
				Threshold	When not transmitting to S actuator and electric unit (control unit).
				Diagnosis delay time	2 seconds or more

POSSIBLE CAUSE

- ABS actuator and electric unit (control unit)
- CAN communication line

FAIL-SAFE

The following functions are suspended.

- Cooperative regenerative brake function
- e-Step function

1. PRECONDITIONING

If “Confirmation Procedure” has been previously conducted, always power switch OFF, get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

>>

[GO TO 2.](#)

2. CHECK DTC DETECTION

 With CONSULT

1. Power switch OFF to ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

2. Power switch OFF and disconnect CONSULT from data link connector.

3. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

4. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

5. Erase self-diagnosis result for “BRAKE”.

6. Power switch OFF and disconnect CONSULT from data link connector.

7. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

CAUTION:
Never operate the vehicle.

8. Power switch ON without depressing the brake pedal.

CAUTION:
Never set the vehicle to READY.

9. Perform self-diagnosis for “BRAKE”.

Is DTC “U2148-87” detected?

YES>>