 


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1993 TOYOTA Pickup OEM Service and Repair Manual

[Go to manual page](#)

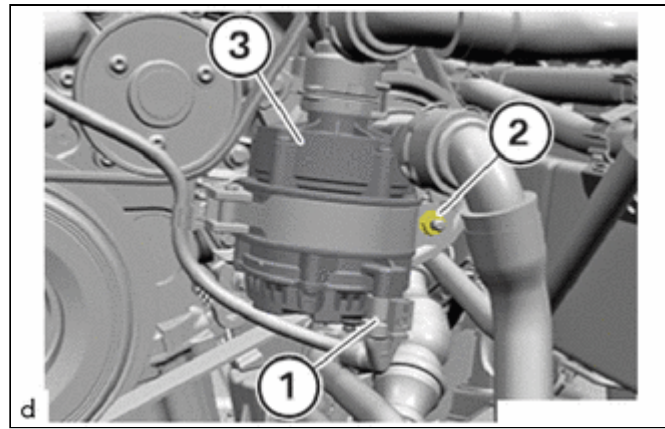

(b) Tighten the nut (2) on the holder.

Torque:

 
8.0 N·m {82 kgf·cm, 71 in·lbf}

(c) Connect and lock the connector (1).

(d) Make sure the connector (1) engages audibly.

3. INSTALL CYLINDER BLOCK COVER

(a) Thread in and position the cylinder block cover (2).

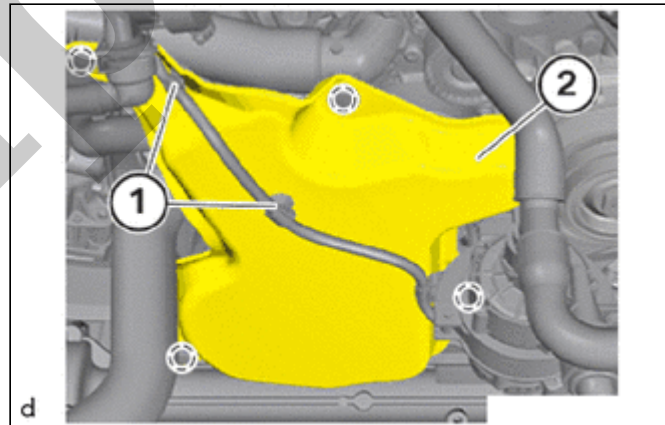

(b) Fit all expanding rivets in marked areas.

 
(c) Secure clamps (1).

4. INSTALL NO. 2 AIR CLEANER HOSE

Click here [INFO](#)

5. INSTALL NO. 1 ENGINE COVER SUB-ASSEMBLY

Click here [INFO](#)






N*m (kgf*cm, ft.*lbf): Specified torque

-

 -



Sample

CAUTION:

- Component with preload.

 
Danger of injury!

- Reduce preload as far as possible before disassembly. Relieve component.

HINT:

If the fan and generator V belt is reused: Mark the direction of travel and reinstall the fan and generator V belt in same direction of travel.


- (a) Using 16 mm socket, raise the preloading on the belt tensioner (1) in the direction of arrow.

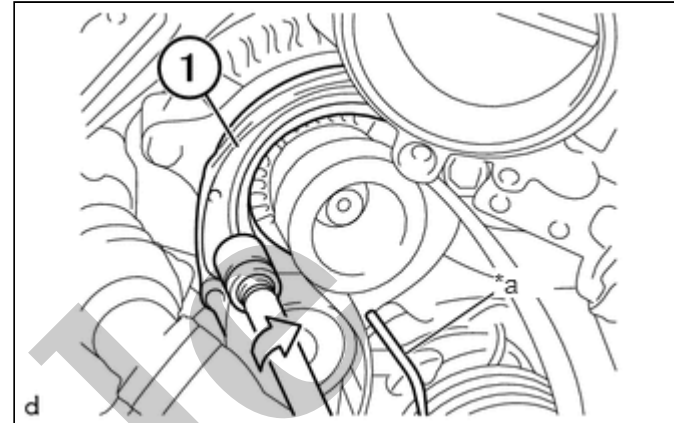


*a	4 mm Hexagon Wrench
----	---------------------

- (b) Secure the belt tensioner (1) with the 4 mm hexagon wrench.

  - (c) Guide out the fan and generator V belt (1) and remove it.

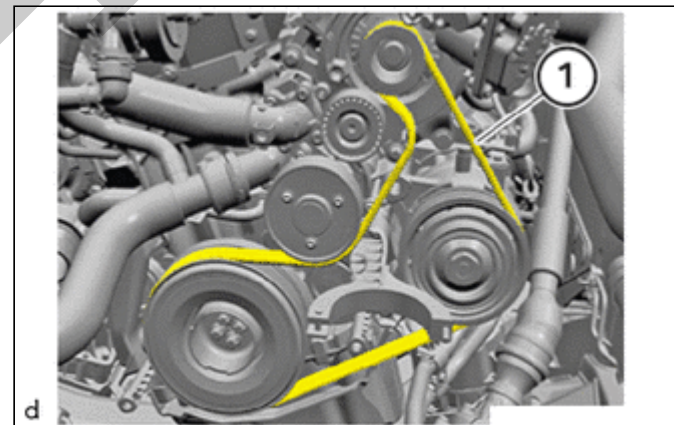

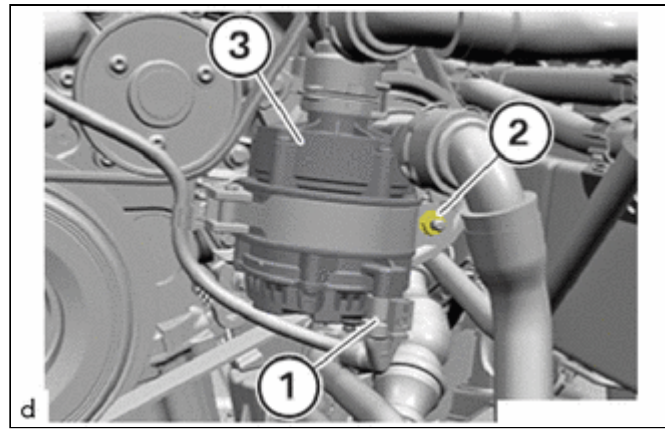

(b) Tighten the nut (2) on the holder.

Torque:

 
8.0 N·m {82 kgf·cm, 71 in·lbf}

(c) Connect and lock the connector (1).

(d) Make sure the connector (1) engages audibly.

3. INSTALL CYLINDER BLOCK COVER

(a) Thread in and position the cylinder block cover (2).

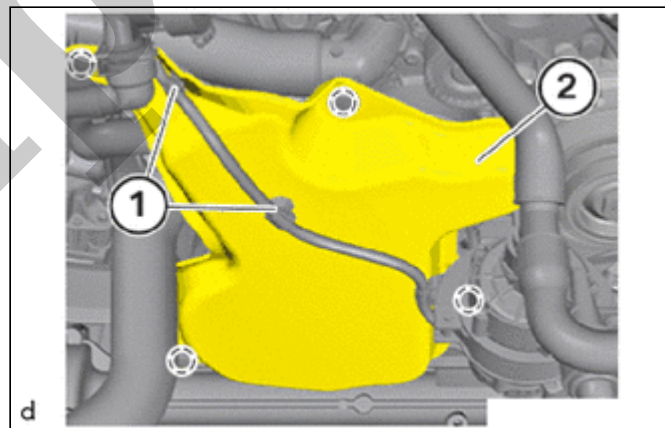

(b) Fit all expanding rivets in marked areas.

(c) Secure clamps (1).

4. INSTALL NO. 2 AIR CLEANER HOSE

Click here [INFO](#)

5. INSTALL NO. 1 ENGINE COVER SUB-ASSEMBLY

Click here [INFO](#)

