

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 1994 NISSAN Prairie OEM Service and Repair Workshop Manual

[Go to manual page](#)

**Never operate the vehicle.**

6. Power switch OFF to ON without depressing the brake pedal.

**CAUTION:**

**Never set the vehicle to READY.**

7. Erase self-diagnosis result for "BRAKE".

8. Power switch OFF and disconnect CONSULT from data link connector.

9. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**

**Never operate the vehicle.**

10. Power switch OFF to ON without depressing the brake pedal.

**CAUTION:**

**Never set the vehicle to READY.**

11. Perform self-diagnosis for "BRAKE".

Is DTC "C18EF-96" detected?

YES>>

[GO TO 5.](#)

NO>>

INSPECTION END

## 5. CHECK ELECTRICALLY-DRIVEN INTELLIGENT BRAKE UNIT POWER SUPPLY AND GROUND CIRCUIT

---

1. Power switch OFF and disconnect CONSULT from data link connector.

2. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**

**Never operate the vehicle.**

3. Disconnect 12V battery cable from negative terminal.

4. Disconnect electrically-driven intelligent brake unit harness connector.

5. Check the electrically-driven intelligent brake unit power supply and ground circuit. Refer to [Diagnosis Procedure](#).

Is the inspection result normal?

YES>>

[GO TO 6.](#)

NO>>

Repair / replace harness, connector, terminal, fuse, or fusible link. [GO TO 6.](#)

## 6. PERFORM SELF-DIAGNOSIS (3)

 With CONSULT

1. Power switch OFF to ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

2. Power switch OFF and disconnect CONSULT from data link connector.
3. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**  
Never operate the vehicle.

4. Power switch OFF to ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

5. Erase self-diagnosis result for "BRAKE".
6. Power switch OFF and disconnect CONSULT from data link connector.
7. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**  
Never operate the vehicle.

8. Power switch OFF to ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

9. Perform self-diagnosis for "BRAKE".

Is DTC "C18EF-96" detected?

YES>>

Replace the electrically-driven intelligent brake unit. Refer to [ELECTRICALLY-DRIVEN INTELLIGENT BRAKE UNIT : Removal & Installation](#).

NO>>

INSPECTION END

**DTC DETECTION LOGIC**

DTC No.		CONSULT screen terms	DTC detection condition	
C18FA	44	Calibration incomplete	Diagnosis condition	When power switch is ON.
			Signal (terminal)	—
			Threshold	When programming data is not same.
			Diagnosis delay time	1 second or less

**POSSIBLE CAUSE**

Programing is not complete

**FAIL-SAFE**

The following functions are suspended.

- Cooperative regenerative brake function
- e-Step function

## 1. PRECONDITIONING

---

If “Confirmation Procedure” has been previously conducted, always power switch OFF, get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.


**CAUTION:**  
Never operate the vehicle.

>>

[GO TO 2.](#)

## 2. CHECK DTC DETECTION

---

 With CONSULT

1. Power switch OFF to ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

2. Power switch OFF and disconnect CONSULT from data link connector.
3. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**  
Never operate the vehicle.

4. Power switch ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

5. Erase self-diagnosis result for “BRAKE”.
6. Power switch OFF and disconnect CONSULT from data link connector.
7. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**  
Never operate the vehicle.

8. Power switch ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

9. Perform self-diagnosis for “BRAKE”.

Is DTC “C18FA-44” detected?

YES>>

Refer to [DTC Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

Sample

## 1. PERFORM PROGRAMMING

---

 With CONSULT

Perform programming. Refer to [Work Procedure](#).

>>

[GO TO 2.](#)

## 2. PERFORM SELF-DIAGNOSIS (1)

---

 With CONSULT

1. Power switch OFF to ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

2. Power switch OFF and disconnect CONSULT from data link connector.
3. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**  
Never operate the vehicle.

4. Power switch ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

5. Erase self-diagnosis result for "BRAKE" after record or print self-diagnosis results and freeze frame data (FFD).
6. Power switch OFF and disconnect CONSULT from data link connector.
7. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**  
Never operate the vehicle.

8. Power switch ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

9. Perform self-diagnosis for "BRAKE".

Is DTC "C18FA-44" detected?

YES>>

Replace the electrically-driven intelligent brake unit. Refer to [ELECTRICALLY-DRIVEN INTELLIGENT BRAKE UNIT : Removal & Installation](#).

NO>>

INSPECTION END

Sample



**DTC DETECTION LOGIC**

DTC No.		CONSULT screen terms	DTC detection condition	
C18FA	46	Calibration incomplete	Diagnosis condition	When power switch is ON.
			Signal (terminal)	—
			Threshold	When programming is incomplete.
			Diagnosis delay time	1 second or less

**POSSIBLE CAUSE**

Programing is not complete

**FAIL-SAFE**

Normal control

Sample

## 1. PRECONDITIONING

---

If “Confirmation Procedure” has been previously conducted, always power switch OFF, get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**  
Never operate the vehicle.

>>

[GO TO 2.](#)

## 2. CHECK DTC DETECTION

---

 With CONSULT

1. Power switch OFF to ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

2. Power switch OFF and disconnect CONSULT from data link connector.
3. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**  
Never operate the vehicle.

4. Power switch ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

5. Erase self-diagnosis result for “BRAKE”.
6. Power switch OFF and disconnect CONSULT from data link connector.
7. Get out of the vehicle, close all doors (other than hood assembly), check that the combination meter is OFF, and wait for 1 minute or more without opening these doors.

**CAUTION:**  
Never operate the vehicle.

8. Power switch ON without depressing the brake pedal.

**CAUTION:**  
Never set the vehicle to READY.

9. Perform self-diagnosis for “BRAKE”.

Is DTC “C18FA-46” detected?

YES>>