


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1994 VOLVO 940 OEM Service and Repair Workshop Manual

Go to manual page

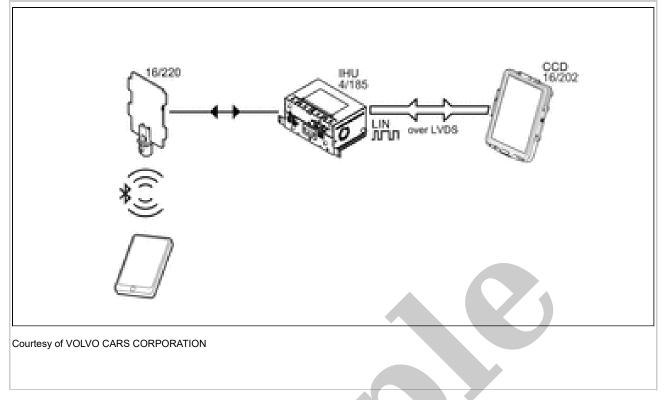

The table below summarizes input and output signals to and from the Infotainment Head Unit (IHU).

Input signals	Output signals
Directly connected Bluetooth signal: • Bluetooth antenna (16/220)	Directly connectedBluetooth signal:Bluetooth antenna (16/220)
LIN over LVDS Input information: • Center Console Display (CCD) (16/202)	LIN over LVDS Message display: • Center Console Display (CCD) (16/202)


SENSUS: RADIO > SENSUS: RADIO [2018-2022] > DESCRIPTION

The radio function handles the reception and playback of:

- AM/FM radio
- HD radio
- DAB radio
- Sirius XM Satellite Radio


The Infotainment Head Unit (IHU) controls the function based on settings made in the Center Console Display (CCD).


SENSUS: RADIO > SENSUS: RADIO [2018-2022] > VARIANTS

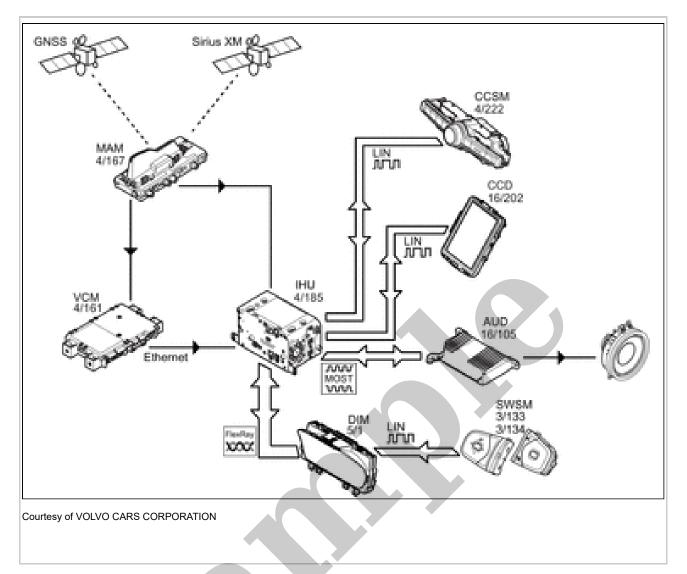


The table below summarizes input and output signals to and from the Infotainment Head Unit (IHU)

Input signals	Output signals
Directly connected Satellite radio signal: • Multiband antenna module (MAM) (4/167)	Directly connected
Ethernet GNSS data: • Multiband antenna module (MAM) (4/167) via - Vehicle Connectivity Module (VCM) (4/161)	Ethernet
LIN Control of satellite radio: • Center console switch module CCSM (4/222)	LIN
LIN over LVDS Control of satellite radio:	LIN over LVDS Information displayed in the satellite radio

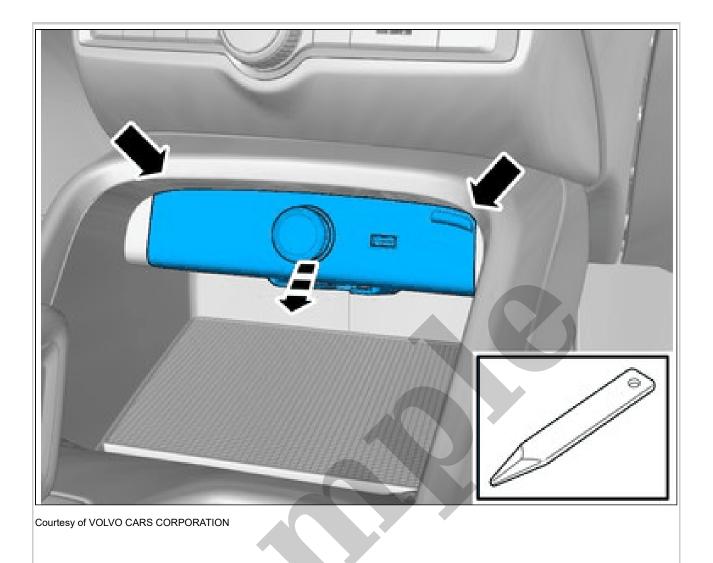

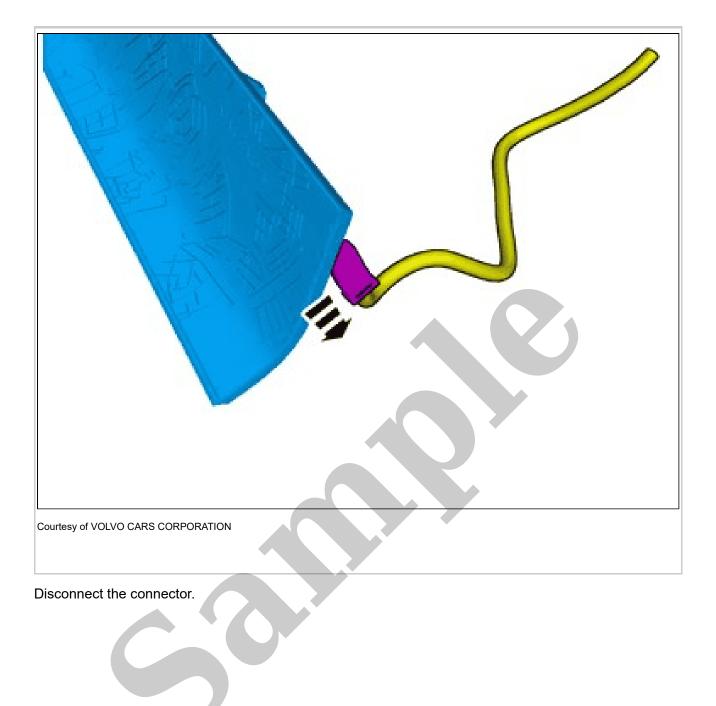

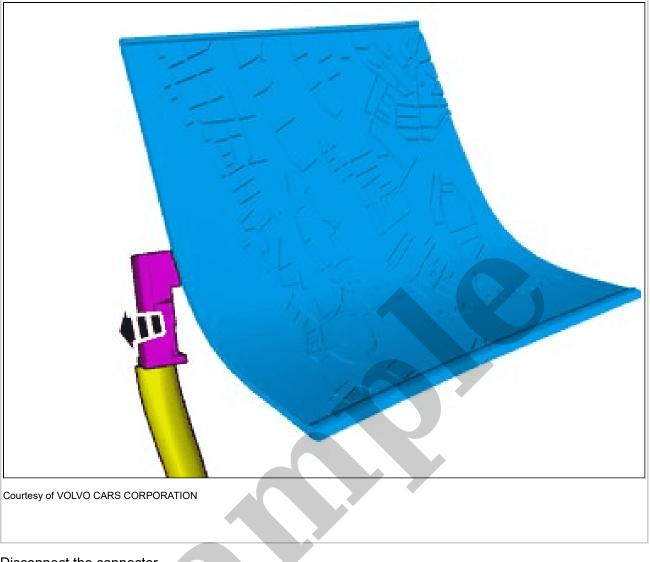


Disconnect the connector.



Disconnect the connectors.

NOTE: Removal steps in this procedure may contain installation details.

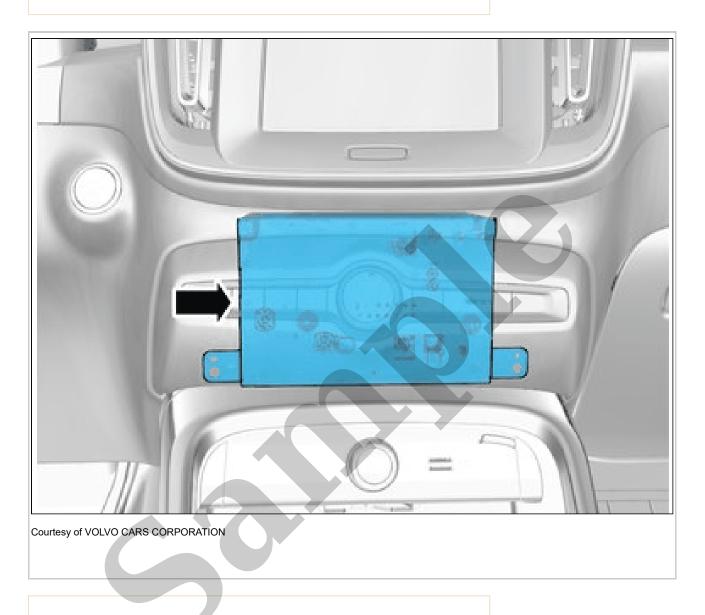


NOTE: Orientation view


NOTE: The following steps are only necessary when

installing a new component.

Follow instructions regarding managing customer profiles. Refer to: HANDLING CUSTOMER PROFILES

NOTE: The following items must always be performed

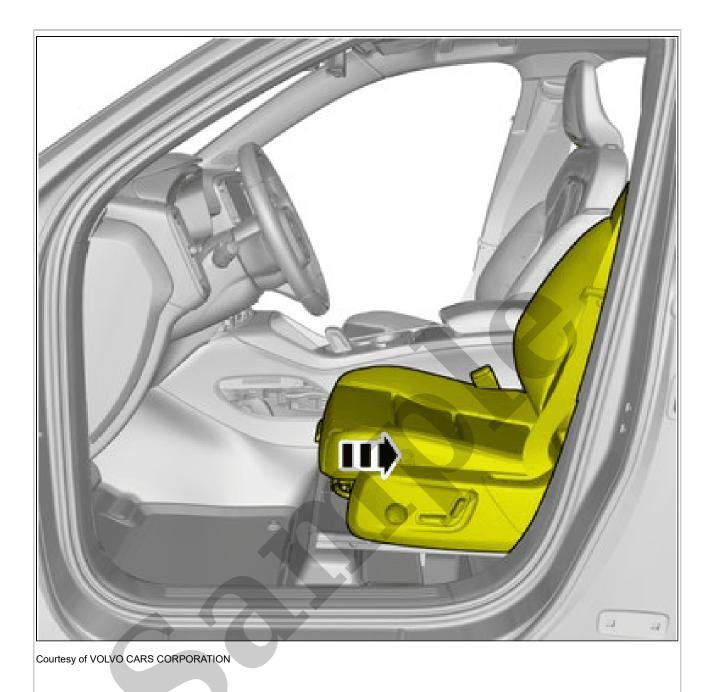

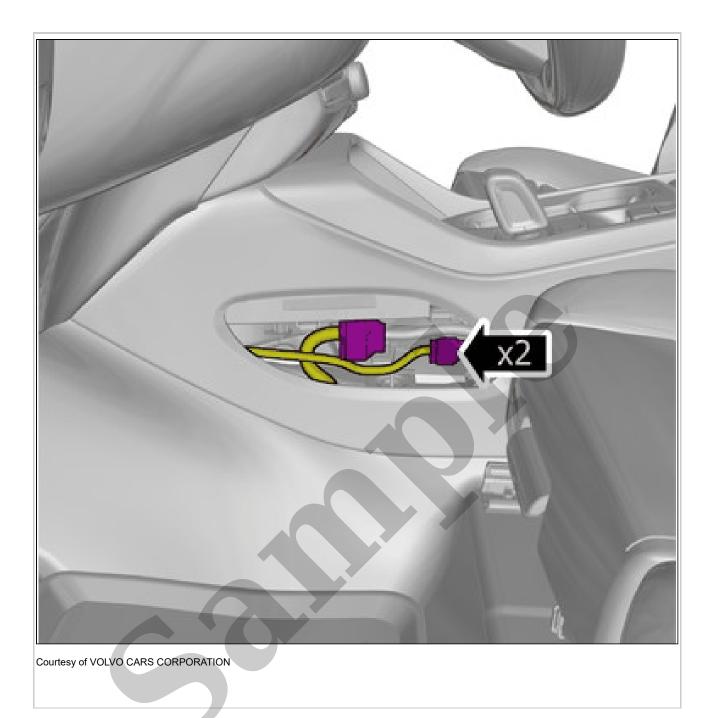

Disconnect the connectors.