


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1995 VOLVO 850 R OEM Service and Repair Workshop Manual

Go to manual page

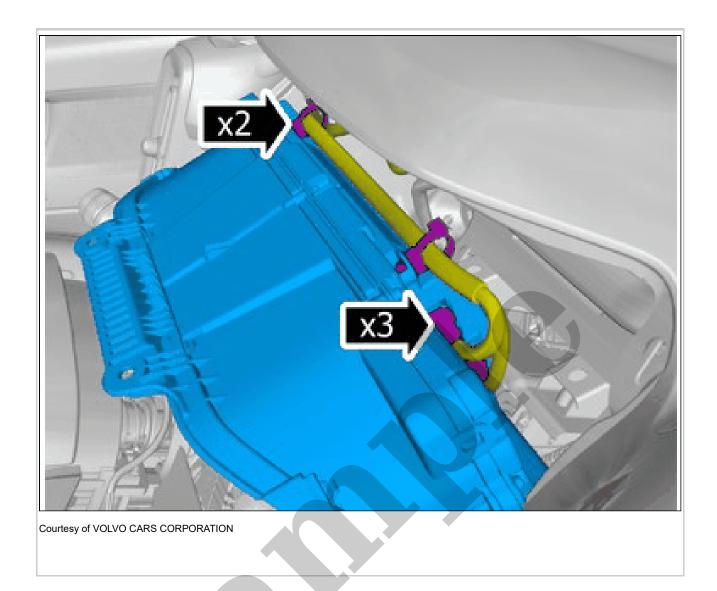

**NOTE:** The number of electrical wires may vary depending on vehicle equipment specification.

Disconnect the connectors.

Remove the cable harness clips.


Remove the marked part.

#### DRIVER INFORMATION MODULE > DRIVER INFORMATION MODULE (DIM) [2018-2022] > INSTALLATION


To install, reverse the removal procedure.

**NOTE:** The following steps are only necessary when installing a new component.

Order and download the appropriate software according to: VIDA/Software/Hardware Changes

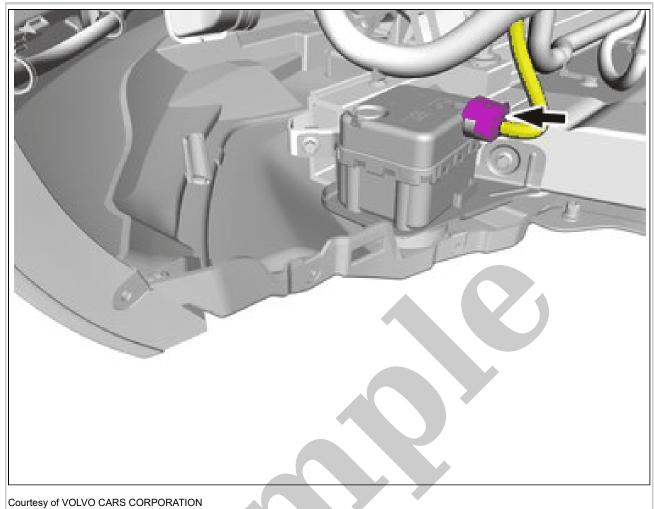


Disconnect the connector.

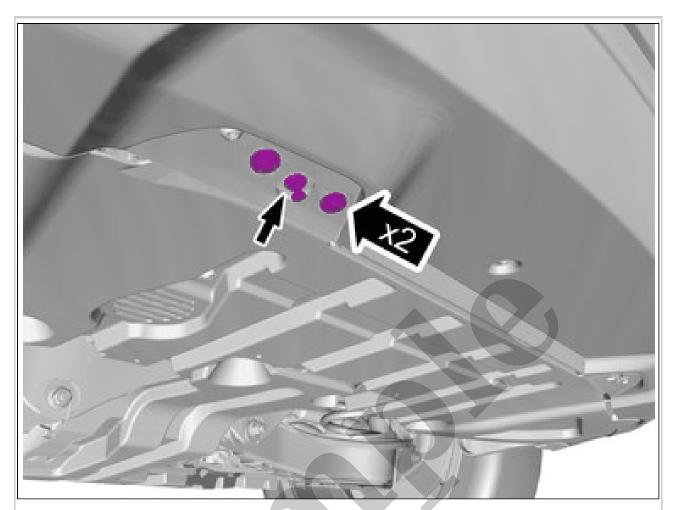


Courtesy of VOLVO CARS CORPORATION

Remove the clip.
Remove the screws.
Repeat on the other side.

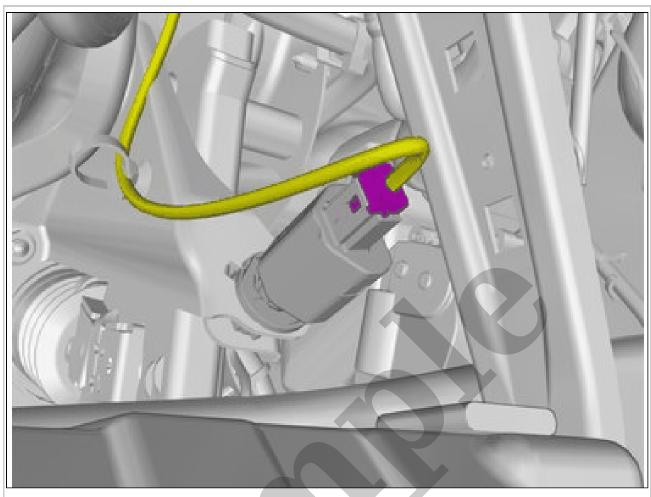

Courtesy of VOLVO CARS CORPORATION

Disconnect the connector.

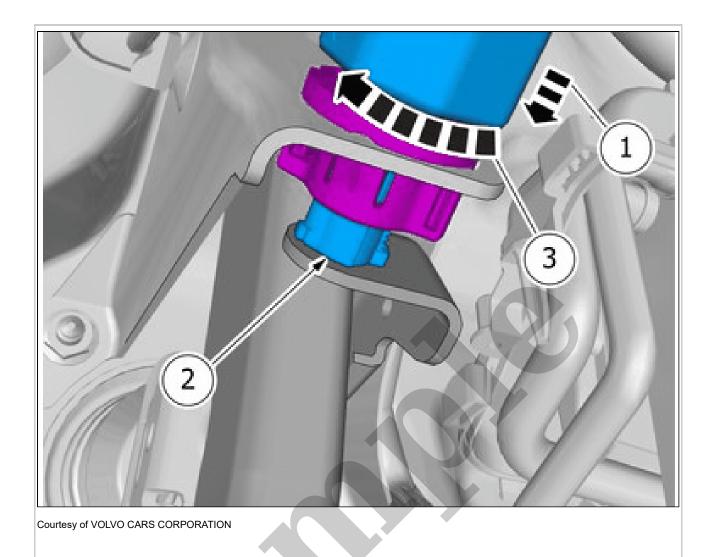

1. Install the marked component.

**NOTE:** Ensure that the component is in contact with the surface, with no space.

2.

3. Turn in direction of arrow until stop.



Remove the screw.

Remove the marked part.

Torque: M6, 10Nm

#### ACCELERATION SENSOR VERTICAL MOTION REAR > ACCELERATION SENSOR VERTICAL MOTION REAR [2019-2022] > INSTALLATION

To install, reverse the removal procedure.


### ACCELEROMETER AND YAW ANGLE SENSOR > ACCELEROMETER AND YAW ANGLE SENSOR [2018-2022] > REMOVAL

**NOTE:** Removal steps in this procedure may contain installation details.


Remove relevant side wheel. Refer to: WHEELS

## COOLANT LEVEL SENSOR, ELECTRIC DRIVETRAIN > COOLANT LEVEL SENSOR, ELECTRIC DRIVETRAIN [2021-2022, E400V6] > REMOVAL


Drain cooling system electric powertrain, draining, filling, and bleeding. Refer to: ELECTRIC DRIVETRAIN COOLING SYSTEM, DRAINING, FILLING, AND BLEEDING

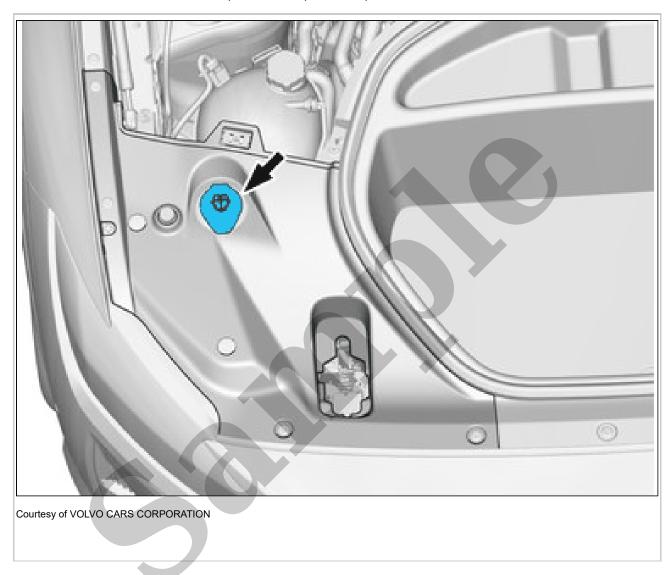

Remove the marked part.

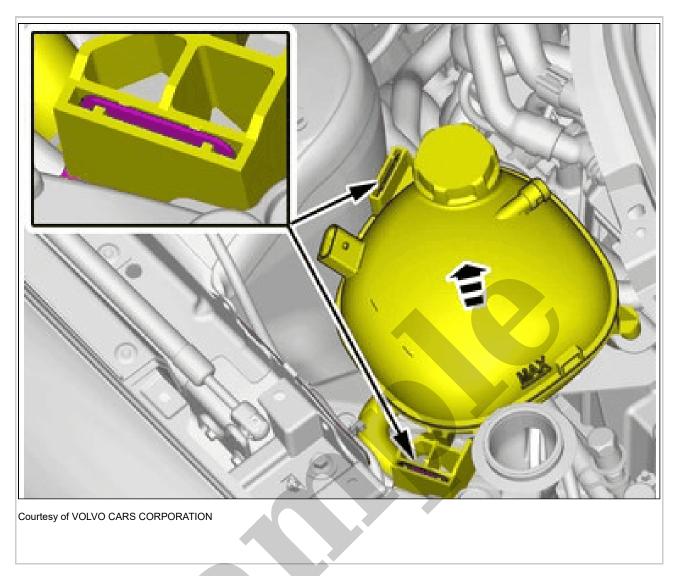

Lift the marked component up

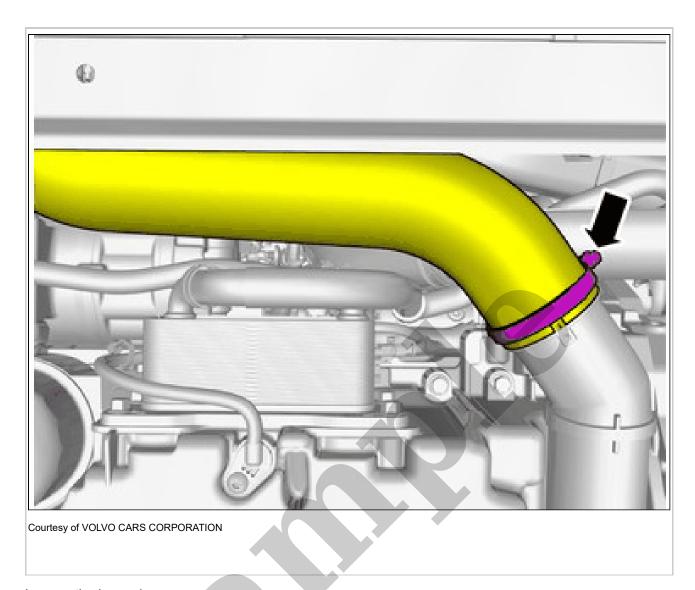

Loosen the hose clamp.

Loosen the component indicated. Do not remove it.