


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1996 FORD Bronco OEM Service and Repair Workshop Manual

[Go to manual page](#)

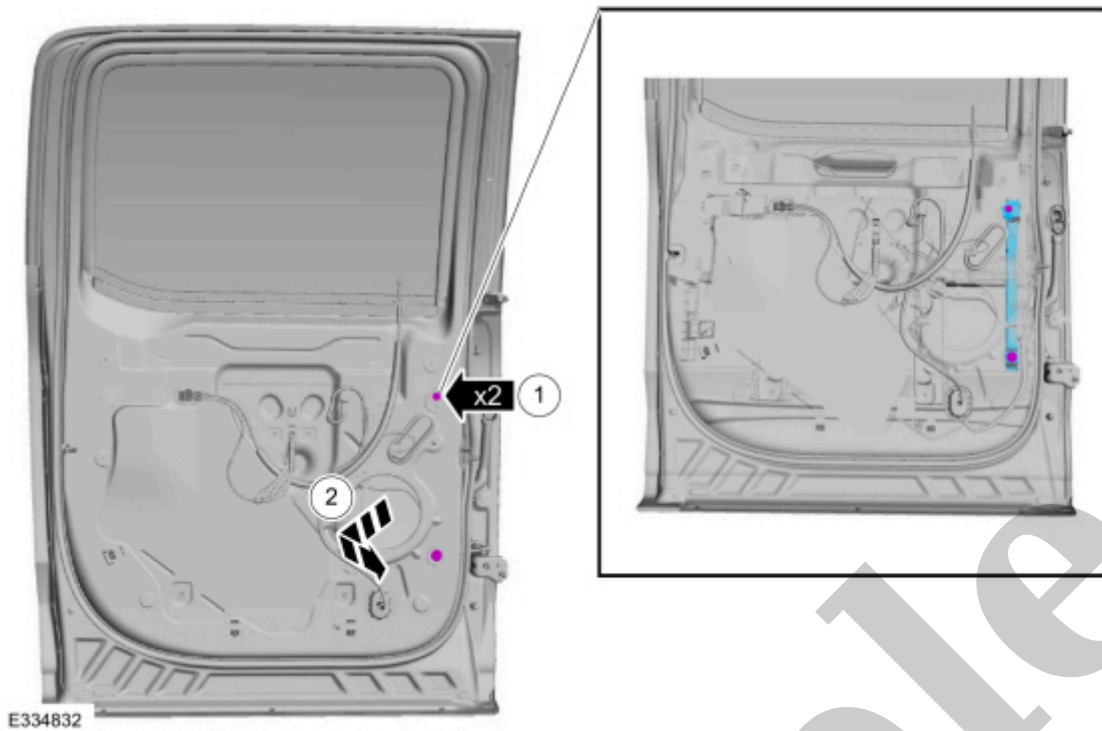

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.


Copyright © Ford Motor Company



E336723

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. Lower the rear door window glass to the full down position.
 1. Connect the rear door window control switch.
 2. Lower the rear door window glass to the full down position.
 3. Remove the rear door window control switch.

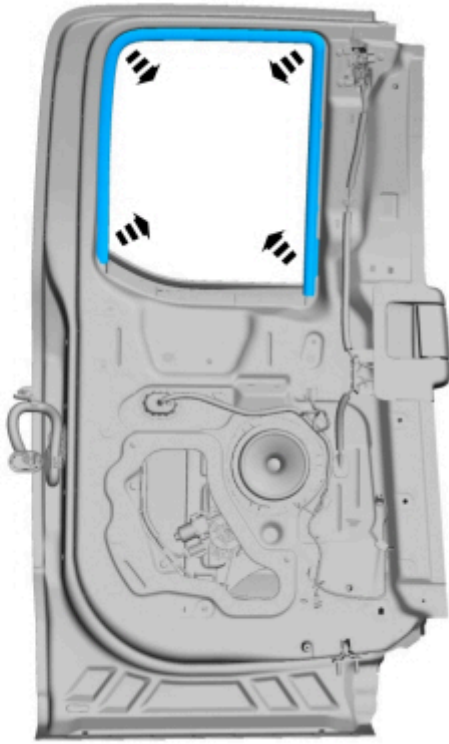

E336779

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company


Sample

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Remove the rear door trim panel.

Refer to: [Rear Door Trim Panel - SuperCrew](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Remove the rear door inner belt moulding.

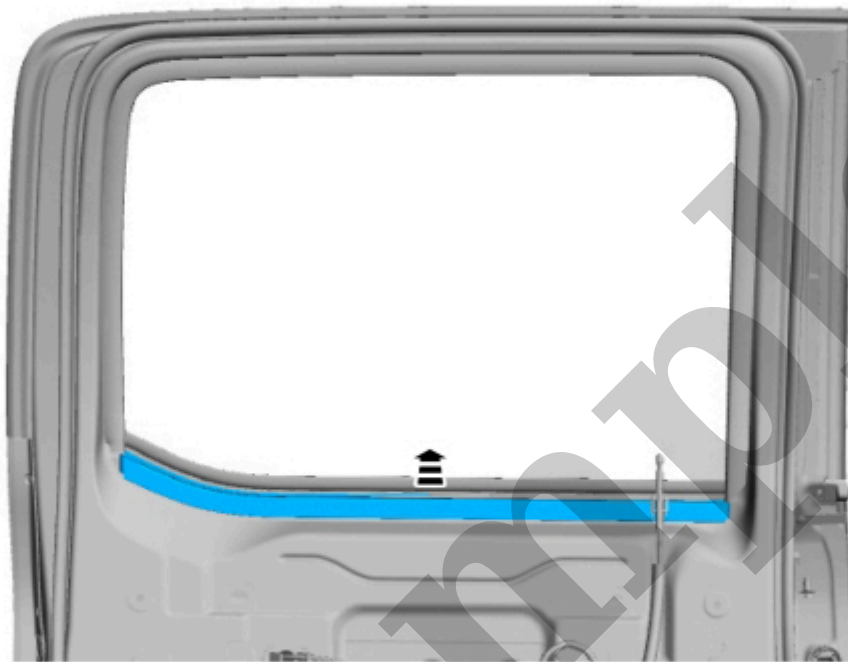

E336817

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. Remove the rear door outer belt moulding.


1. Remove the rear door outer belt moulding screw.

2. Remove the rear door outer belt moulding.

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Sample

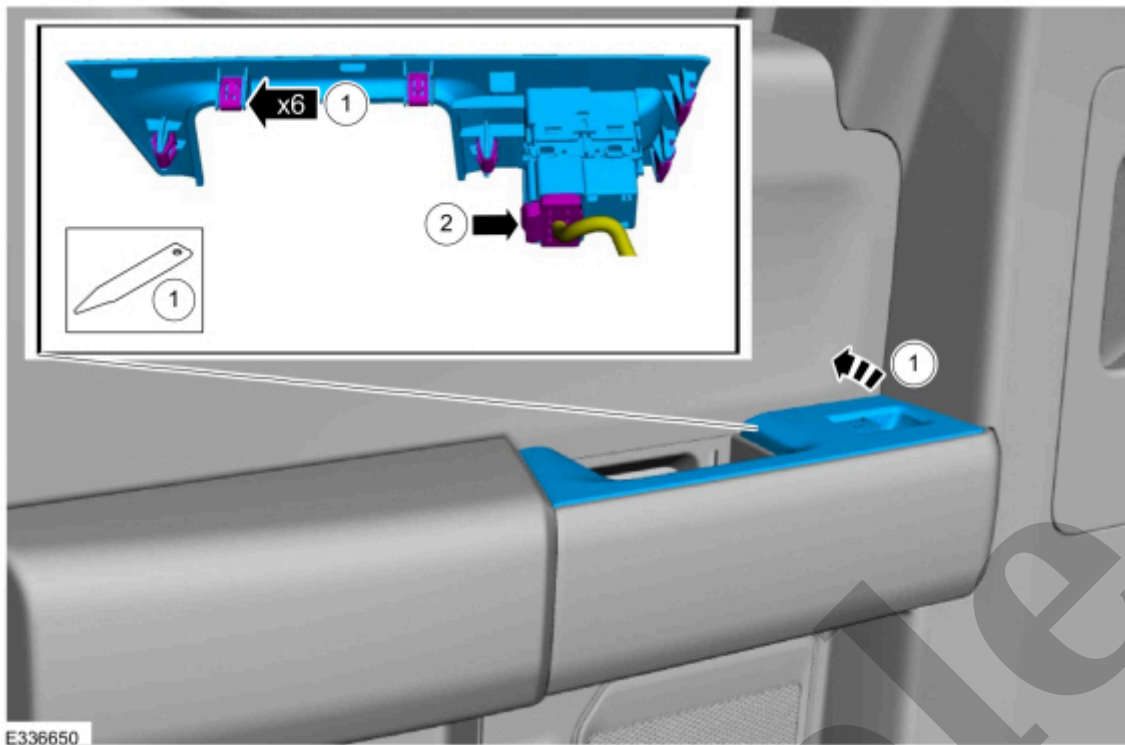

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. NOTE

This step is only necessary when installing a new component.

Remove the rear door window control switch from the bezel assembly.

1. Release the locking tabs from the rear door window control switch.
2. Remove the rear door window control switch from the bezel assembly.

Rear Door Window Control Switch - SuperCrew, Vehicles With: Rear Power Windows

<i>501-11 Glass, Frames and Mechanisms</i>	<i>2022 F-150</i>
<i>Removal and Installation</i>	<i>Procedure revision date: 10/31/2022</i>



Rear Door Window Control Switch - SuperCrew, Vehicles With: Rear Power Windows

Removal

NOTE

Left hand (LH) shown, right hand (RH) similar.

1. Remove the rear door window control switch bezel assembly.
 1. Starting from the front, release the locking tabs from the rear door window control switch bezel assembly.
Use the General Equipment: Interior Trim Remover
2. Disconnect the electrical connector and remove the rear door window control switch bezel assembly.

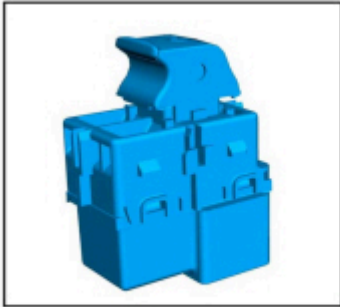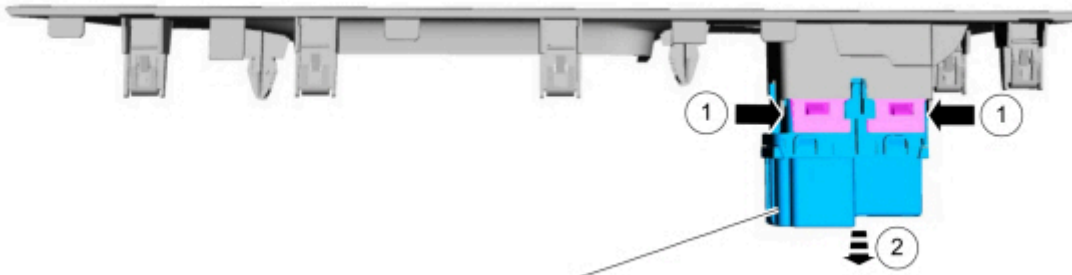

E336639

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Sample



E336723

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. NOTE

The rear door shown transparent for clarity.

Remove the bolts and aft rear door glass run and bracket.

Torque : 93 lb.in (10.5 Nm)