

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 1996 NISSAN Prairie OEM Service and Repair Workshop Manual

[Go to manual page](#)

DTC	Fail-safe condition
C1067-07	
C1067-09	
C1067-11	
C1067-12	
C1067-13	
C1067-1C	
C1067-38	
C1067-4A	
C1067-64	
C1067-92	
C1068-95	
C1069-95	
C106A-04	
C106A-55	
C106A-62	
C106A-64	
C106A-95	
C106B-64	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
C106C-01	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> </ul>
C106C-02	<ul style="list-style-type: none"> <li>• TCS function</li> </ul>
C106C-16	<ul style="list-style-type: none"> <li>• hill start assist function</li> </ul>
C106C-17	<ul style="list-style-type: none"> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C106C-64	<ul style="list-style-type: none"> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
C106E-54	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> </ul>

DTC	Fail-safe condition
C106E-55	<ul style="list-style-type: none"> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C106E-64	<ul style="list-style-type: none"> <li>• Brake assist function</li> <li>• Brake force distribution function</li> </ul>
C106F-54	<ul style="list-style-type: none"> <li>• Cooperative regenerative brake function</li> </ul>
C1070-01	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> </ul>
C1070-54	<ul style="list-style-type: none"> <li>• TCS function</li> </ul>
C1070-64	<ul style="list-style-type: none"> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1071-54	<ul style="list-style-type: none"> <li>• Brake assist function</li> <li>• Brake force distribution function</li> </ul>
C1071-61	<ul style="list-style-type: none"> <li>• Cooperative regenerative brake function</li> </ul>
C1071-64	<ul style="list-style-type: none"> <li>• Electric parking brake function</li> </ul>
C1072-01	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> </ul>
C1072-64	<ul style="list-style-type: none"> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> </ul>
C1072-83	<ul style="list-style-type: none"> <li>• Cooperative regenerative brake function</li> </ul>

DTC	Fail-safe condition
C1076-55	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• ABS function</li> <li>• EBD function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
C1077-55	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
C1077-92	Normal control
C1078-55	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• Electric parking brake function</li> </ul>
C1079-55	Normal control
C107A-55	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
C107B-53	Normal control

DTC	Fail-safe condition
C107C-53	
C1080-86	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1082-86	<ul style="list-style-type: none"> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
C1083-86	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1085-86	<ul style="list-style-type: none"> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> </ul>
C1086-86	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
C1087-86	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> </ul>

DTC	Fail-safe condition
	<ul style="list-style-type: none"> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
C1088-86	Normal control
C1090-86	
C1092-86	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
C1094-86	<ul style="list-style-type: none"> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
C1095-86	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake force distribution function</li> <li>• Electric parking brake function</li> </ul>
C1096-86	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• hill start assist function</li> <li>• Electric parking brake function</li> </ul>
C1098-86	Normal control
C10AA-63	
C10AC-54	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
C10AD-04	Normal control

DTC	Fail-safe condition
C10AF-01	
C10B0-01	
C10B0-09	
C10B1-01	
C10B1-09	
C10B2-01	
C10B2-64	
C10B3-44	
C10B3-49	
C10B3-53	The following functions are suspended. <ul style="list-style-type: none"> <li>• Electric parking brake function</li> </ul>
C10B3-55	
C10B3-68	
C10B4-98	
C10B5-76	
C10B6-68	
C10B7-16	
C10B7-17	
C10B8-77	
C10B9-77	
U0073-00	The following functions are suspended. <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> </ul>
U0073-88	
U0076-00	<ul style="list-style-type: none"> <li>• Brake assist function</li> <li>• Brake force distribution function</li> </ul>
U0076-88	<ul style="list-style-type: none"> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
U2112-87	
U2140-87	Normal control

DTC	Fail-safe condition
U2143-87	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> </ul>
U214E-87	Normal control
U214F-87	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
U2152-87	Normal control
U2154-87	Normal control
U2156-87	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> </ul>
U215B-87	Normal control
U2212-87	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• hill start assist function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
U2240-87	The following functions are suspended.

DTC	Fail-safe condition
	<ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
U2241-87	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• hill start assist function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
U2243-87	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> <li>• Electric parking brake function</li> </ul>
U224E-87	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• VDC function</li> <li>• TCS function</li> <li>• hill start assist function</li> <li>• Brake limited slip differential (BLSD) function</li> <li>• Brake assist function</li> <li>• Brake force distribution function</li> <li>• Cooperative regenerative brake function</li> </ul>
U2252-87	Normal control
U225B-87	<p>The following functions are suspended.</p> <ul style="list-style-type: none"> <li>• hill start assist function</li> <li>• Electric parking brake function</li> </ul>
U2275-87	Normal control

DTC	Fail-safe condition
U2276-87	

Sample