


## Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1996 VOLVO 850 R OEM Service and Repair Workshop Manual

Go to manual page

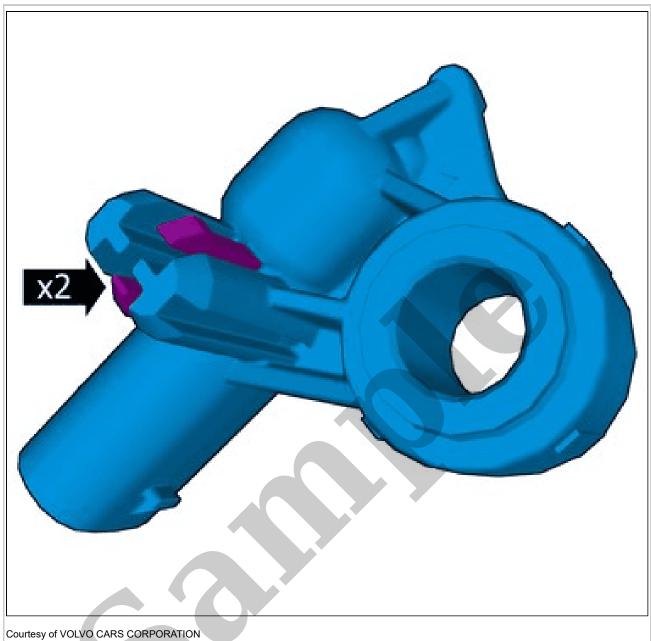

**NOTE:** The graphic shows the back of the component before removal.

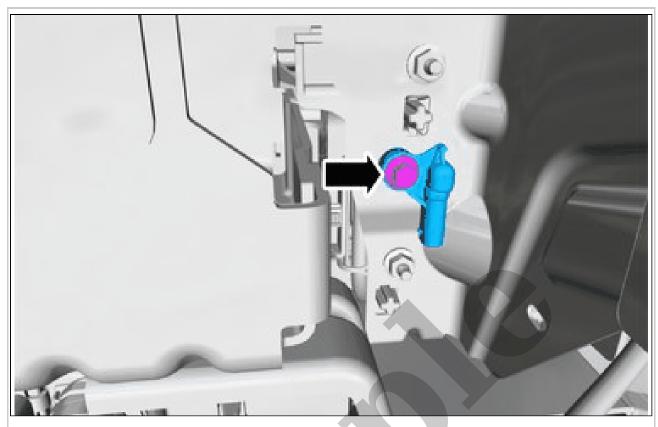

Courtesy of VOLVO CARS CORPORATION

Torque: Impact sensor to body, 10Nm

Remove the screw.

Remove the marked part.

## IMPACT SENSOR, FRONT > IMPACT SENSOR, FRONT [2021-2022, E400V6] > INSTALLATION

To install, reverse the removal procedure.


Perform supplemental restraint system (SRS), post check. Refer to: SUPPLEMENTARY RESTRAINT SYSTEM

## IMPACT SENSOR, FRONT > IMPACT SENSOR, FRONT [2018-2021 | 2021-2022, B4204T18; B4204T47] > REMOVAL

**NOTE:** Removal steps in this procedure may contain

installation details.

Perform battery disconnecting and connecting. Refer to: BATTERY DISCONNECTING AND CONNECTING

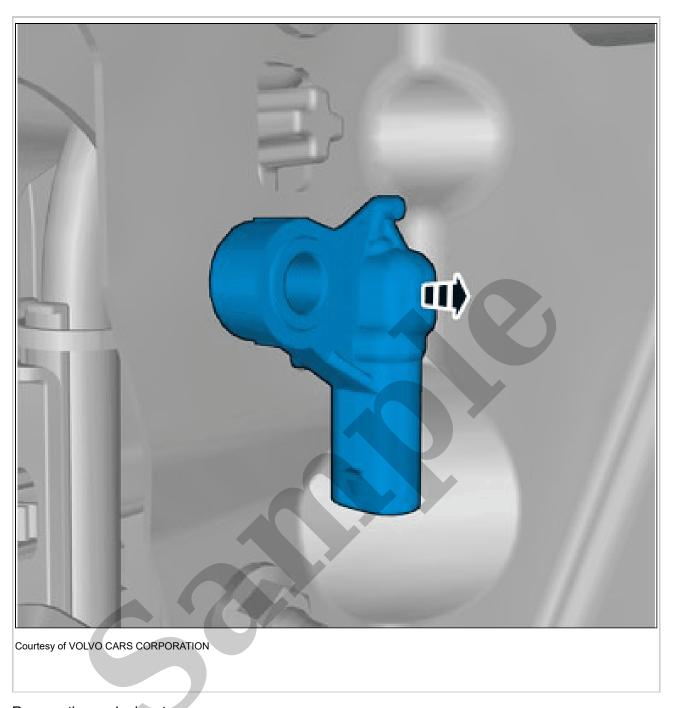

Remove the marked part.

## **APPLIES TO THE LEFT-HAND SIDE:**


Remove the air filter housing. Refer to: AIR CLEANER HOUSING

**NOTE:** Removal steps in this procedure may contain installation details.

Remove panel side door front. Refer to: PANEL FRONT DOOR
Perform battery disconnecting and connecting. Refer to: BATTERY DISCONNECTING AND
CONNECTING


**WARNING:** The supplemental restraint system (SRS) is active for a certain length of time after the power supply has been disconnected. Wait for a minimum of 30 seconds before disconnecting or removing any SRS components.



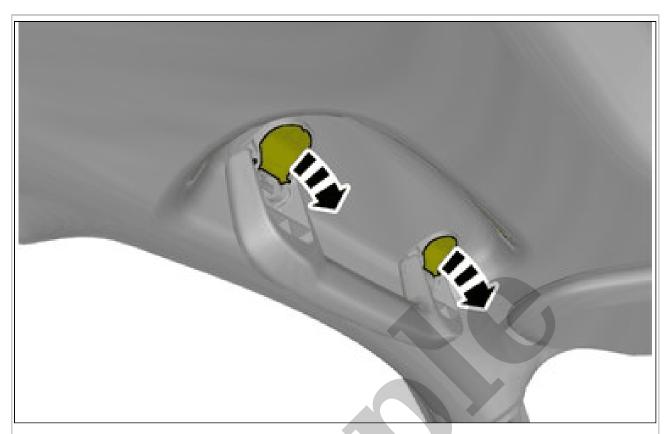

Courtesy of VOLVO CARS CORPORATION

Fold marked part aside. On both sides.

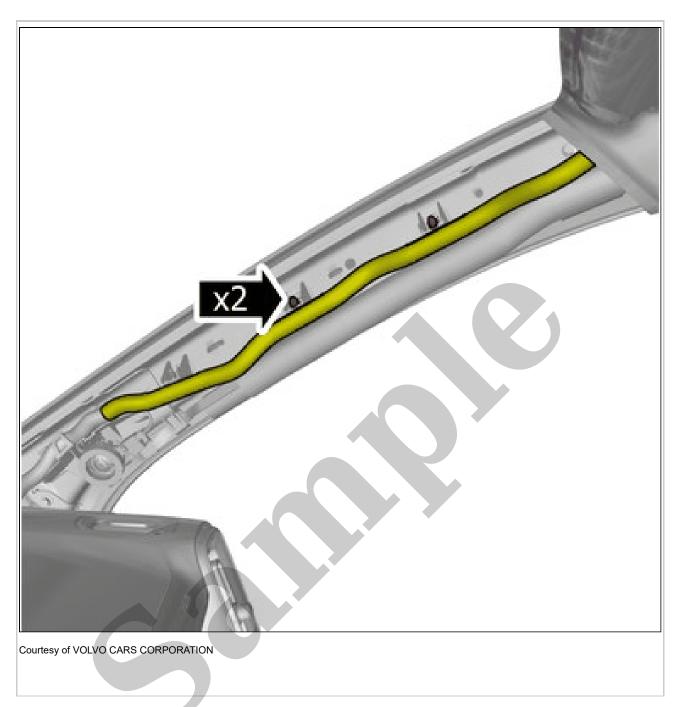

Remove the cable harness clips. **ON BOTH SIDES.** 




**NOTE:** The graphic shows the back of the component before removal.



Loosen the screws.

**VEHICLES WITH ROOF OPENING PANEL** 

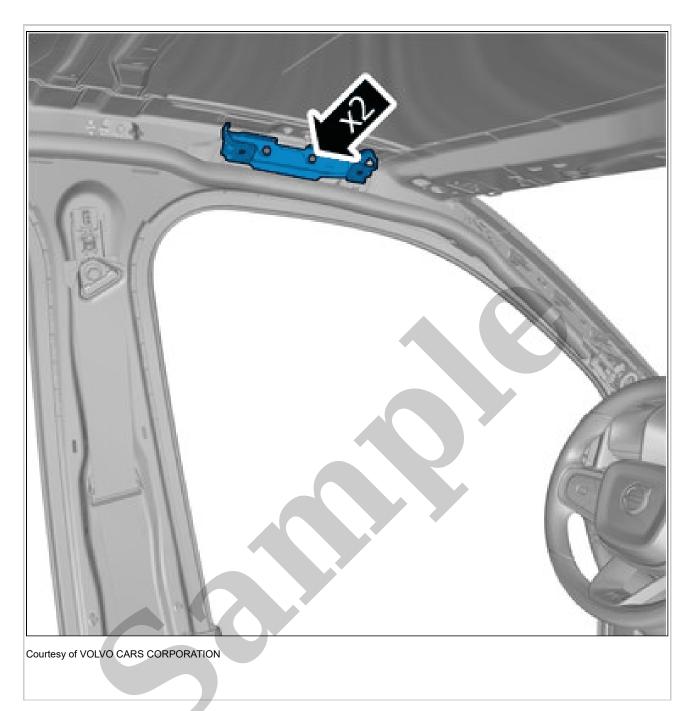

Torque: Entry handle bracket, to Body, 7Nm

Remove the screws.
Remove the marked part.

Dismantle the connector ignition cable. Refer to: IGNITER WIRE CONNECTOR