

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1997 CHEVROLET Express OEM Service and Repair Workshop Manual

[Go to manual page](#)

K9 Body Control Module X1

K9 Body Control Module X2

K9 Body Control Module X3

K9 Body Control Module X4

K9 Body Control Module X5

K9 Body Control Module X6

K9 Body Control Module X7

B27E B27E Door Handle Switch - Driver Interior

Driver Door Trim Panel Components

B27E Door Handle Switch - Driver Interior

K84 K84 Keyless Entry Control Module

Middle of Luggage Compartment Components

K84 Keyless Entry Control Module X1

K84 Keyless Entry Control Module X2

K84 Keyless Entry Control Module X3

K84 Keyless Entry Control Module X4

B27F B27F Door Handle Switch - Passenger Interior

Passenger Door Trim Panel Components

B27F Door Handle Switch - Passenger Interior

7040_RD/GY 7040 RD/GY

CAV_3 3

CAV_23 23

SD Serial Data

1150 Ground

1150_BK 1150 BK

CAV_6 6

CONN_X2 X2

CAV_18 18

CONN_X4 X4

5790 Liftgate Latch Cinch Motor Open Control

5790_BN 5790 BN

CAV_1 1

5791 Liftgate Latch Cinch Motor Close Control

5791_L-BU/GY 5791 L-BU/GY

CAV_3 3

6000 Liftgate Ajar Switch Signal 2

6000_L-BU/BK 6000 L-BU/BK

CAV_6 6

3987 Liftgate Latch Cinch Signal

3987_VT/L-GN 3987 VT/L-GN

CAV_4 4

5801 Liftgate Object Sensor Low Reference

5801_BK/VT 5801 BK/VT

3988 Detent Liftgate Signal

3988_YE 3988 YE

CAV_5 5

3016 Liftgate Latch Cinch Motor Low Reference

3016_GY 3016 GY

CAV_1 1

CAV_2 2

305 Rear Compartment Lid Key Switch Signal

305_BN/VT 305 BN/VT

305_BN/VT 305 BN/VT

CAV_35 35

305_BN/VT 305 BN/VT

CAV_14 14

CONN_X1 X1

CAV_1 1

1850 Ground

1850_BK 1850 BK

CAV_2 2

CAV_2 2

Data_Communication_Schematics_REF Data Communication Schematics

[Data Communication Schematics](#)

[Master Electrical Component List](#)

[Control Module References](#)

5060_GN 5060 GN

G301 G301

[G301](#)

[G301, G304](#)

F26RA F26RA 10A

[F6RA, F8RA, F9RA, F11RA, F17RA, F18RA, F25RA, F26RA, F27RA, F28RA, and F31RA Fuses](#)

[X53A Fuse Block - Rear Body Top View](#)

F31RA F31RA 15A

[F6RA, F8RA, F9RA, F11RA, F17RA, F18RA, F25RA, F26RA, F27RA, F28RA, and F31RA Fuses](#)

[X53A Fuse Block - Rear Body Top View](#)

TWIST_9 9

[S38 Ignition Mode Switch and KR76 Retained Accessory Power Relay](#)

[X50A Fuse Block - Underhood Top View](#)

K39 K39 Liftgate Control Module

[Middle of Luggage Compartment Components](#)

[K39 Liftgate Control Module X1](#)

[K39 Liftgate Control Module X2](#)

A90 A90 Logic

P9 P9 Driver Information Center Display

P16 P16 Instrument Cluster

[Front of Instrument Panel Components](#)

[P16 Instrument Cluster X1](#)

[P16 Instrument Cluster X2](#)

X53A X53A Fuse Block - Rear Body

[Middle of Luggage Compartment Components](#)

[X53A Fuse Block - Rear Body X1](#)

[X53A Fuse Block - Rear Body X2](#)

[X53A Fuse Block - Rear Body X3](#)

[X53A Fuse Block - Rear Body X4](#)

M40 M40 Rear Compartment Lid Latch

[Middle of Luggage Compartment Components](#)

[M40 Rear Compartment Lid Latch](#)

W7 W7 Blunt Cut - Shield

S58A S58A Rear Compartment Lid Unlatch Switch - Exterior

[Rear of Vehicle Components](#)

[S58A Rear Compartment Lid Unlatch Switch - Exterior](#)

S48C S48C Multifunction Switch 1 - Instrument Panel

[Front of Instrument Panel Components](#)

[S48C Multifunction Switch 1 - Instrument Panel](#)

B85 B85 Rear Compartment Lid Key Cylinder Switch

[Rear of Vehicle Components](#)