

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1998 CHEVROLET Blazer 3 doors OEM Service and Repair Workshop Manual

[Go to manual page](#)

CAV_13 13

1788 Traction Control Switch Signal 1

1788_L-BU/VT 1788 L-BU/VT

CAV_4 4

CAV_14 14

CONN_X2 X2

1450 Ground

1450_BK 1450 BK

CAV_6 6

6031 Brake Vacuum Sensor 5V Reference

6031_YE/RD 6031 YE/RD

CAV_5 5

6030 Brake Vacuum Sensor Signal

6030_YE/VT 6030 YE/VT

CAV_37 37

6032 Brake Vacuum Sensor Low Reference

6032_BK/YE 6032 BK/YE

CAV_32 32

2500_L-BU 2500 L-BU

CAV_26 26

2501_WH 2501 WH

CAV_14 14

6305 Brake Vacuum Switch Signal

6305_BN 6305 BN

CAV_3 3

SD Serial Data

Data_Communication_Schematics_REF Data Communication Schematics

[Data Communication Schematics](#)

[Isolated High Speed GMLAN](#)

[X50A Fuse Block - Underhood X4](#)

[X50A Fuse Block - Underhood X5](#)

[X50A Fuse Block - Underhood X6](#)

[X50A Fuse Block - Underhood X6 \(Starter Motor Harness\)](#)

P16 [P16 Instrument Cluster](#)

[Front of Instrument Panel Components](#)

[P16 Instrument Cluster X1](#)

[P16 Instrument Cluster X2](#)

P9 [P9 Driver Information Center Display](#)

K17 [K17 Electronic Brake Control Module](#)

[Left Side of Engine Compartment Components](#)

[K17 Electronic Brake Control Module](#)

A90 [A90 Logic](#)

Q5 [Q5 Brake Pressure Modulator](#)

K9 [K9 Body Control Module](#)

[Right Front of Passenger Compartment Components](#)

[K9 Body Control Module X1](#)

[K9 Body Control Module X2](#)

[K9 Body Control Module X3](#)

[K9 Body Control Module X4](#)

[K9 Body Control Module X5](#)

[K9 Body Control Module X6](#)

[K9 Body Control Module X7](#)

S48E [S48E Multifunction Switch - Center Console](#)

[Center Console Components \(MEK/MEL/MEP\)](#)

[Center Console Components \(M5U\)](#)

[S48E Multifunction Switch - Center Console](#)

Hydraulic_Brake_Schematics_REF [Hydraulic Brake Schematics](#)

Wheel Speed Sensors

CAV_2 2

[Master Electrical Component List](#)

[ABS Description and Operation](#)

[Control Module References](#)

[Stability Control](#)

[Module Power, Ground, and Subsystem References](#)

CAV_1 1

CAV_1 1

882 Right Rear Wheel Speed Sensor Signal

884 Left Rear Wheel Speed Sensor Signal

7128 Right Rear Wheel Speed Sensor Control

7127_GY/BK 7127 GY/BK

884_L-BU 884 L-BU

7128_GY/YE 7128 GY/YE

882_VT 882 VT

CAV_2 2

CAV_2 2

7127_GY/BK 7127 GY/BK

884_L-BU 884 L-BU

7128_GY/YE 7128 GY/YE

882_VT 882 VT

CAV_1 1

CAV_1 1

CAV_23 23

CAV_24 24

CAV_18 18

CAV_17 17

CAV_29 29

CAV_4 4

Engine Harness Routing - Right (LT1)

Manual Transmission Harness Routing

Automatic Transmission Harness Routing

X174 Engine Harness to Transmission Harness

K17 K17 Electronic Brake Control Module

Left Side of Engine Compartment Components

K17 Electronic Brake Control Module

B5LF B5LF Wheel Speed Sensor - Left Front

Left Side of Engine Compartment Components

B5LF Wheel Speed Sensor - Left Front

B5RF B5RF Wheel Speed Sensor - Right Front

Right Side of Engine Compartment Components

B5RF Wheel Speed Sensor - Right Front

B5RR B5RR Wheel Speed Sensor - Right Rear

B5RR Wheel Speed Sensor - Right Rear

B5LR B5LR Wheel Speed Sensor - Left Rear

B5LR Wheel Speed Sensor - Left Rear

Stability Control