


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1998 CHEVROLET Blazer 5 doors OEM Service and Repair Workshop Manual

[Go to manual page](#)

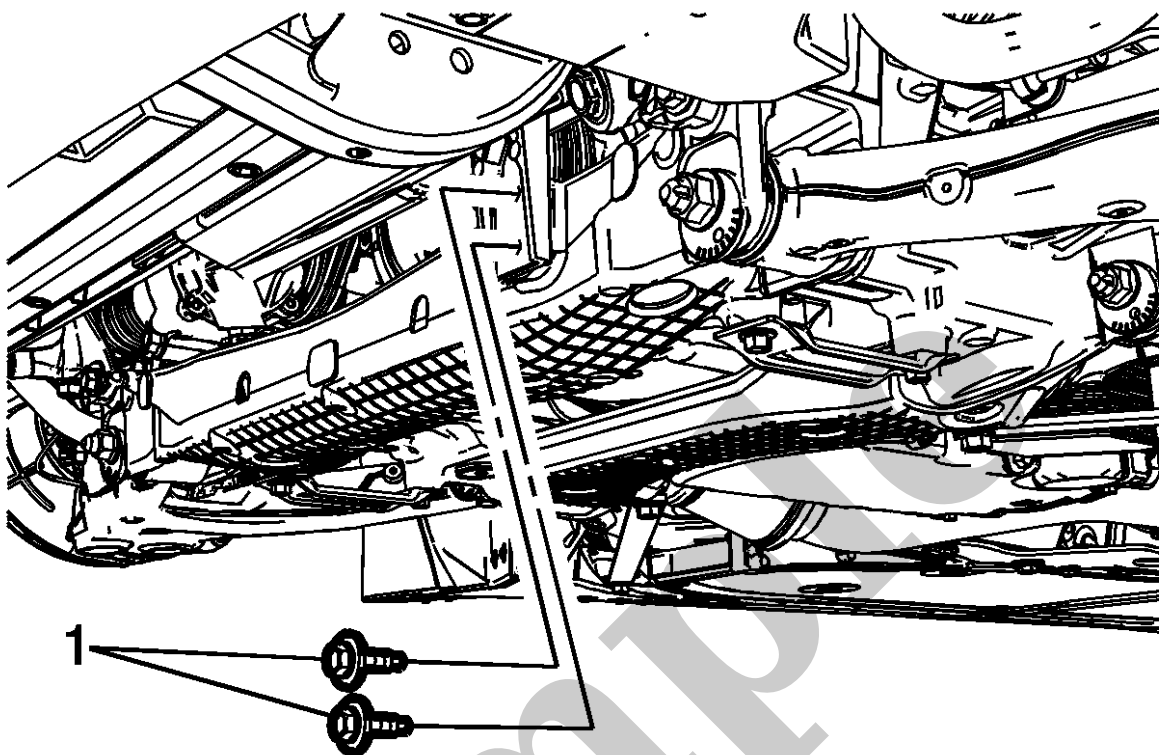

2.

CAUTION

Caution

Refer to [Fastener Caution](#).

Install the BPMV bracket bolts (1) and tighten to **27 N·m (20 lb ft)** .

3. Lower the vehicle.


YOUR CURRENT VEHICLE

Brake Pressure Modulator Valve Replacement

Brake Pressure Modulator Valve Replacement

Removal Procedure

1. Place the ignition in the OFF position.
2. Remove the air cleaner outlet duct. [Air Cleaner Outlet Duct Replacement](#)
3. Thoroughly clean the area surrounding the electronic brake control module (EBCM) to brake pressure modulator valve (BPMV) of any accumulated dirt and debris.
4. Disconnect the EBCM electrical connector.

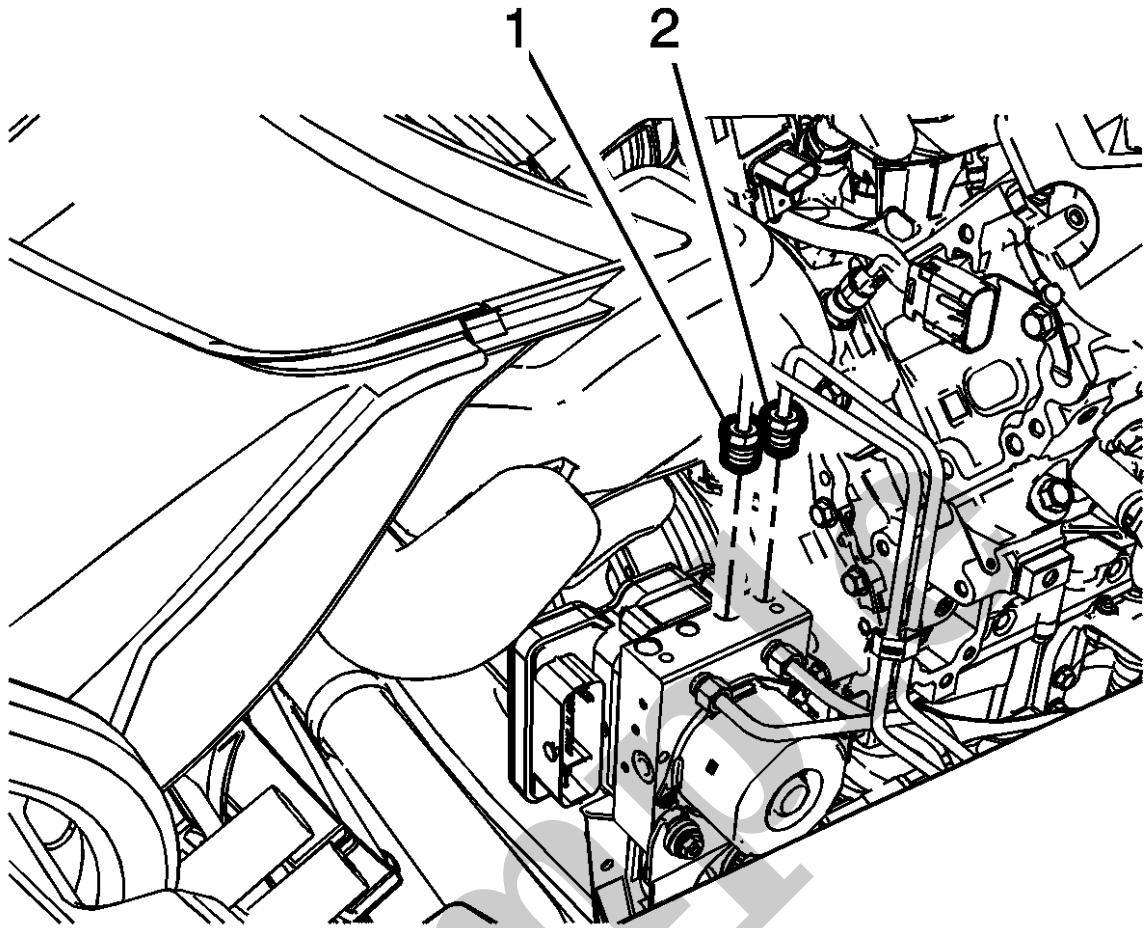


9.

Disconnect the left front brake pipe fitting nut (1).

10. Cap the brake pipe and plug the BPMV outlet port to prevent brake fluid loss and contamination.

11. Disconnect the right front brake pipe fitting nut (2).

12. Cap the brake pipe and plug the BPMV outlet port to prevent brake fluid loss and contamination.

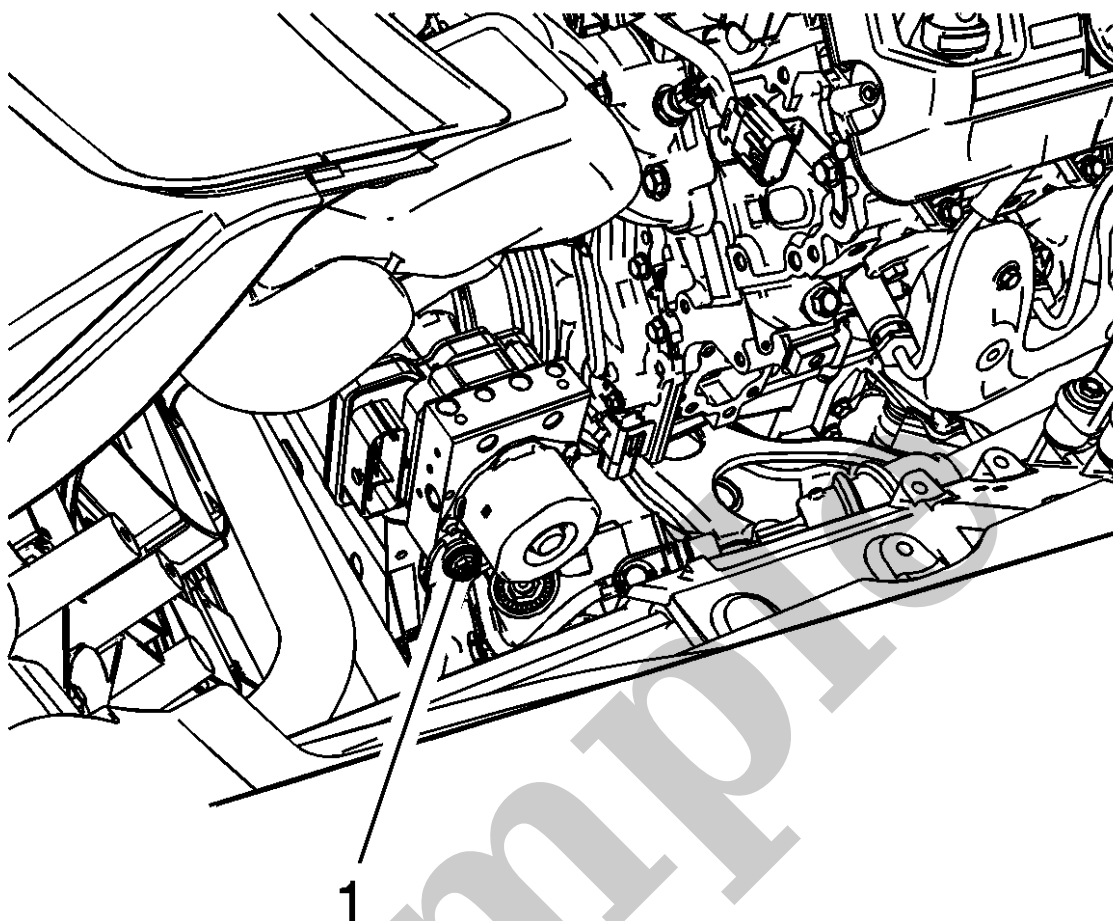

17.

NOTE

Note

It is not necessary to remove the BPMV assembly nuts.

Loosen the 2 BPMV assembly nuts (1).