


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1998 FORD F-150 Regular Cab OEM Service and Repair Workshop Manual

[Go to manual page](#)

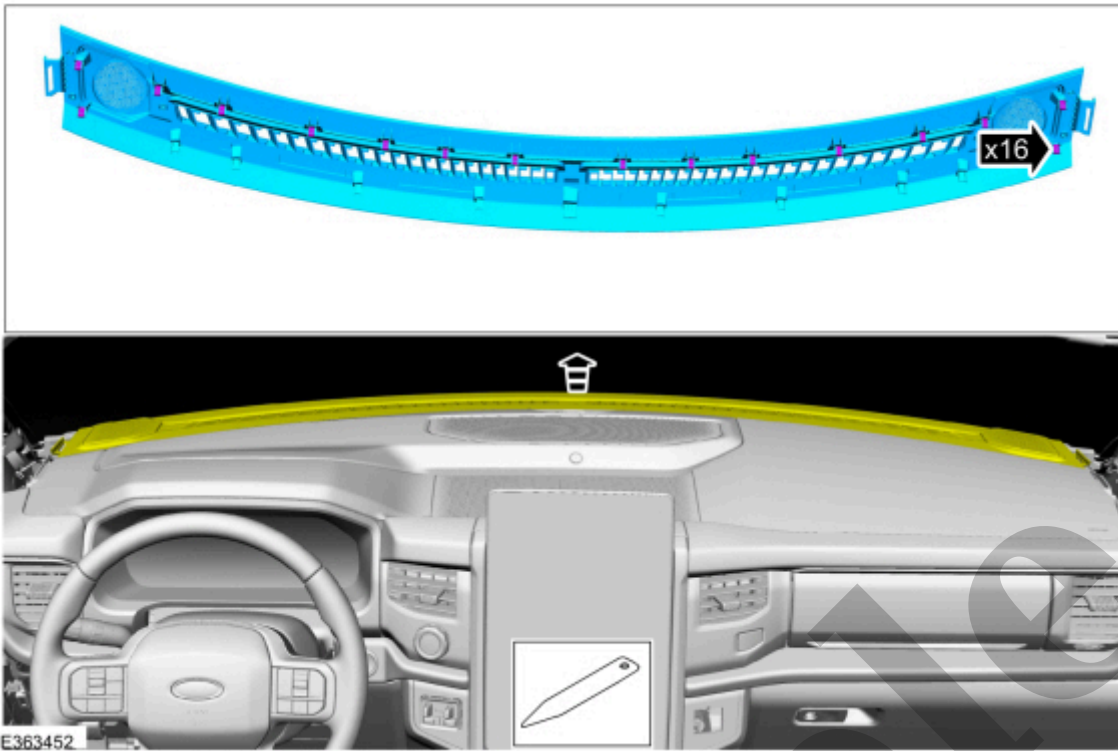

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Remove the floor console.

Refer to: [Floor Console](#)(501-12 Instrument Panel and Console, Removal and Installation).


4. Remove the information and entertainment display unit fastener cover.

1. Release the clips.

Use the General Equipment: Interior Trim Remover


2. If equipped.

6. Release the clips and remove the center display screen and bracket as an assembly.

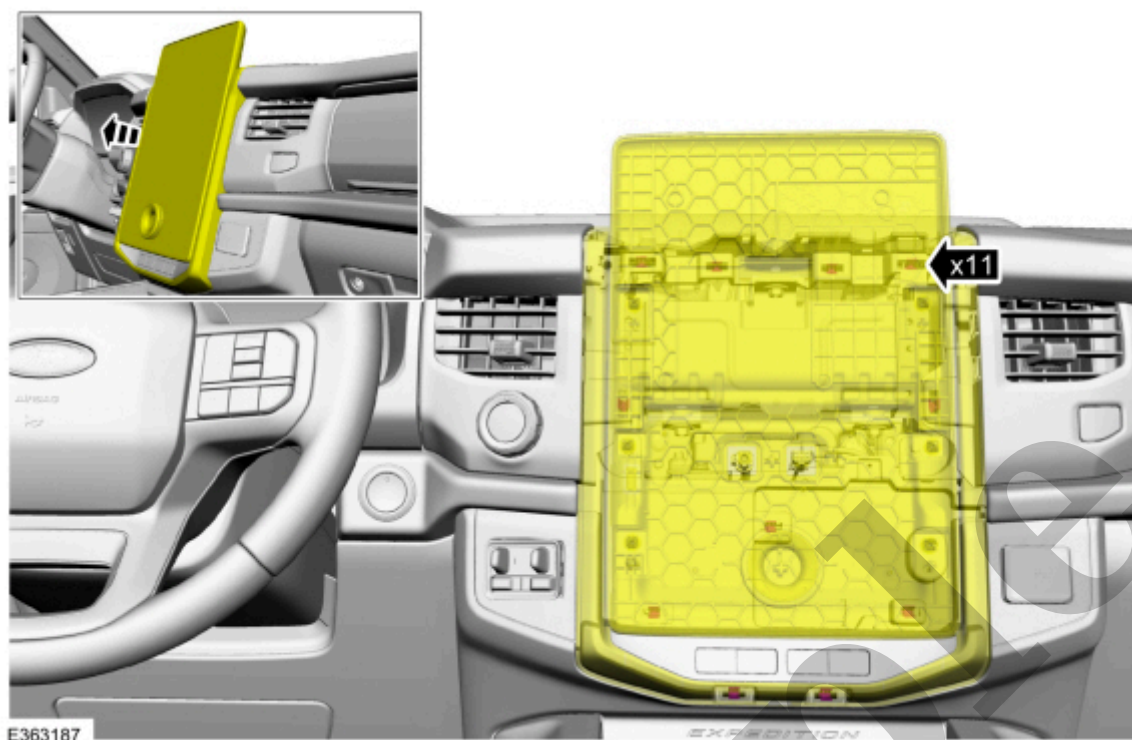

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

7. Disconnect the electrical connectors and remove the center display screen and bracket as an assembly.

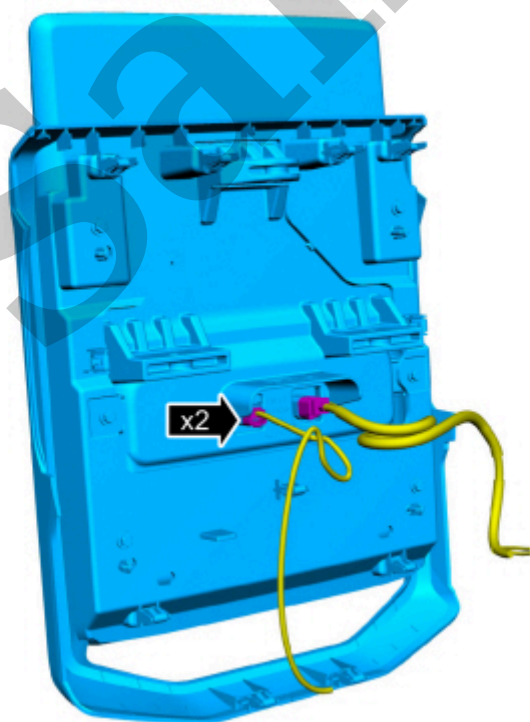


[Click here to learn about symbols, color coding, and icons used in this manual.](#)




[Click here to learn about symbols, color coding, and icons used in this manual.](#)

10. Remove the bolts.

Torque : 22 lb.in (2,5 Nm)

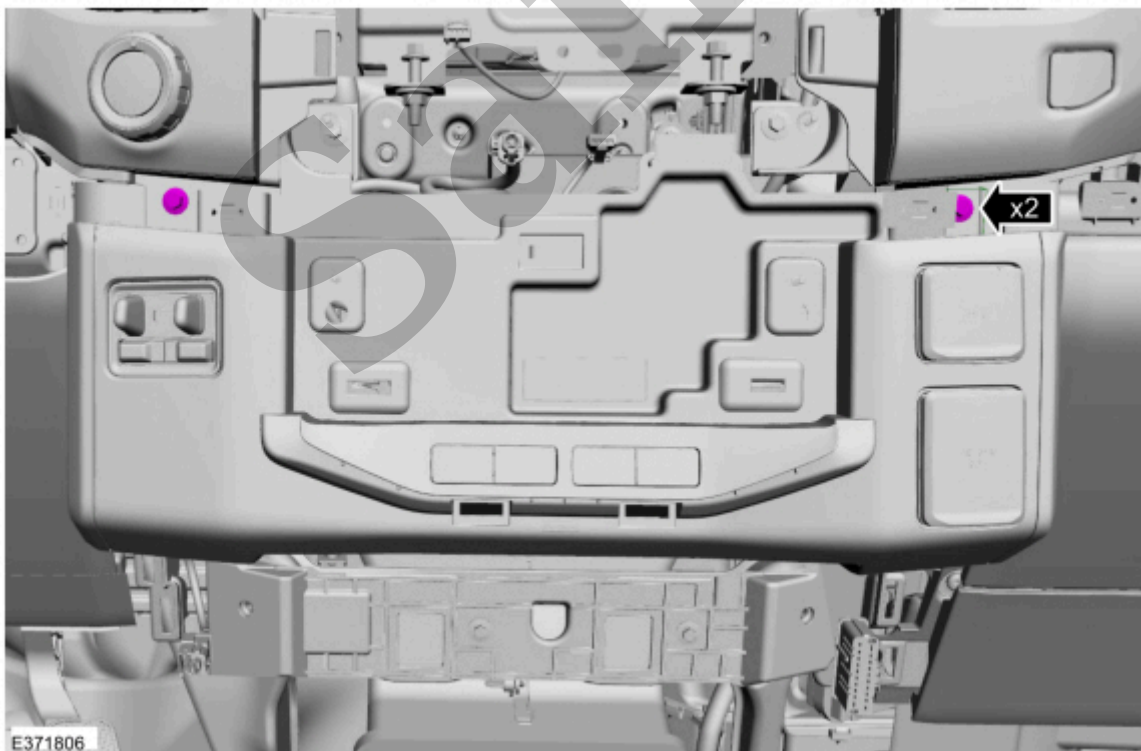

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

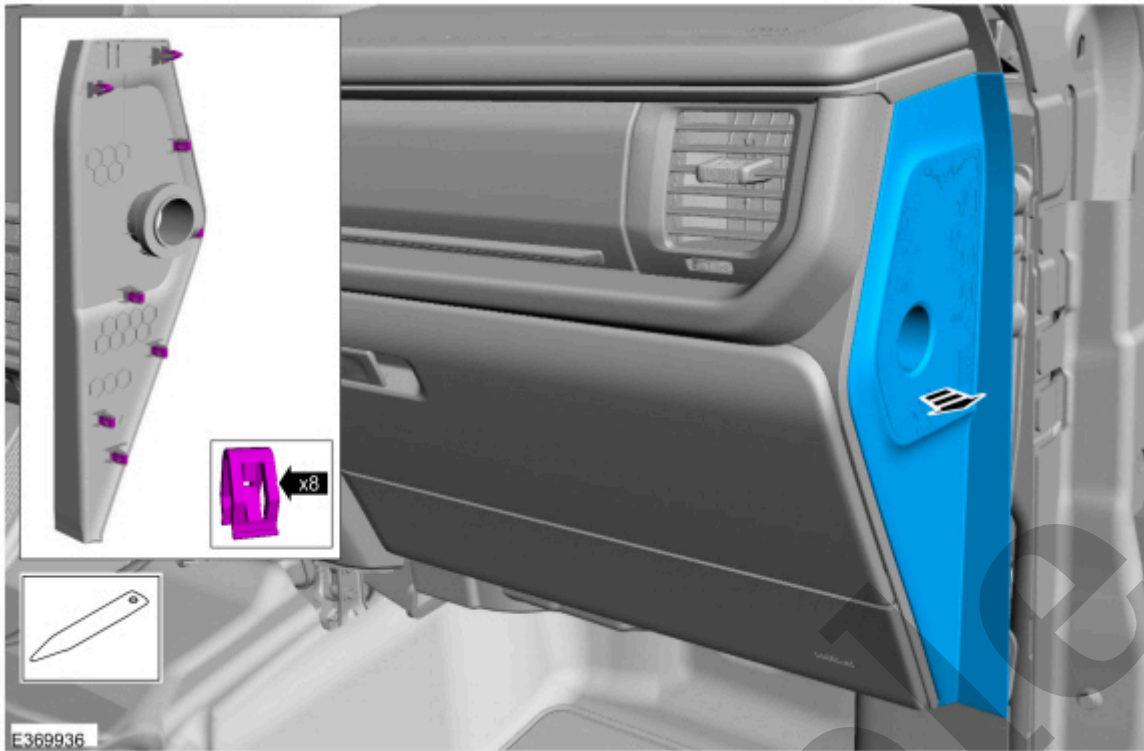


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

13. Remove the bolts, release the retainers and remove the RH (right-hand) instrument panel finish panel.

Use the General Equipment: Interior Trim Remover

Torque : 22 lb.in (2.5 Nm)



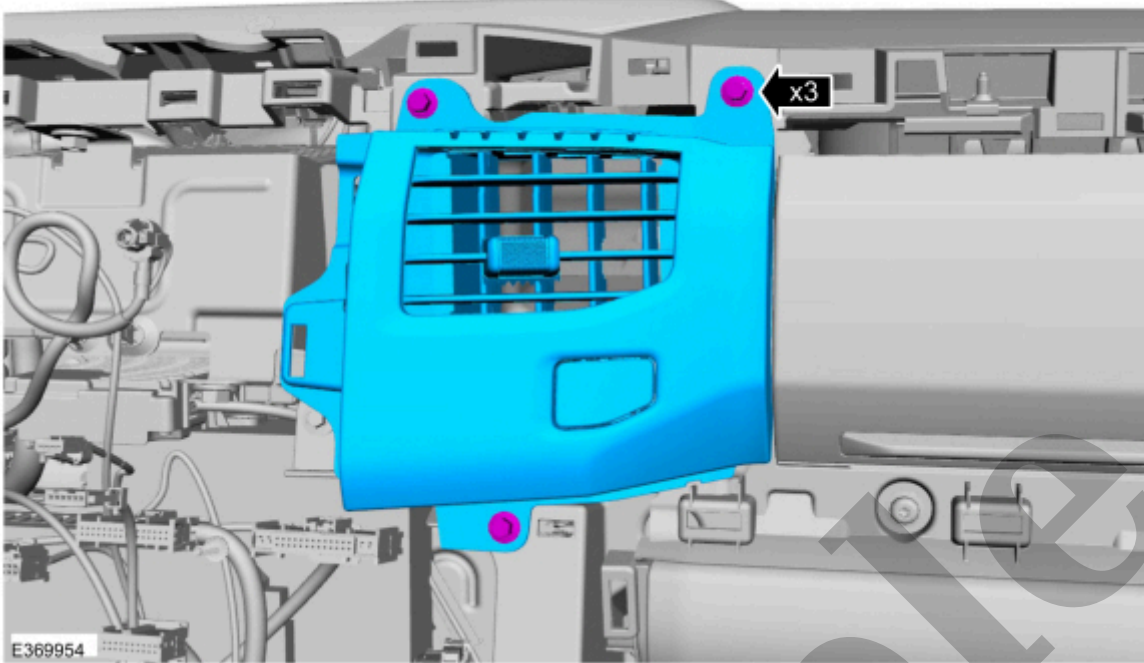



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

16. Remove the bolts, release the retainers and remove the storage bin assembly.

Use the General Equipment: Interior Trim Remover

Torque : 27 lb.in (3.0 Nm)

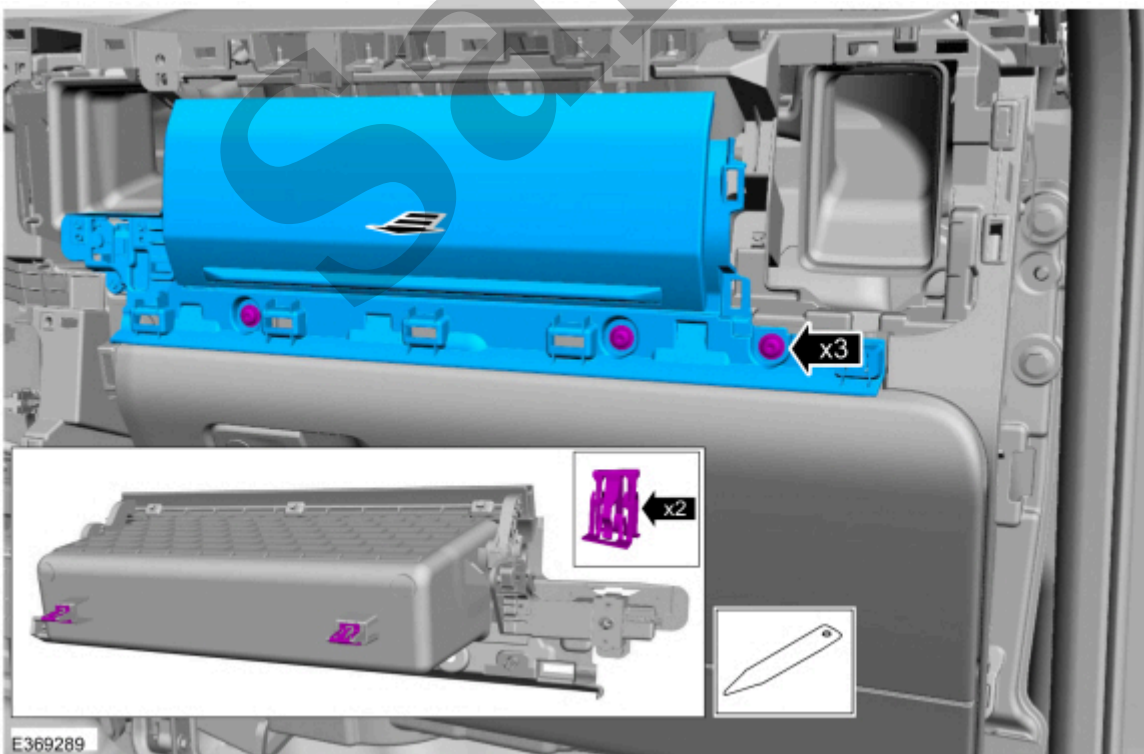


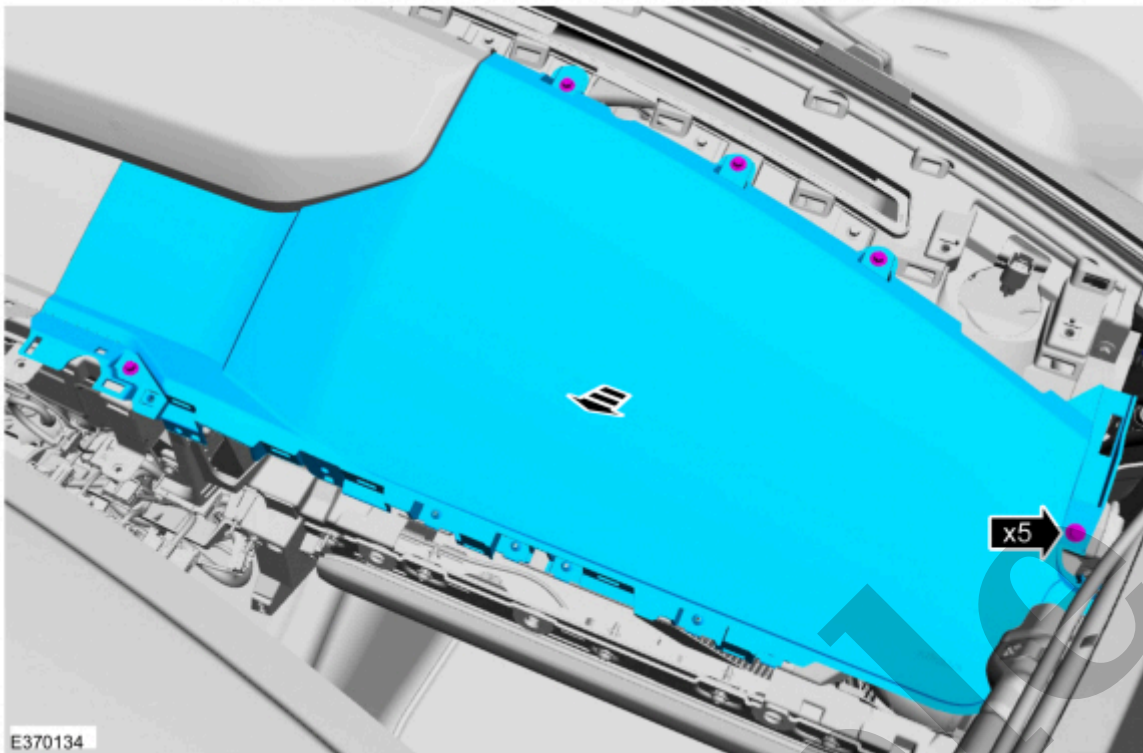


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

19. Remove the RH (right-hand) instrument panel upper section by lifting upward and inward.

- Disconnect the electrical connector.

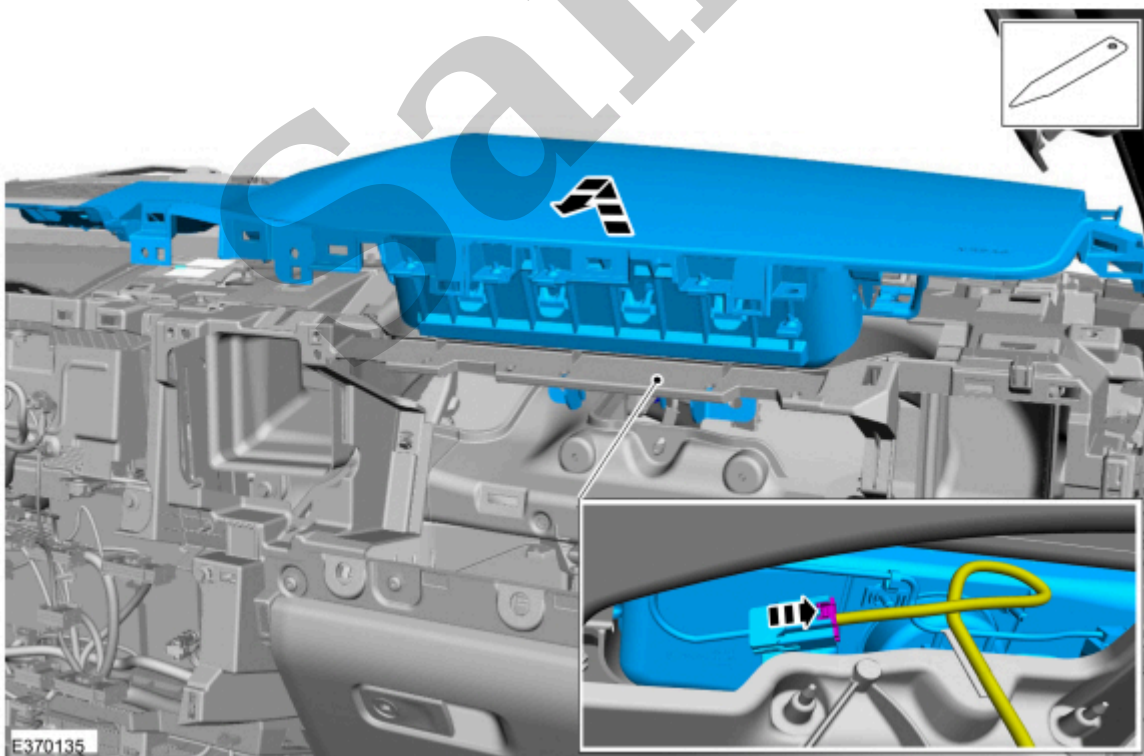


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

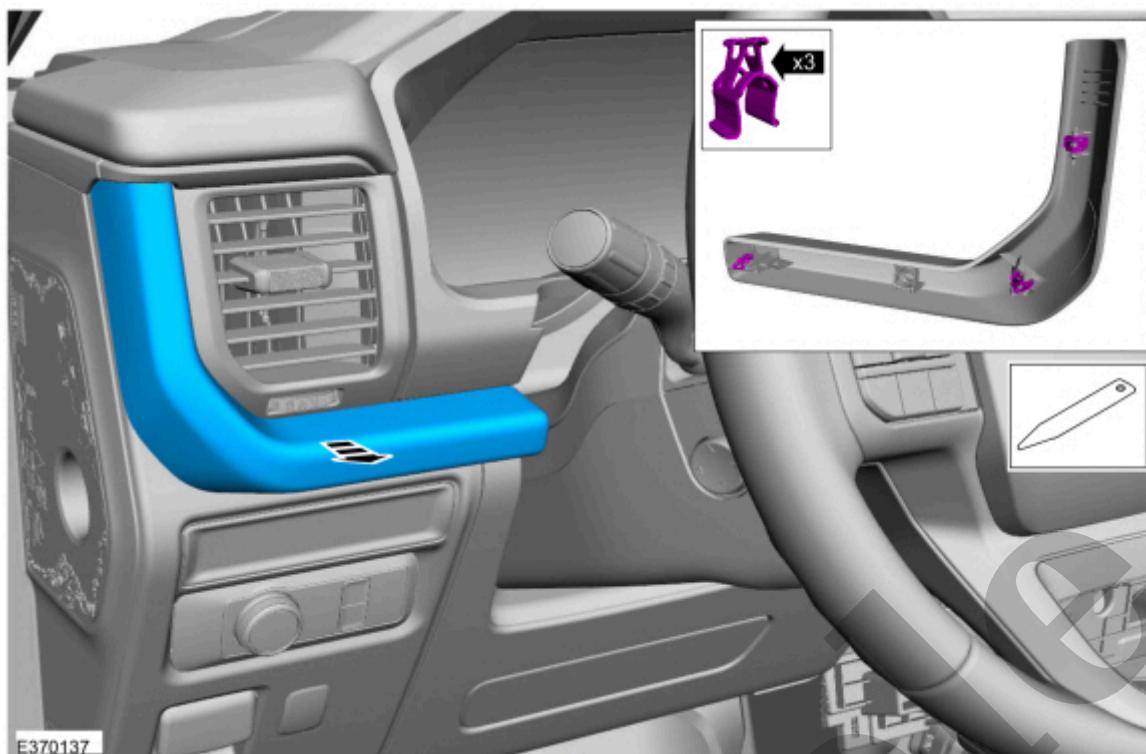


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

22. Release the retainers and remove the upper LH (left-hand) register trim panel.

Use the General Equipment: Interior Trim Remover

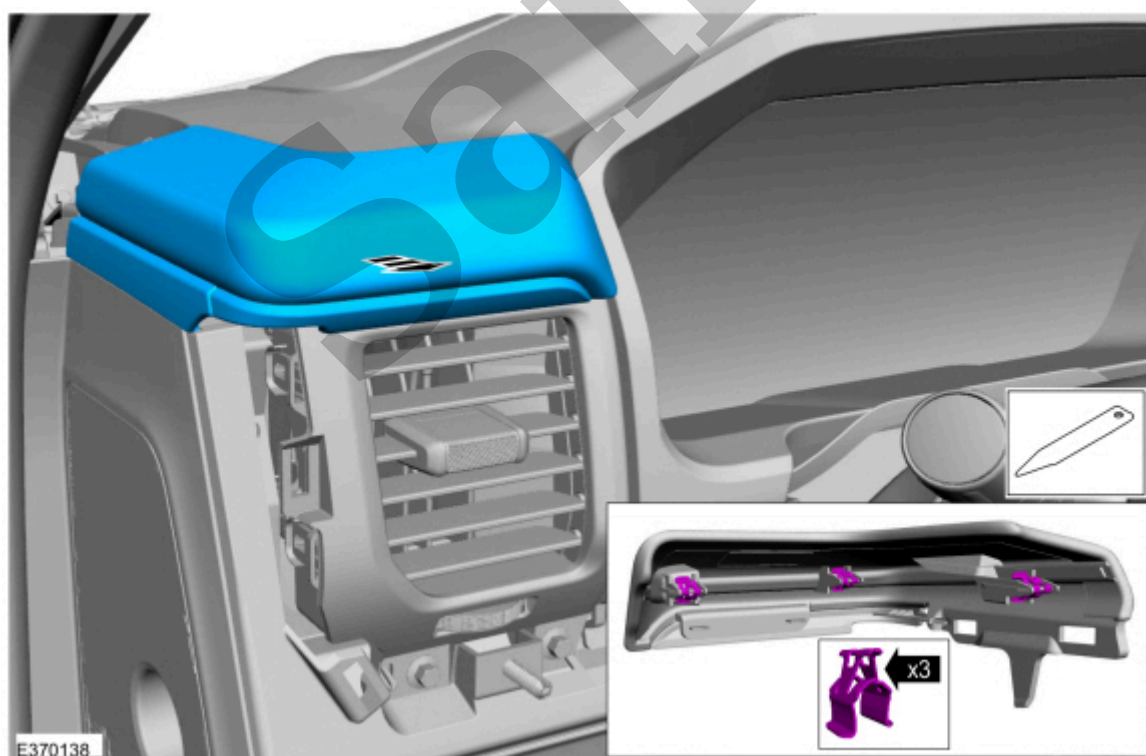

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

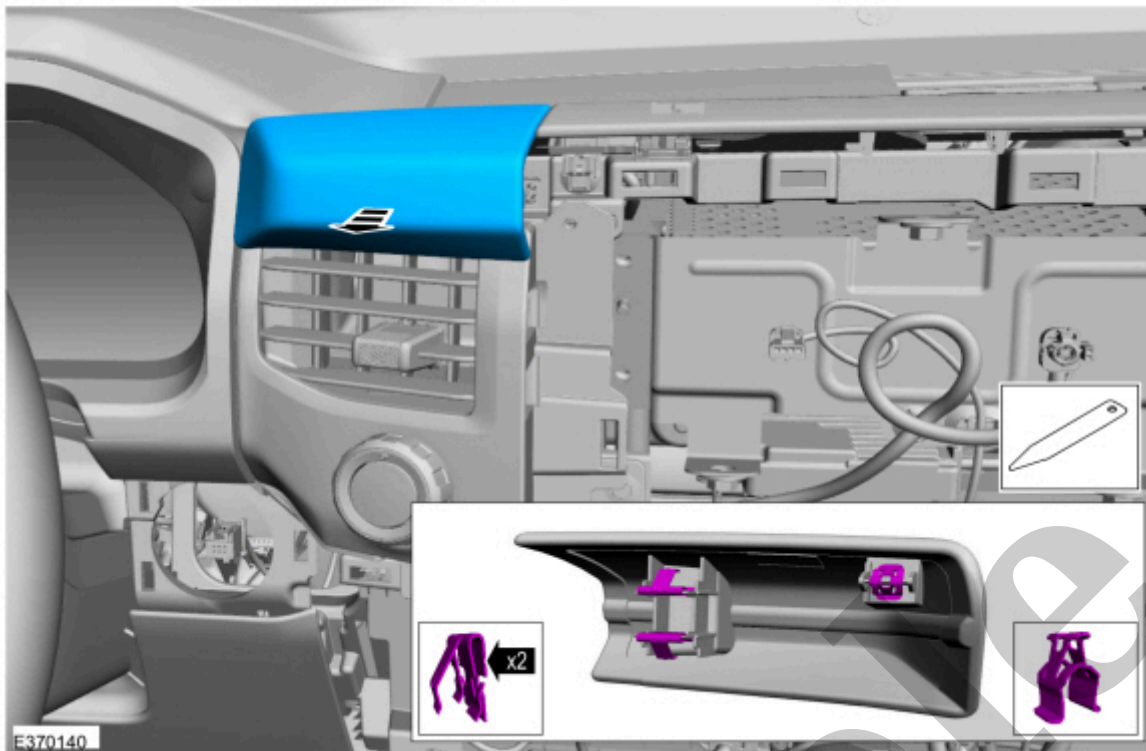


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

25. Remove the bolts and the LH (left-hand) center register.

- Disconnect the electrical connector.

Torque : 22 lb.in (2,5 Nm)

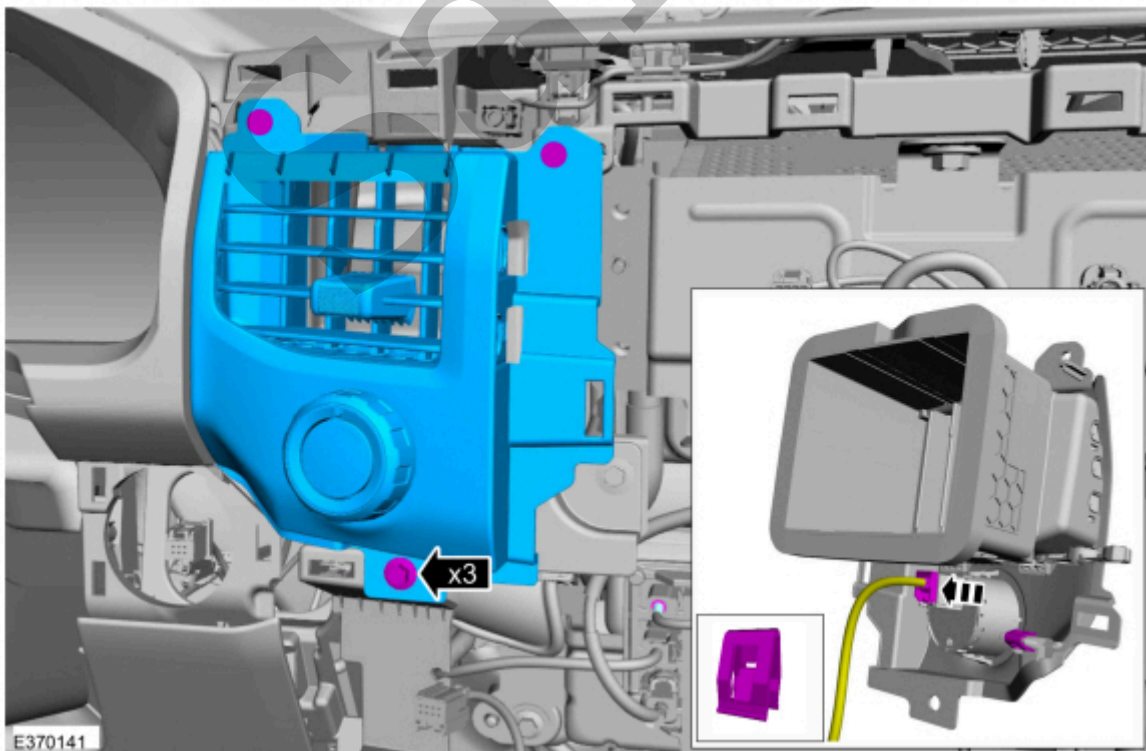

Sample