


## Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

1998 VOLVO C70 OEM Service and Repair Workshop Manual

Go to manual page

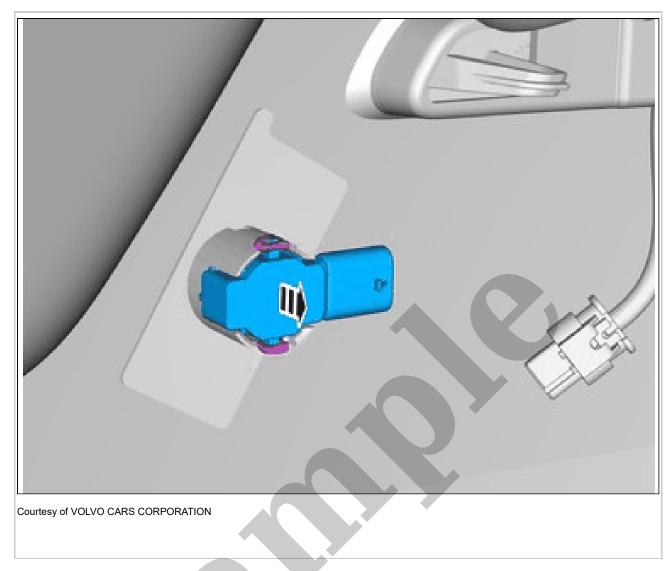

Release the catches.
Remove the marked part.

PARKING ASSISTANCE SENSOR, REAR, INNER > PARKING ASSISTANCE SENSOR, REAR, INNER [2021-2022, B4204T18 | 2021-2022, B4204T47] > INSTALLATION

To install, reverse the removal procedure.


PARKING ASSISTANCE SENSOR, REAR, INNER > PARKING ASSISTANCE SENSOR, REAR, INNER [2021-2022, E400V6] > REMOVAL

Set the vehicle to Inactive mode, described in user mode. Refer to: USAGE MODE



Courtesy of VOLVO CARS CORPORATION


Raise the car.
Fold the wing liner aside.
Repeat on the other side.

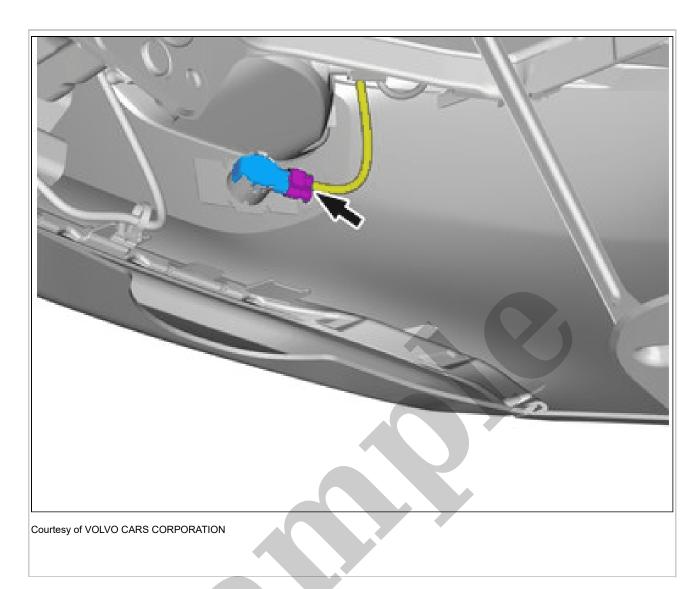

Disconnect the connector.



**NOTE:** Orientation view

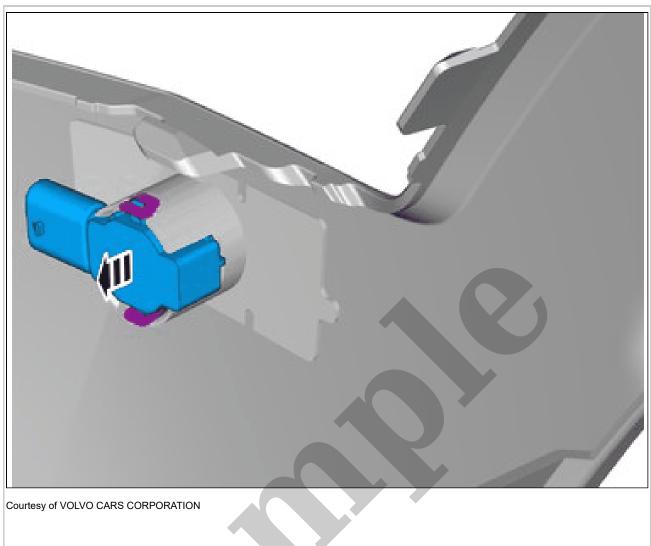


Release the catches. Remove the marked part.

## PARKING ASSISTANCE SENSOR, REAR, SIDE > PARKING ASSISTANCE SENSOR, REAR, SIDE [2021 | 2022, B4204T18 | 2022, B4204T47] > INSTALLATION


To install, reverse the removal procedure.

## RAIN AND LIGHT SENSOR RLSM > RAIN AND LIGHT SENSOR RLSM [2021-2022, E400V6] > REMOVAL

Perform battery disconnecting and connecting. Refer to: BATTERY DISCONNECTING AND CONNECTING

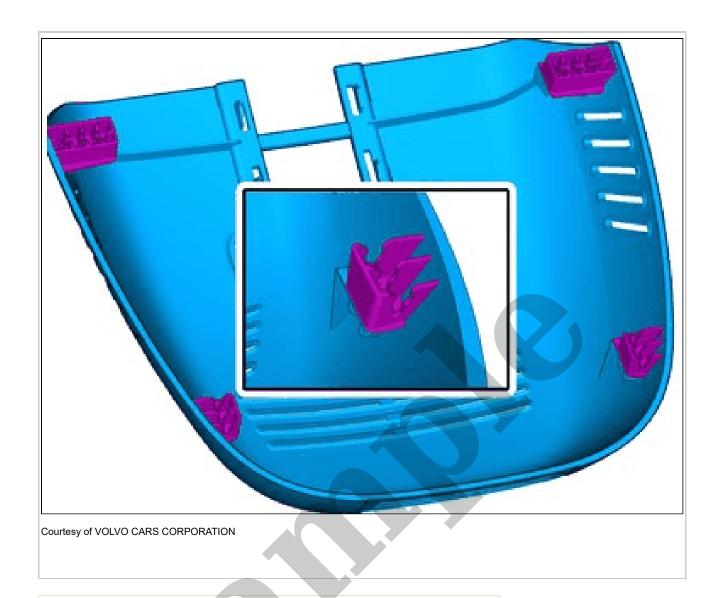

**NOTE:** The graphic shows the back of the component before removal.

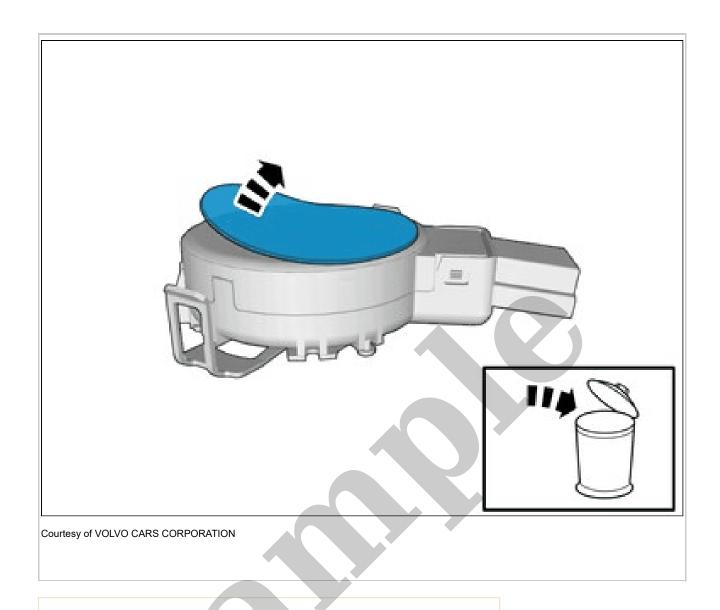


**NOTE:** This step is not necessary when installing a new component.

**NOTE:** Use a new seal.

Remove the marked part. The part is not to be reused.

RAIN AND LIGHT SENSOR RLSM > RAIN AND LIGHT SENSOR RLSM [2021-2022, E400V6] > INSTALLATION

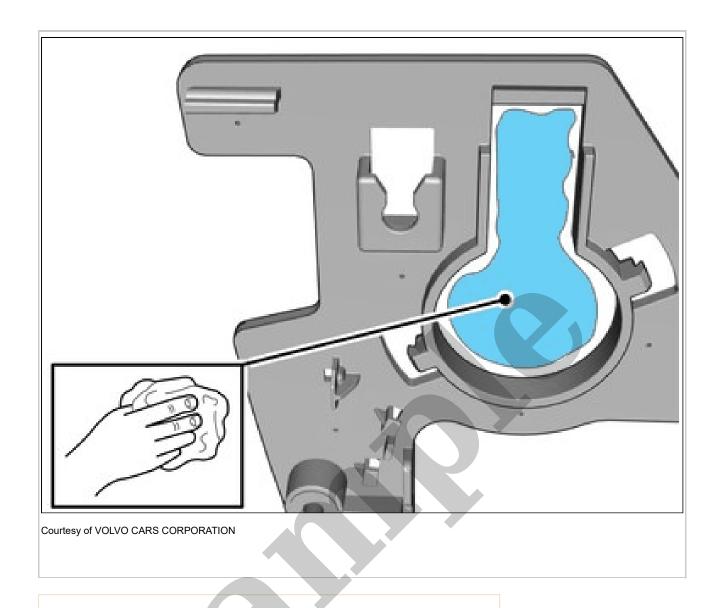

**CAUTION:** Make sure that the surface is clean and free of foreign material.

**CAUTION:** Use lint free cloth.


Use: Cleaning agent, 1161721

Use: Window cleaner,

To install, reverse the removal procedure.

Perform rain sensor check. Refer to: RAIN SENSOR, CHECK

RAIN AND LIGHT SENSOR RLSM > RAIN AND LIGHT SENSOR RLSM [2018-2020 | 2021-2022, B4204T18 | 2021-2022, B4204T47] > REMOVAL

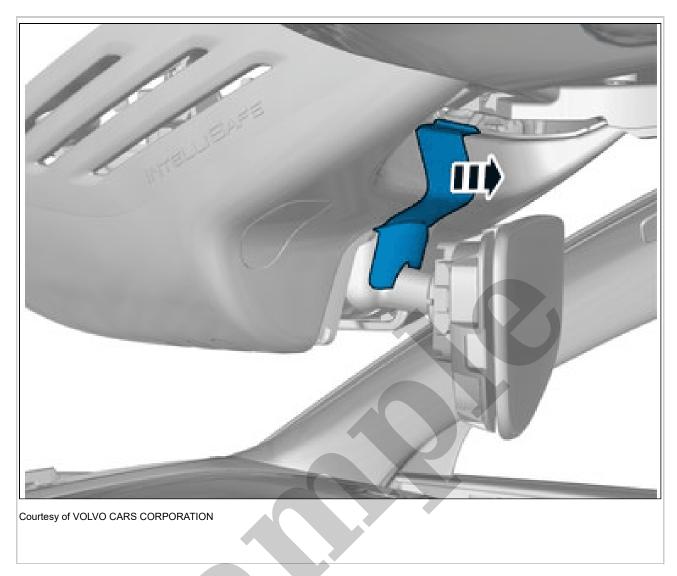

Remove the marked part.