

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


1999 FORD Mondeo Sedan OEM Service and Repair Workshop Manual

[Go to manual page](#)

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

All vehicles

12. Position aside the glass run weatherstrip.

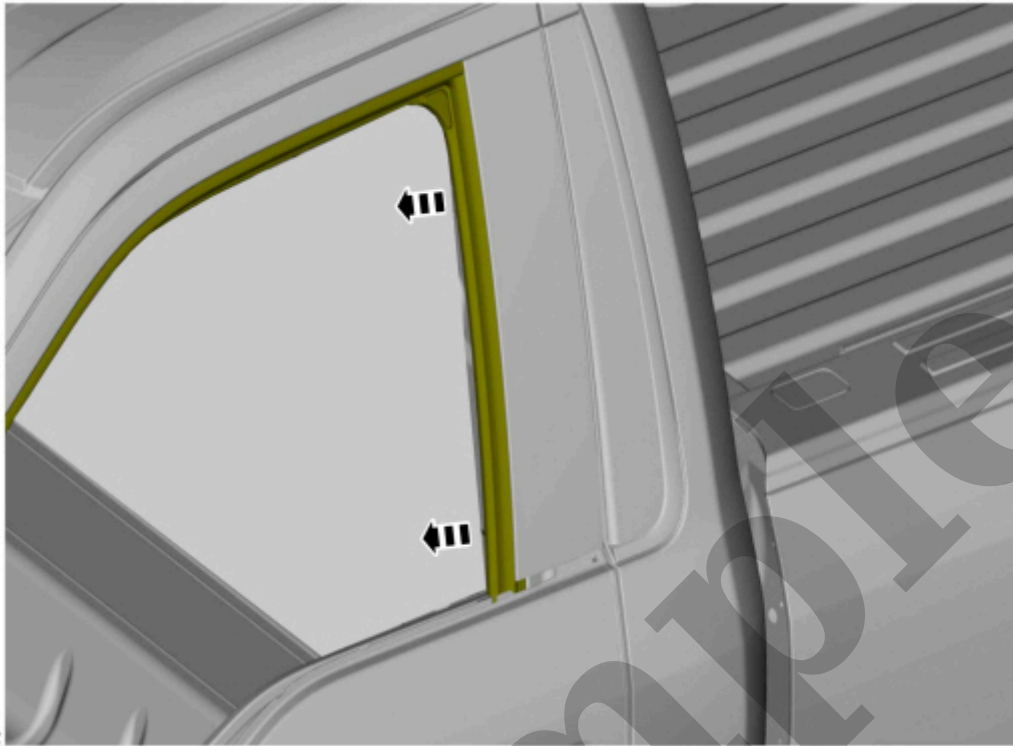


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

13. Remove the 4 screws from upper door moulding.

Torque : 13 lb.in (1.5 Nm)

E193377

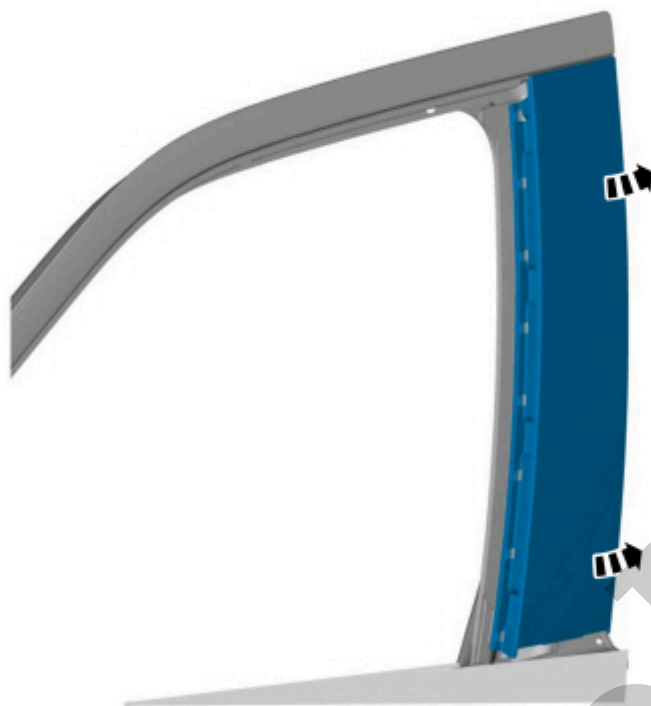

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Vehicles With: Keyless Entry

15. NOTE

The keypad actuator can be serviced separately from the moulding if required.

Depress the retainer tabs to remove the keypad actuator.



Front Fender Moulding

501-08 Exterior Trim and Ornamentation	2022 F-150
Removal and Installation	Procedure revision date: 08/5/2021

Front Fender Moulding

Removal

NOTE

Removal steps in this procedure may contain installation details.

NOTE

LH (left-hand) side shown, RH (right-hand) side similar.


1. Raise the vehicle on a hoist.

Refer to: [Jacking and Lifting - Overview](#)(100-02 Jacking and Lifting, Description and Operation).

2. Remove the screws.

Torque : 22 lb.in (2.5 Nm)


4. Disconnect the electrical connector.

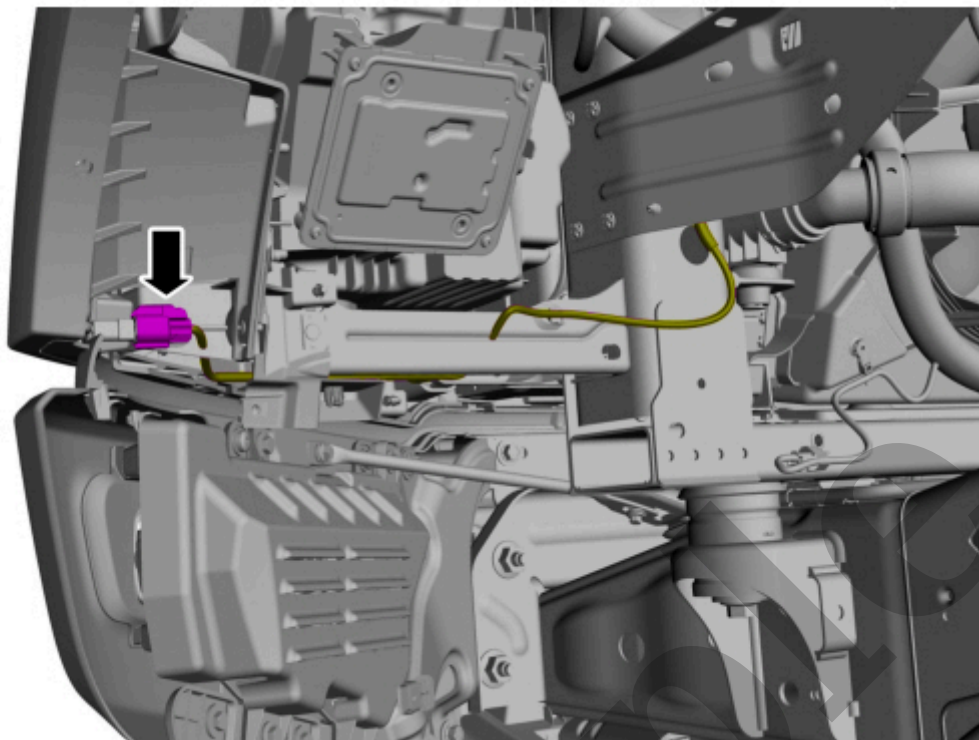

E358191

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. Using a non-marring trim tool, disengage the push pin retainers from the fender and remove the moulding.

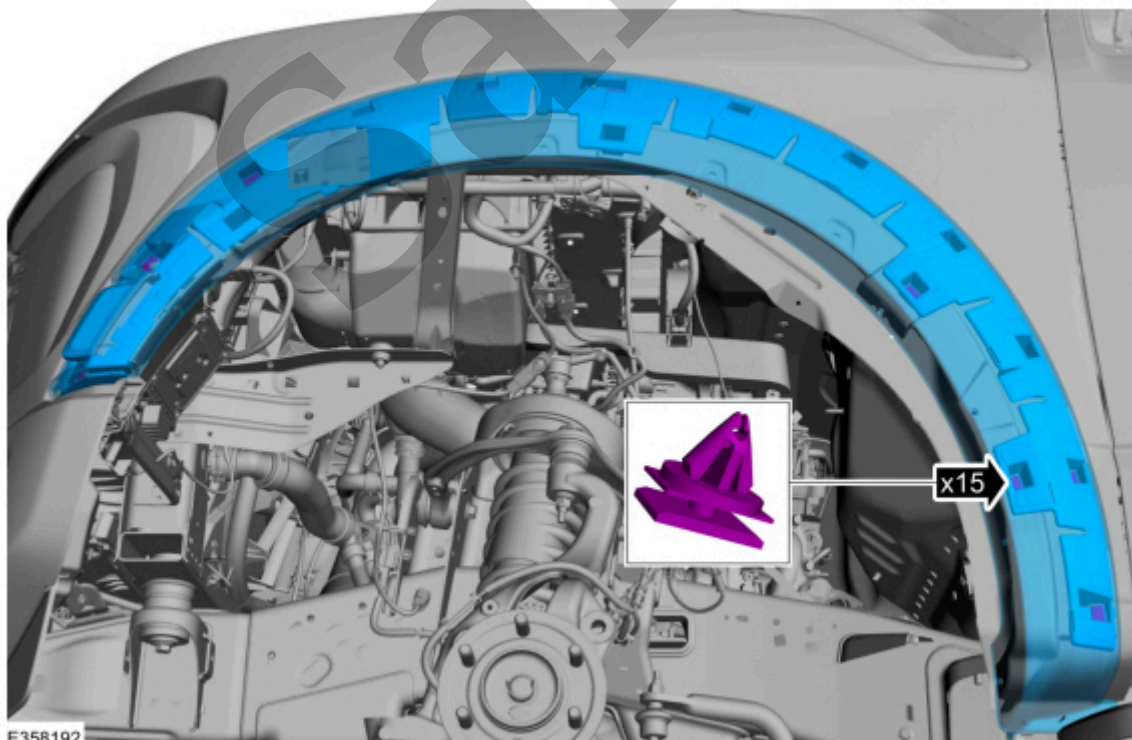

E358192



Kick Switch

<i>501-08 Exterior Trim and Ornamentation</i>	<i>2022 F-150</i>
<i>Removal and Installation</i>	<i>Procedure revision date: 09/1/2020</i>

Kick Switch

Removal

NOTE

Removal steps in this procedure may contain installation details.

NOTE


LH side shown, RH side similar.

1. Disconnect the battery.
Refer to: [Battery Disconnect and Connect](#)(414-01 Battery, Mounting and Cables, General Procedures).
2. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#)(100-02 Jacking and Lifting, Description and Operation).
3.
 - Disconnect the electrical connector.
 - Detach the wiring harness retainer clips.

5. • Remove the screw.

Torque : 22 lb.in (2.5 Nm)

- Push inside and remove the kick switch.

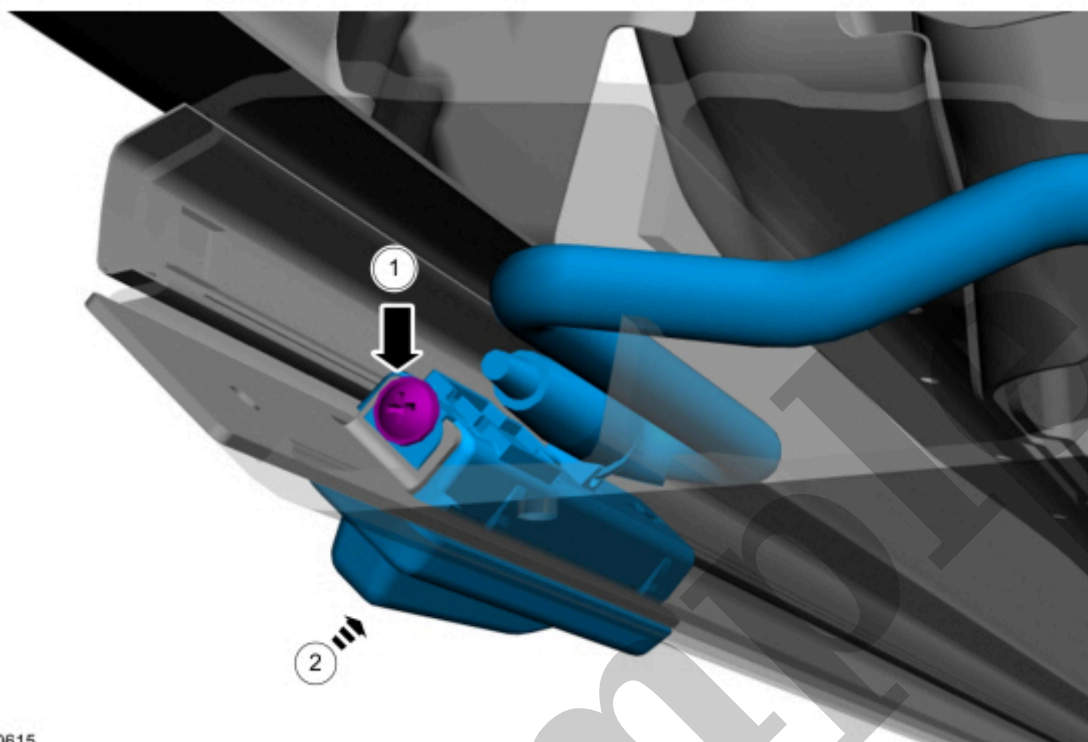


E340615

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.


Copyright © Ford Motor Company

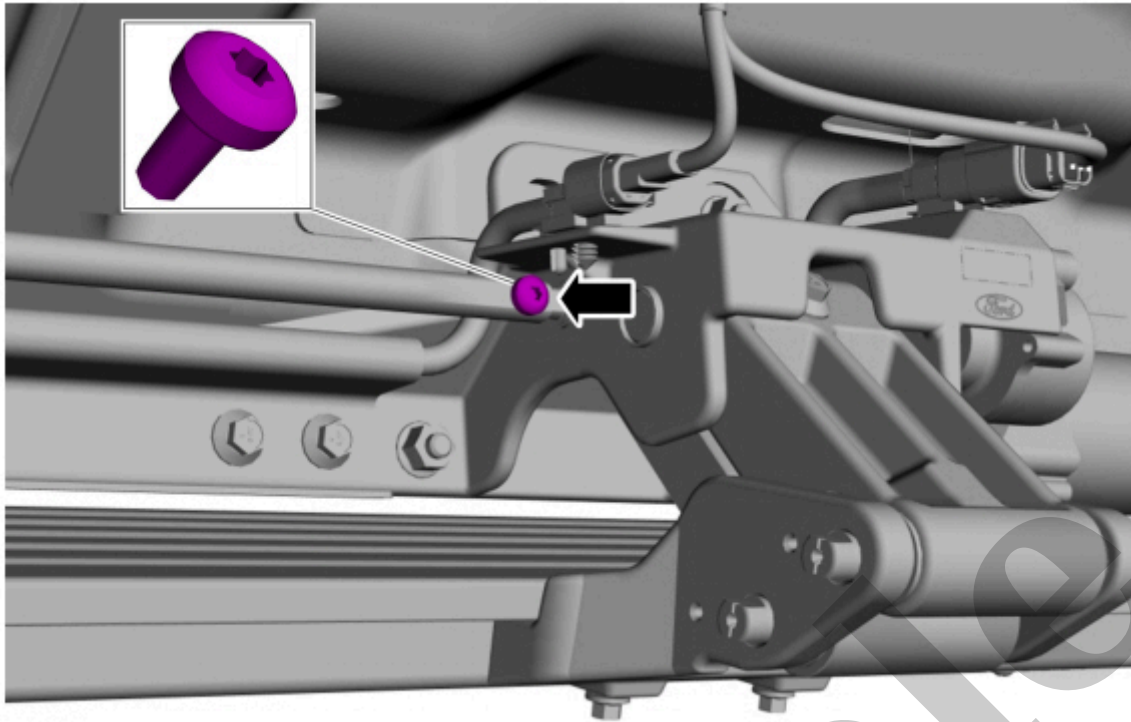

E337929

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Remove the connecting rod.

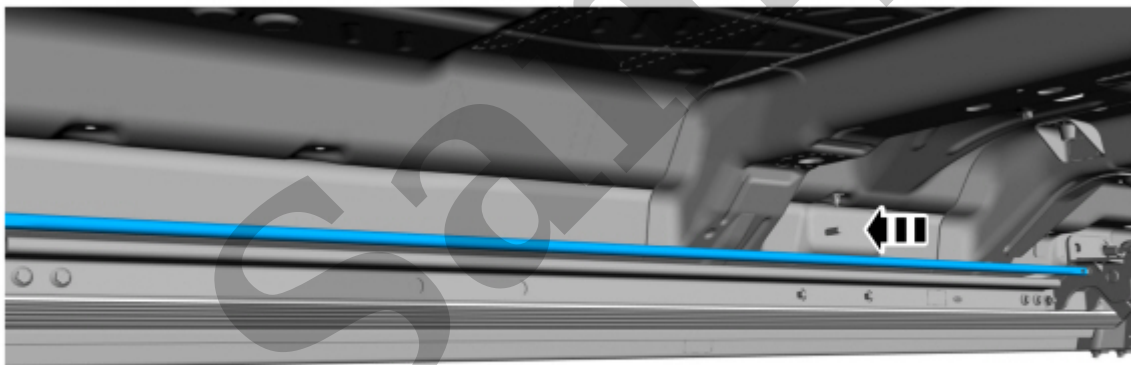


E337930

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

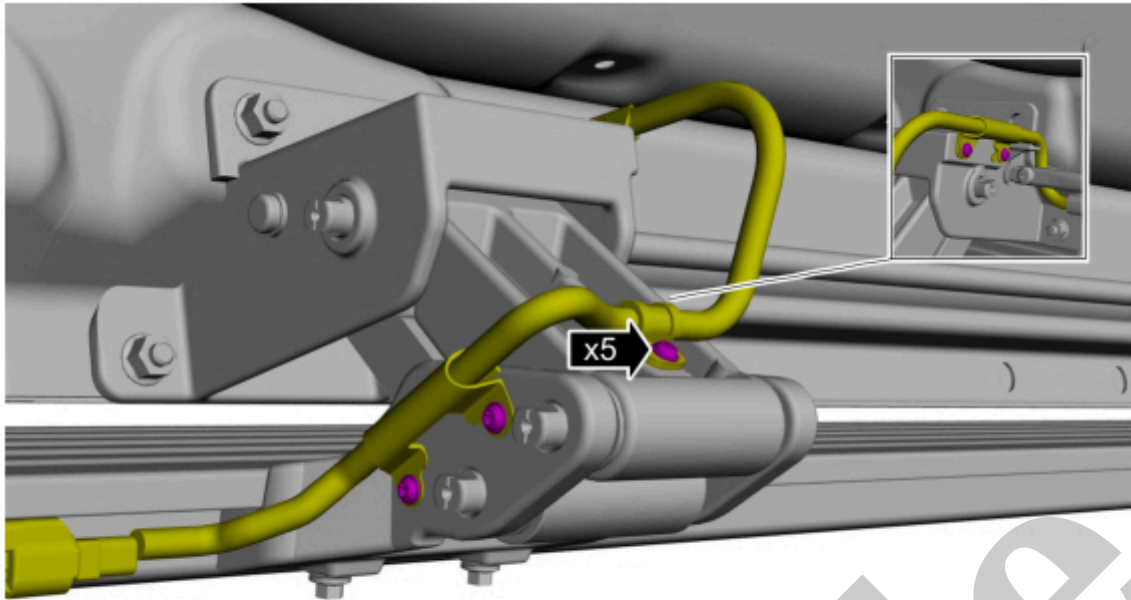

E337716

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. **NOTE**

LH (left-hand) side shown, RH (right-hand) side similar.

NOTE


Support the running board with a jackstand.

Remove the bolts.

Torque : 97 lb.in (11 Nm)

5. Remove the nuts and remove the bracket assembly.

Torque : 16 lb.ft (22 Nm)

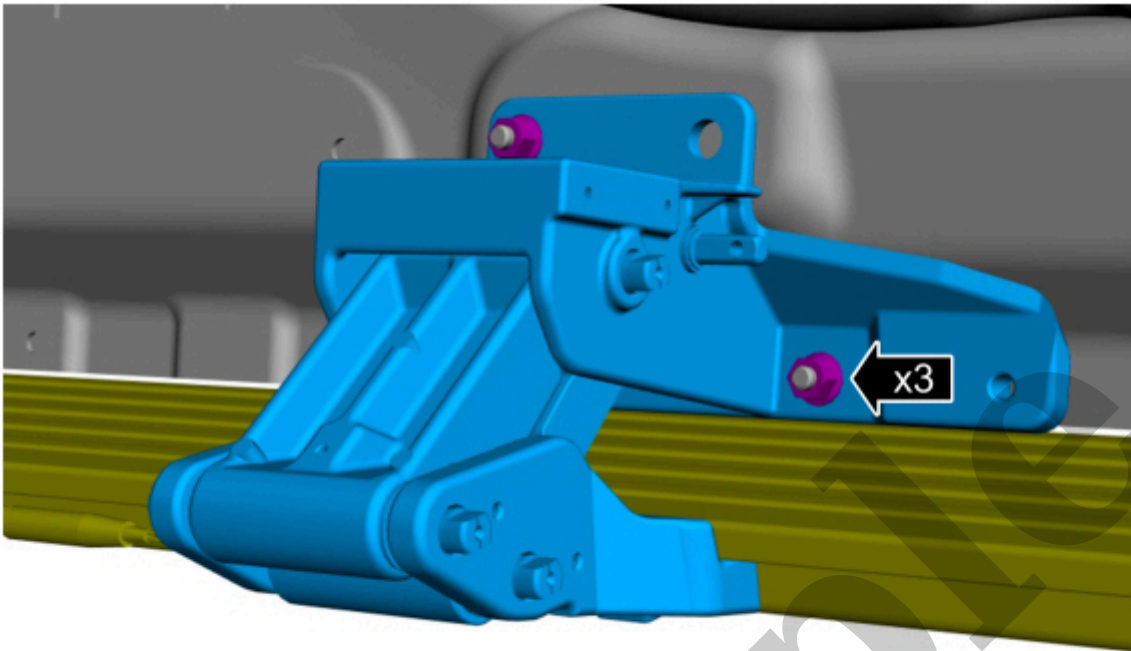

E337719

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company