


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2000 FORD F-150 Regular Cab OEM Service and Repair Workshop Manual

Go to manual page

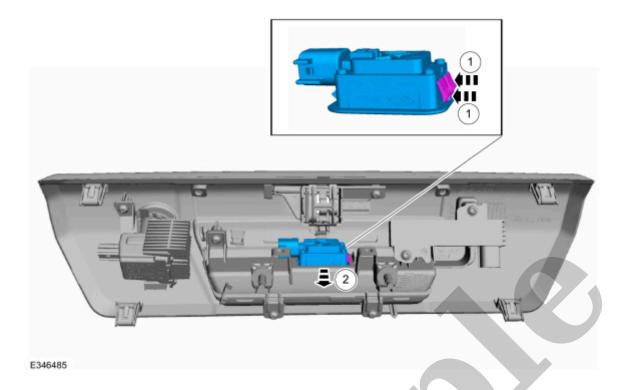

Click here to learn about symbols, color coding, and icons used in this manual.

Installation

- 1. To install, reverse the removal procedure.
- 2. If equipped.

Align the rear camera.

Refer to: 360 Degree View Camera Alignment(413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).


Copyright © Ford Motor Company




Click here to learn about symbols, color coding, and icons used in this manual.

- 3. 1. Install the receiver cup.
 - 2. Install and tighten the wing nut.

Remove Special Service Tool: 501-194 Remover, Power Point

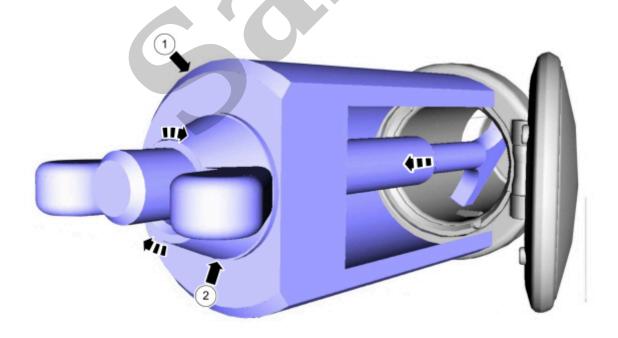

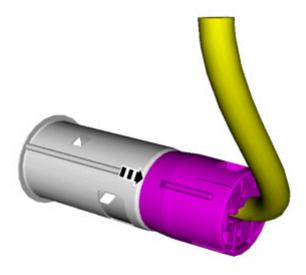

E191808


Click here to learn about symbols, color coding, and icons used in this manual.

Installation

1. To install, reverse the removal procedure.


Copyright © Ford Motor Company

3. Release the clips and remove the floor console upper RH (right-hand) trim panel.

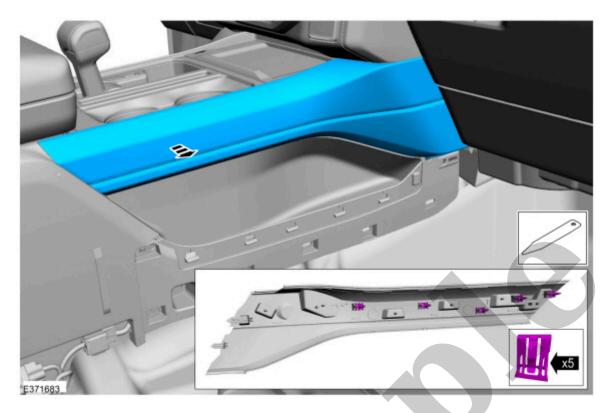


Click here to learn about symbols, color coding, and icons used in this manual.

4. Release the clips and remove the floor console lower LH (left-hand) trim panel.

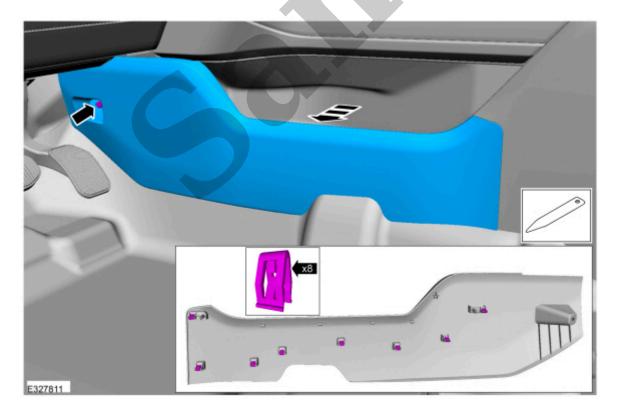

- 7. Remove the bolts and the floor console.
 - Disconnect the elecrtrical connectors.

Torque: 48 lb.in (5.4 Nm)

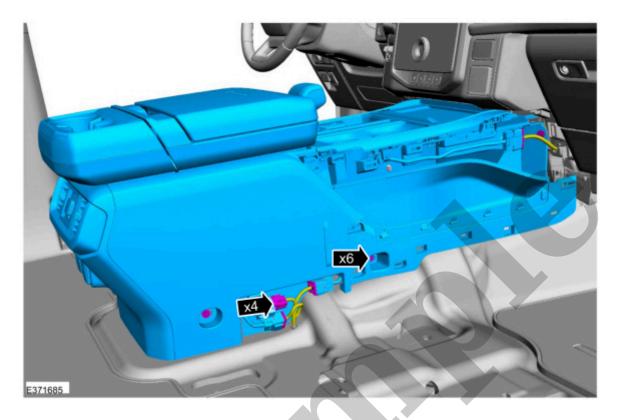

Click here to learn about symbols, color coding, and icons used in this manual.

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

- 2. Depress the floor console storage compartment lid latch to retract the latching tabs.
- 3. Release the clips and remove the trim panel.

Use the General Equipment: Interior Trim Remover



Click here to learn about symbols, color coding, and icons used in this manual.

3. Remove the bolts and the floor console storage compartment lid.

Floor Console

501-12 Instrument Panel and Console	2022 F-150
Removal and Installation	Procedure revision date: 04/6/2021


Floor Console

Removal


1. Remove the front seats.

Refer to: Front Seat(501-10A Front Seats, Removal and Installation).

2. Release the clips and remove the floor console lower RH (right-hand) trim panel.

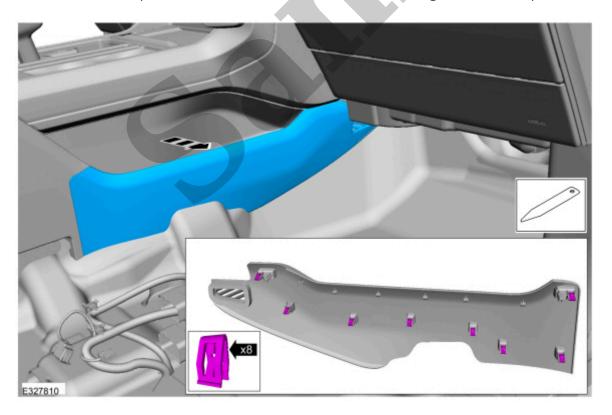


5. Release the clips and remove the floor console upper LH (left-hand) trim panel.

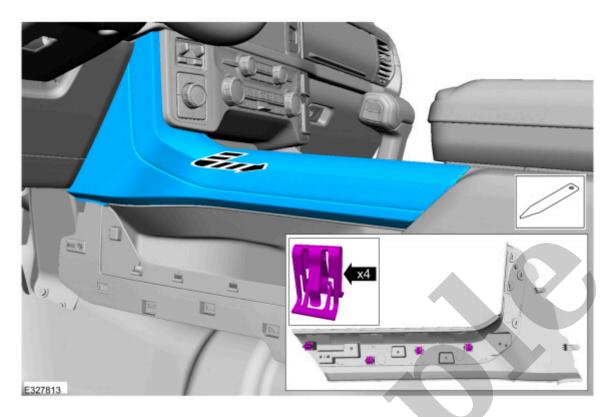

Click here to learn about symbols, color coding, and icons used in this manual.

6. Disconnect the electrical connectors.

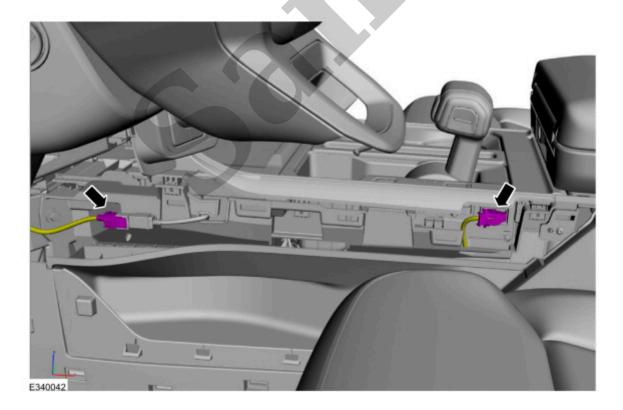

Glove Compartment

501-12 Instrument Panel and Console	2022 F-150
Removal and Installation	Procedure revision date: 10/2/2020

Glove Compartment

Removal

- 1. 1. Open the glove compartment.
 - 2. Depress the stop tabs inward and fully lower the glove compartment.

