

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2000 FORD Mondeo Sedan OEM Service and Repair Workshop Manual

[Go to manual page](#)

3	Lower attachment, clearance hole
4	Lower attachment, clearance hole
5	Lower attachment, clearance hole
6	Lower attachment, clearance hole

- If power washing and lubrication did not correct the concern, the power running boards can be realigned if they are still binding during deployment. The power running board bolts can be loosened allowing the running board to free float for alignment. Once the running board is in the desired position, tighten fasteners in the sequence shown.

Torque : 16 lb.ft (22 Nm)




E396421

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

9. For additional information on proper care and cleaning instructions for the power running boards please refer the Owner's Literature.


Copyright © Ford Motor Company

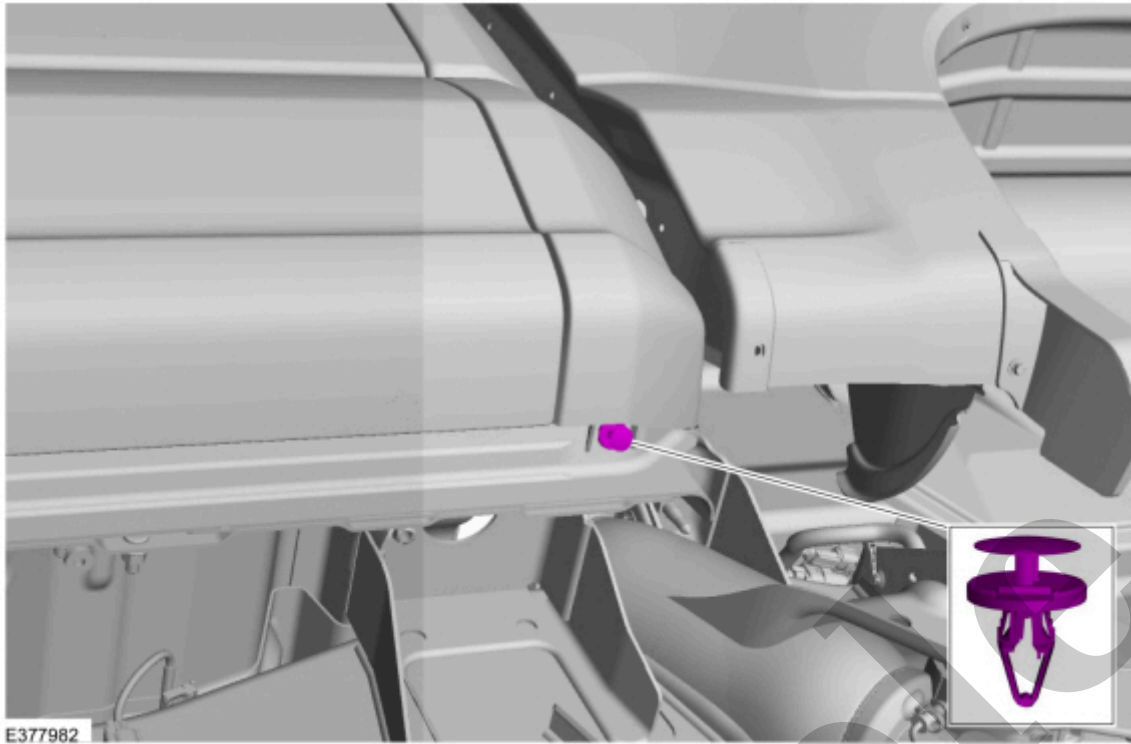


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Using a non-marring trim tool, detach the retainers and remove the lower cab corner moulding.

Use the General Equipment: Interior Trim Remover

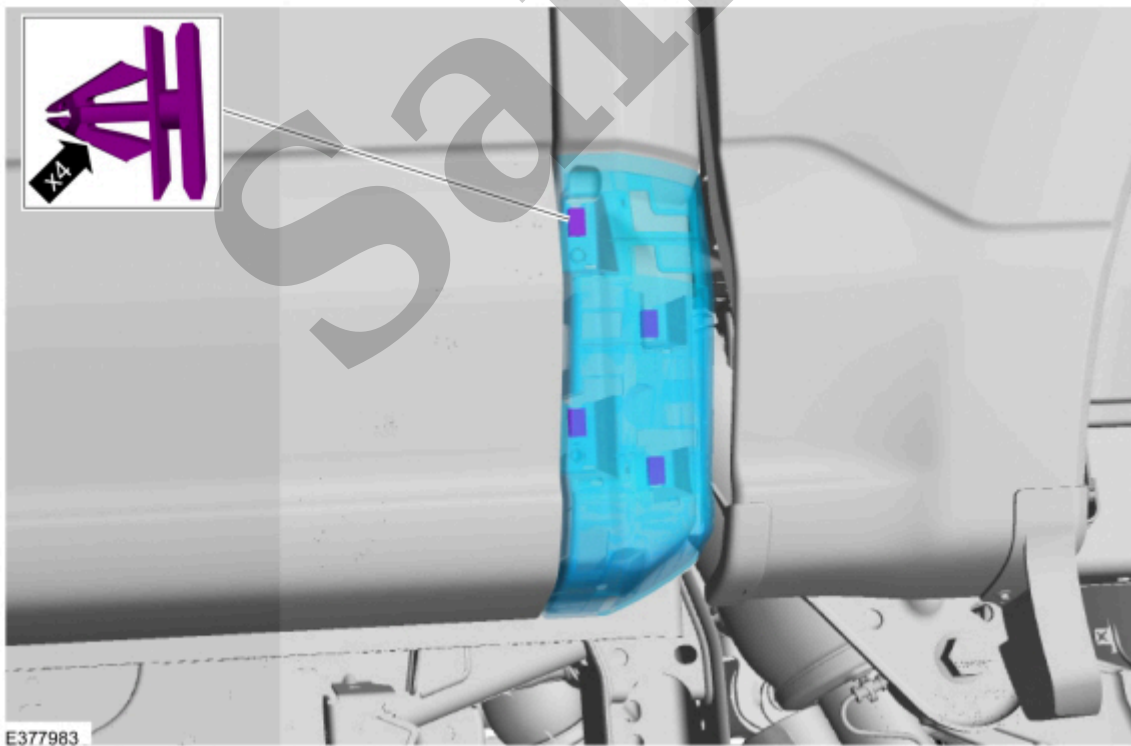

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

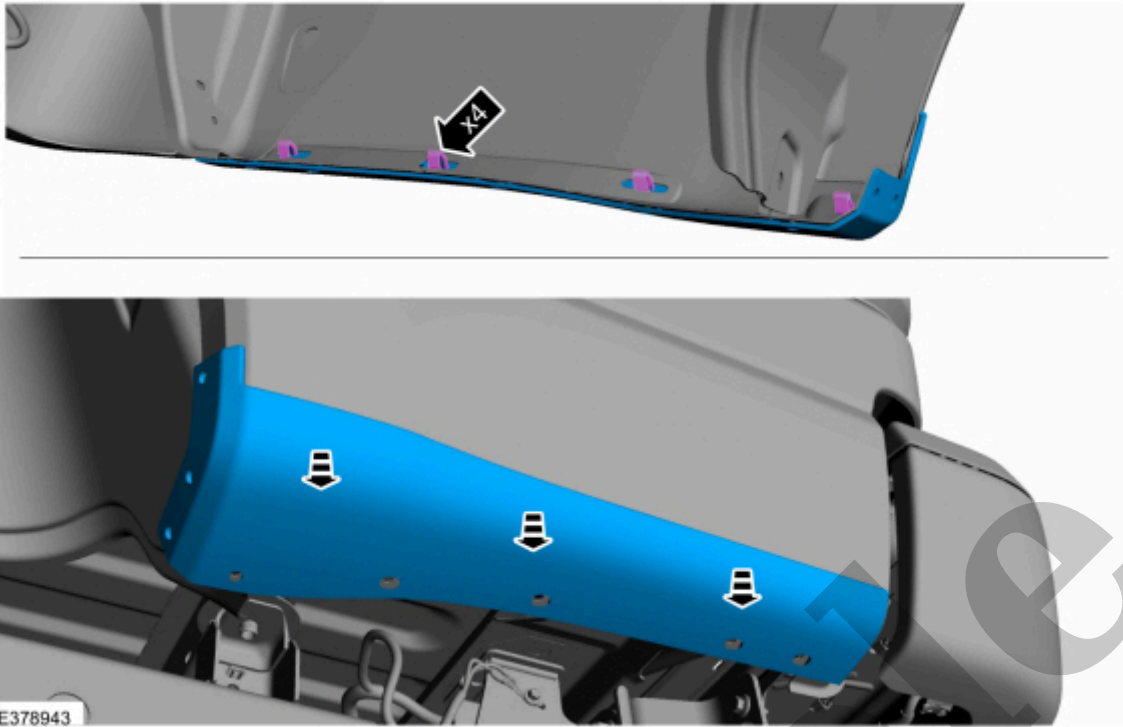

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Pickup Bed Upper Rail Moulding

5. Using a non-marring trim tool, carefully detach the retainers along the length of the moulding and remove the moulding.

Use the General Equipment: Interior Trim Remover



Bodyside Moulding

<i>501-08 Exterior Trim and Ornamentation</i>	<i>2022 F-150</i>
<i>Removal and Installation</i>	<i>Procedure revision date: 09/1/2020</i>

Bodyside Moulding

Removal

NOTE

Removal steps in this procedure may contain installation details.

NOTE

The following steps detail the various bodyside mouldings located on the cab and pickup bed. It is not all inclusive as trim levels may vary from vehicle to vehicle.

NOTE

LH (left-hand) side views shown, RH (right-hand) side similar.


Cab Upper Moulding

1. Using a non-marring trim tool, detach the 7 push pin retainers and remove the moulding.

Use the General Equipment: Interior Trim Remover

3. Using a non-marring trim tool, detach the 6 push pin retainers and remove the lower cab corner moulding.

Use the General Equipment: Interior Trim Remover

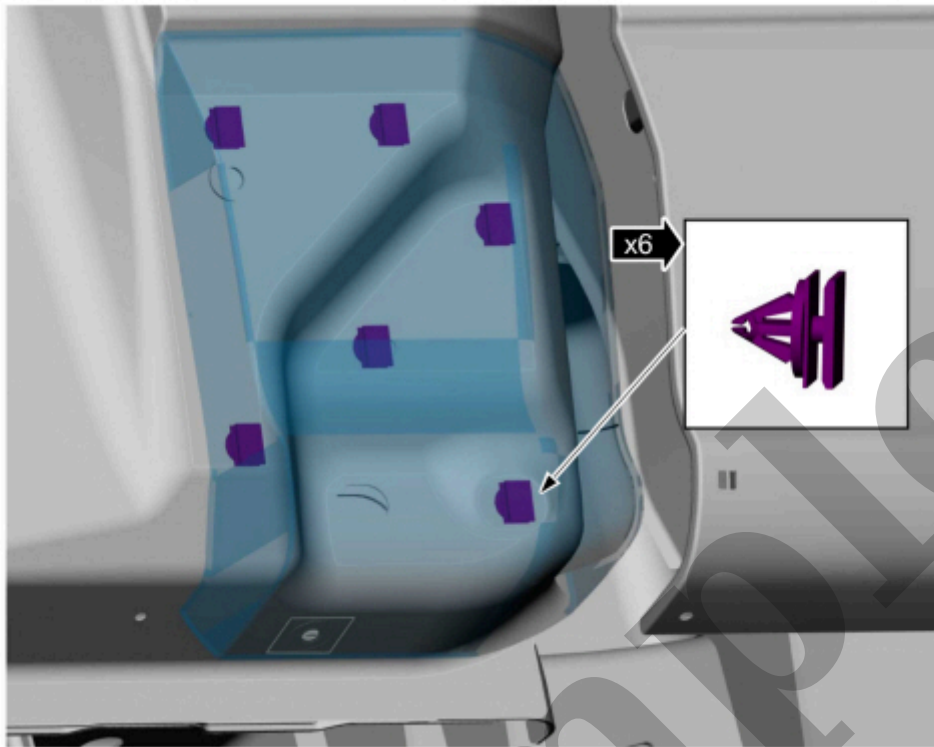

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Pickup Bed Lower Moulding


4. Remove the 7 push pin retainers.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Pickup Bed Upper Rail Moulding

6. Using a non-marring trim tool, carefully detach the retainers along the length of the moulding and remove the moulding.

Use the General Equipment: Interior Trim Remover

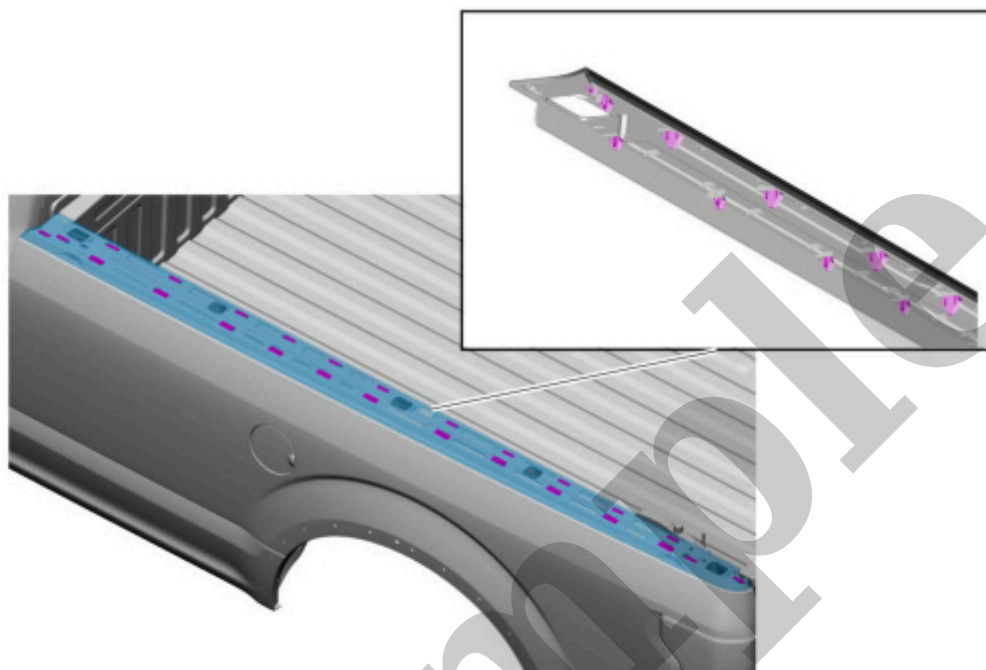


E193541

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

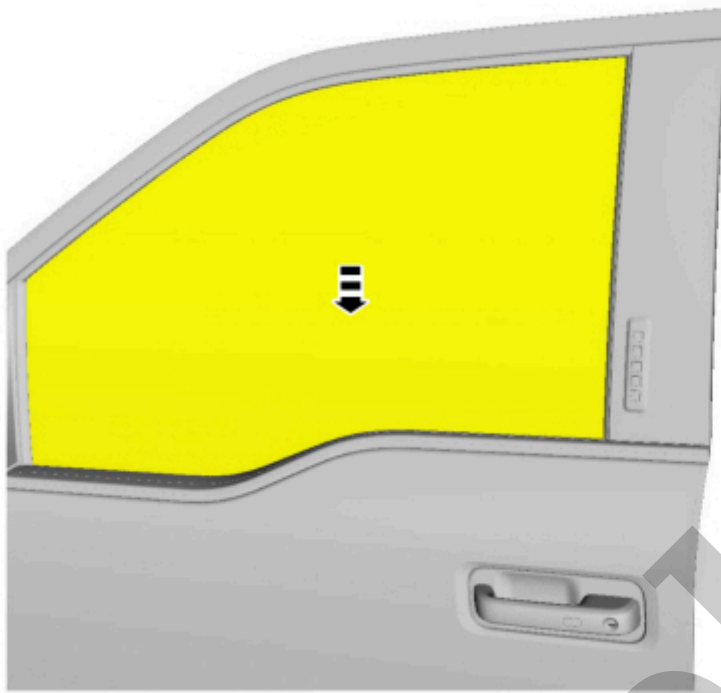

E224347

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


2. Remove the exterior mirror.

Refer to: [Exterior Mirror - Vehicles With: Long Arm Mirrors](#)(501-09 Rear View Mirrors, Removal and Installation).

Refer to: [Exterior Mirror - Vehicles With: Short Arm Mirrors](#)(501-09 Rear View Mirrors, Removal and Installation).

3. Remove the upper belt moulding screw at rear of the door.

Torque : 9 lb.in (1.0 Nm)

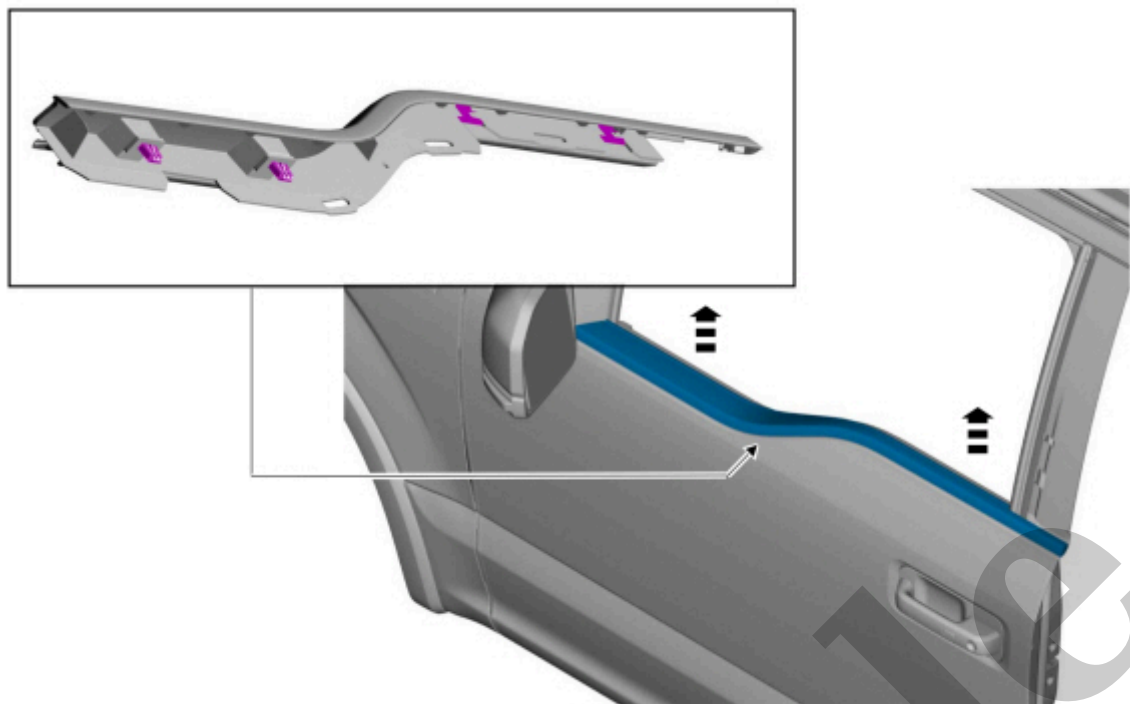

E193284

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Vehicles With: Keyless Entry

5. **NOTE**

Position the glass run weatherstrip in channel to allow raising of the door glass.


Raise the door window glass.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

8. Remove the exterior front door handle.

Refer to: [Exterior Front Door Handle](#)(501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

9. Remove the screws and position latch aside.

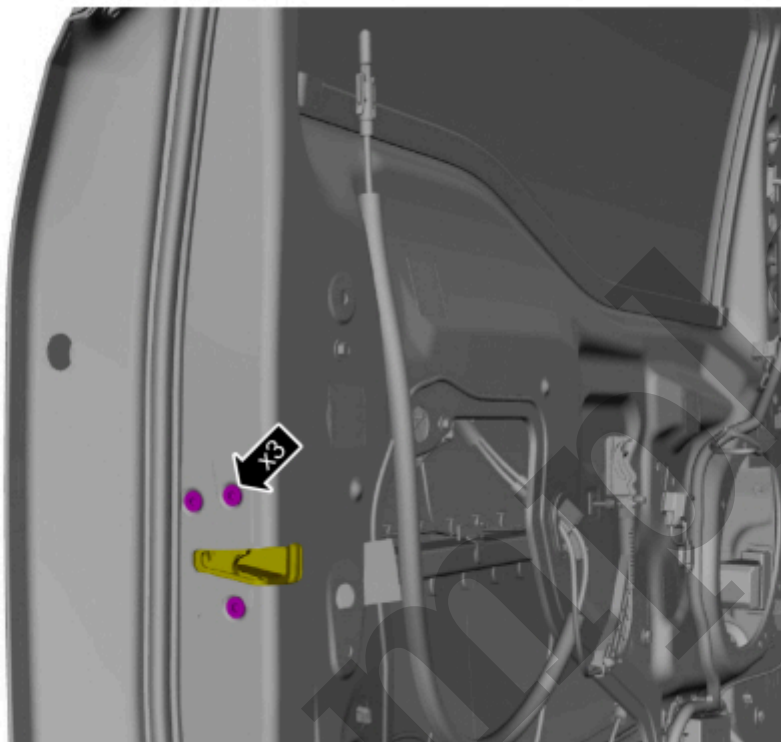

E393023

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

10. **NOTE**

Shown with outer door panel removed for clarity.

Disconnect the electrical connector and the wiring retainers.