


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2000 FORD Ranger Regular Cab OEM Service and Repair Workshop Manual


[Go to manual page](#)

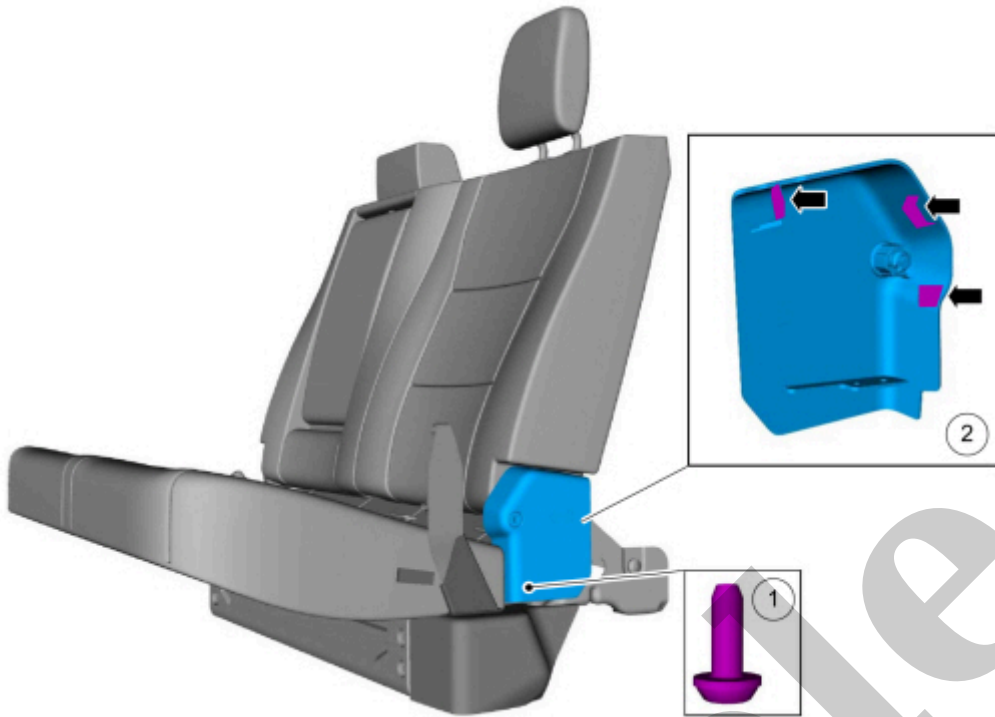

E319439

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. Remove the screws and the outboard pivot bolt cover.

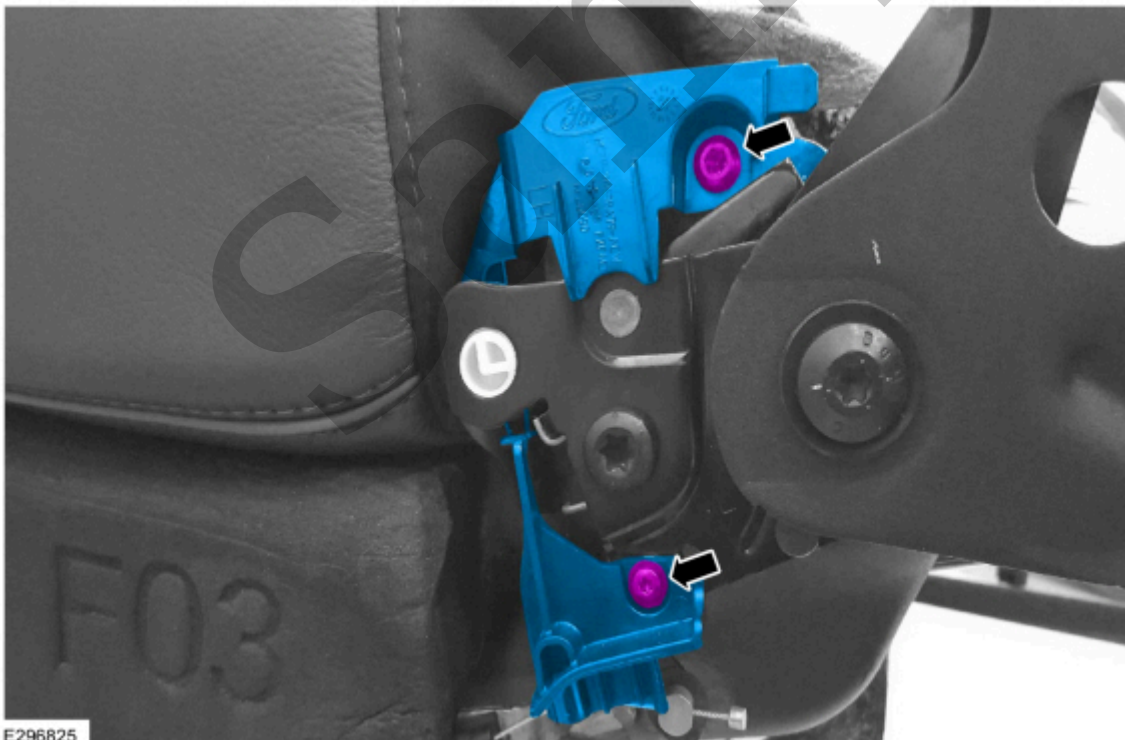


E296825

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

All vehicles

7. Release the rear seat backrest cover rear strap and position aside.

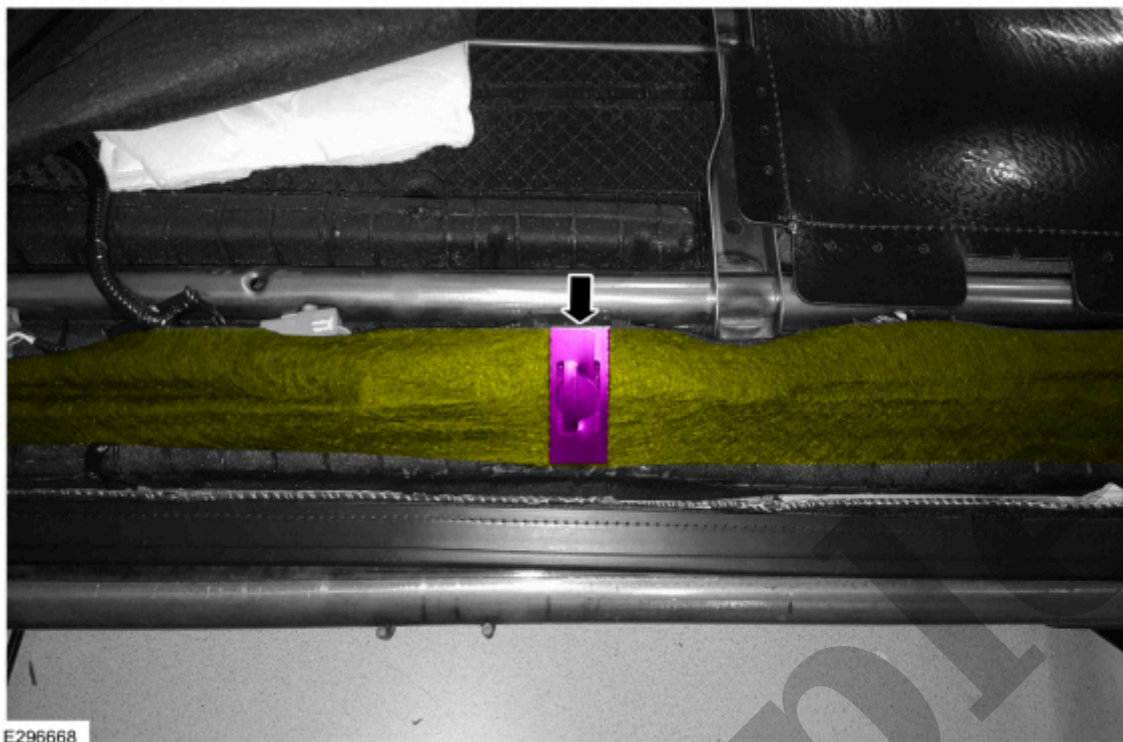

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

8. Remove the rear seat inboard and outboard pivot bolts. Remove the rear seat backrest.

Torque : 18 lb.ft (25 Nm)

Rear Seat Backrest Cover - SuperCab

501-10B Rear Seats	2022 F-150
Removal and Installation	Procedure revision date: 09/23/2020

Rear Seat Backrest Cover - SuperCab

Removal

NOTE

LH (left-hand) shown, RH (right-hand) similar.

1. Remove the rear seat backrest.

Refer to: [Rear Seat Backrest - SuperCab](#)(501-10B Rear Seats, Removal and Installation).

2. Remove the rear seat head restraint guide sleeves.


Refer to: [Rear Head Restraint Guide Sleeve](#)(501-10B Rear Seats, Removal and Installation).

3. Release the rear seat backrest cover lower J-clip.

5. NOTICE

Use care when separating the backrest cover from the hook-and-arrows, or the hooks can be torn from the rear seat backrest foam.

Release the hook-and-arrows and remove the rear seat backrest cover from the foam pad.

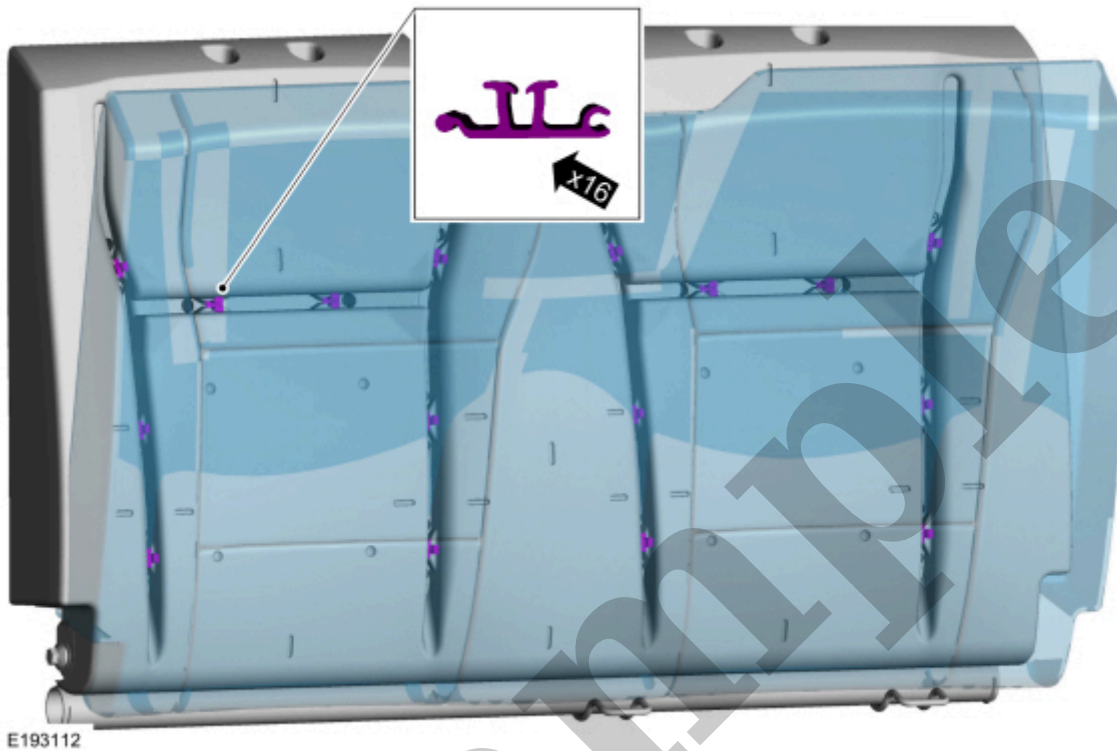

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. NOTE

This step is only necessary when installing a new component.

Remove the rear seat backrest foam.

Rear Seat Backrest Cover - SuperCrew

501-10B Rear Seats	2022 F-150
Removal and Installation	Procedure revision date: 09/23/2020

Rear Seat Backrest Cover - SuperCrew

Removal

NOTE

LH (left-hand) shown, RH (right hand) similar.

1. Remove the rear seat backrest.

Refer to: [Rear Seat Backrest - SuperCrew](#)(501-10B Rear Seats, Removal and Installation).

2. Remove the rear head restraint guide sleeves.


Refer to: [Rear Head Restraint Guide Sleeve](#)(501-10B Rear Seats, Removal and Installation).

3. If equipped.

Remove the rear seat armrest.

Refer to: [Rear Seat Armrest - SuperCrew](#)(501-10B Rear Seats, Removal and Installation).


4. Release the rear seat backrest cover lower J-clip.

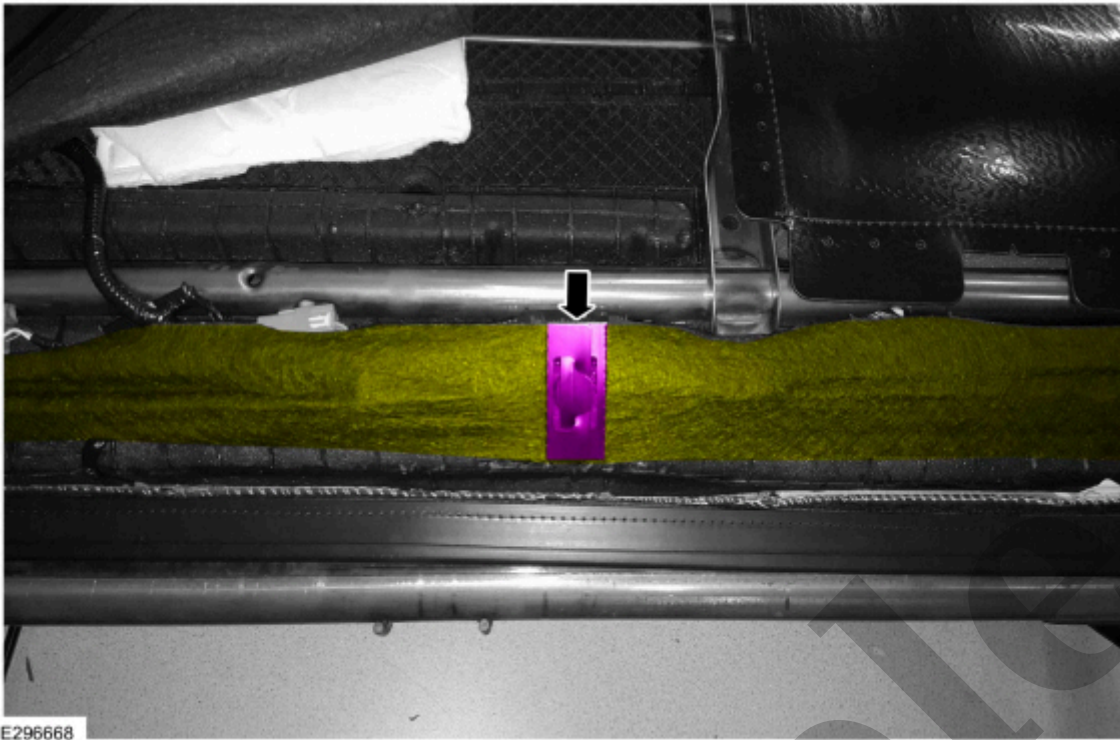

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

LH seat

7. Release the rear seat backrest center J-clip and armrest cavity retainers.

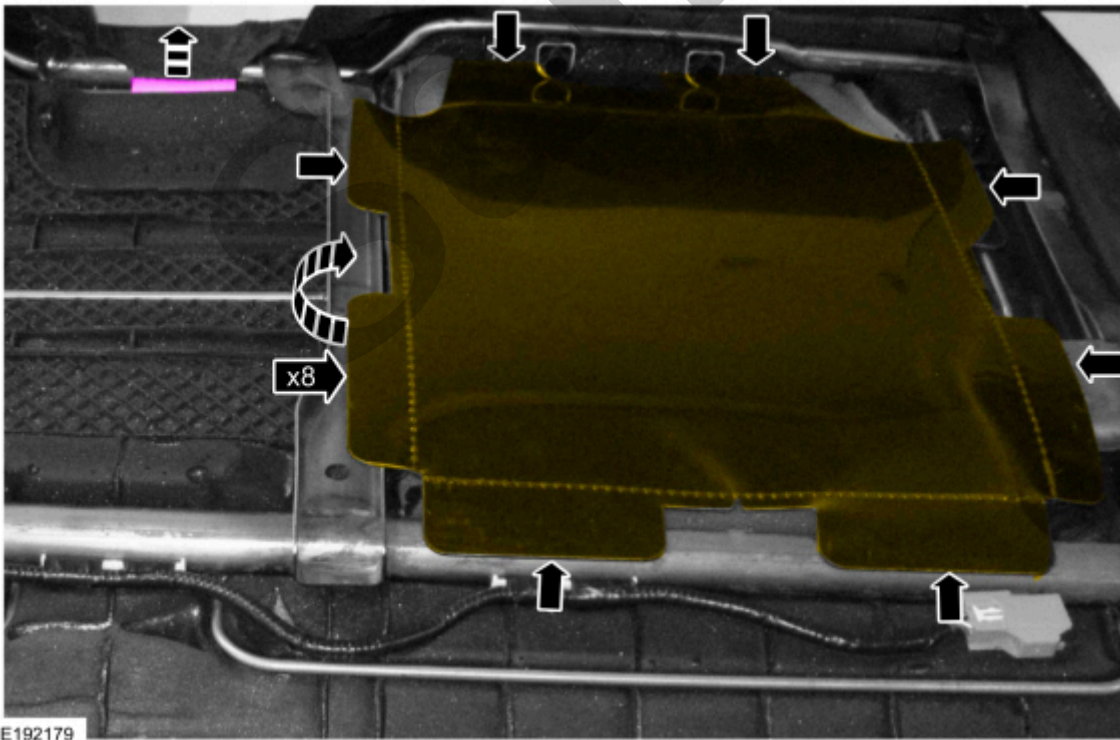


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

This step is only necessary when installing a new component.

NOTE

If equipped, note the routing of the rear seat heater mat wiring.

Remove the rear seat backrest foam.

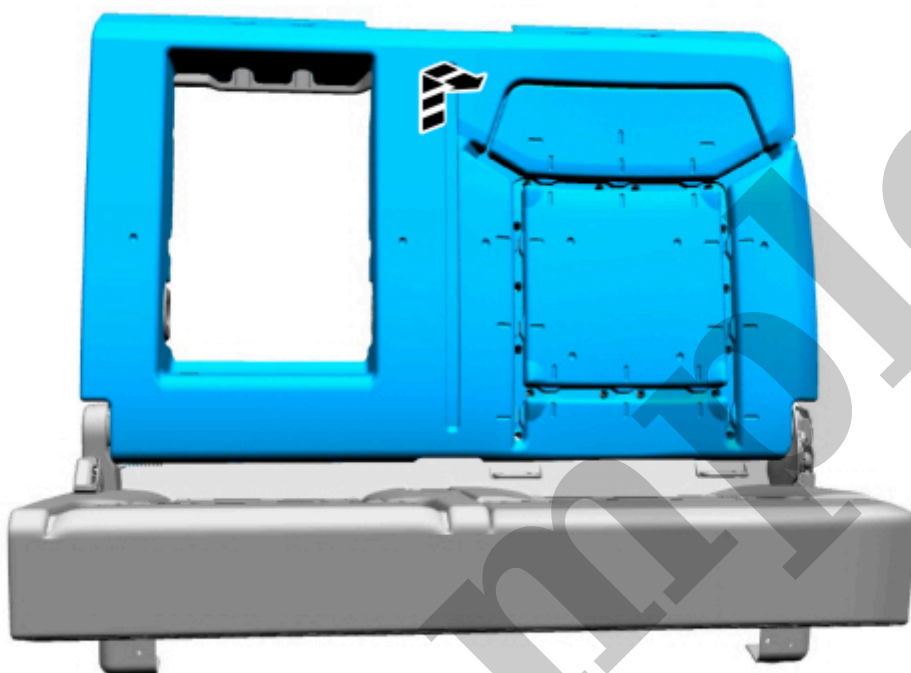


E341495

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

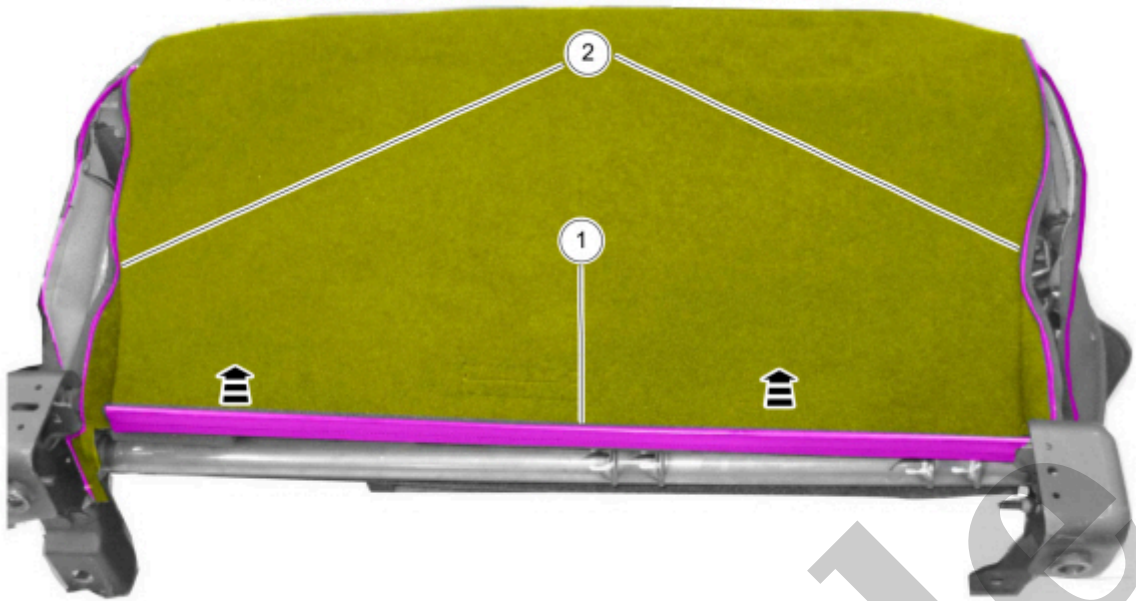

E292340


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Position the rear seat latch pull strap through the cushion cover trim pocket.



E294602

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

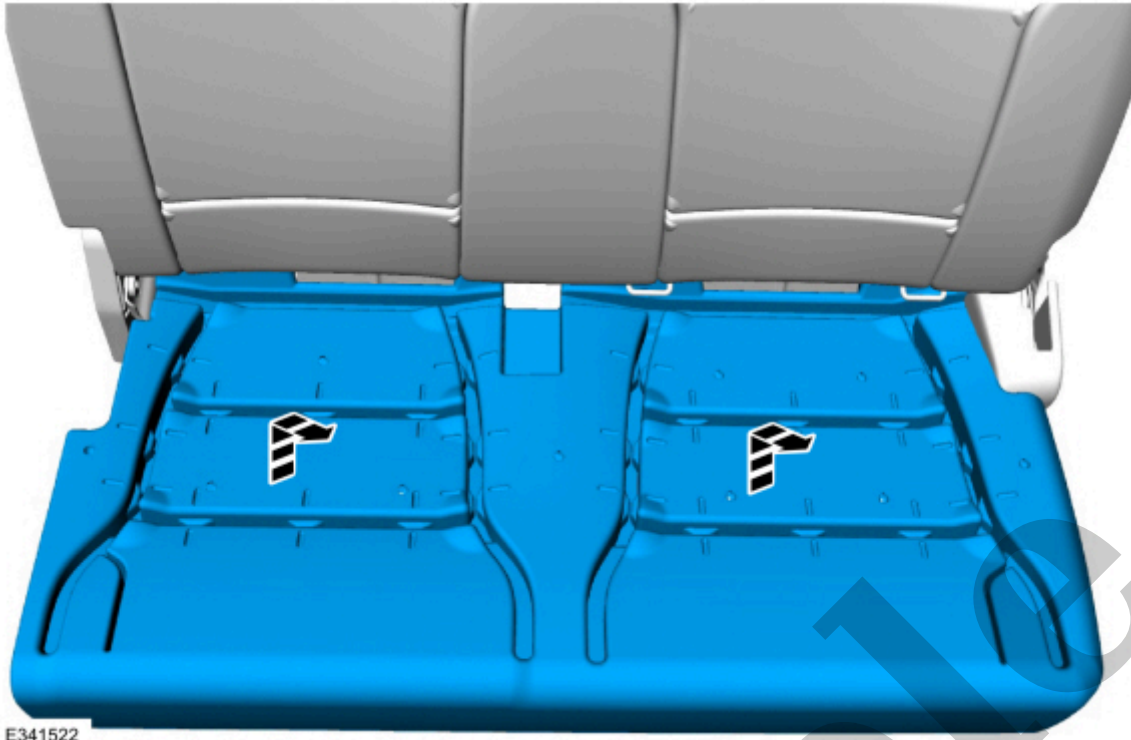

E341522

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company