

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2001 CHEVROLET Avalanche OEM Service and Repair Workshop Manual

[Go to manual page](#)

Callout	Component Name
	3. Disconnect the electrical connector.

Sample

Callout	Component Name
	2. Remove the front side door sill garnish molding – right side. Refer to <a href="#">Front Side Door Sill Garnish Molding Replacement</a> .
1	Communication Interface Module Battery <b>Procedure</b> <ol style="list-style-type: none"><li>1. Disconnect the electrical connector.</li><li>2. Slide the battery from the communication interface module bracket tabs to remove.</li></ol>

Sample

Callout	Component Name		
<p>2. Remove the front side door sill garnish molding – right side. Refer to <a href="#">Front Side Door Sill Garnish Molding Replacement</a>.</p>			
1	<p>Communication Interface Module Bracket Nut</p> <div data-bbox="328 394 1528 479" style="background-color: #f1c40f; padding: 5px;"><b>CAUTION</b></div> <p><b>Caution</b></p> <p>Refer to <a href="#">Fastener Caution</a>.</p> <table border="1" data-bbox="328 680 557 855"> <tr> <td>Tighten</td> </tr> <tr> <td>4 N·m (35 lb in)</td> </tr> </table>	Tighten	4 N·m (35 lb in)
Tighten			
4 N·m (35 lb in)			
2	<p>Communication Interface Module Bracket Bolts (Qty: 2)</p> <table border="1" data-bbox="328 1021 557 1196"> <tr> <td>Tighten</td> </tr> <tr> <td>4 N·m (35 lb in)</td> </tr> </table>	Tighten	4 N·m (35 lb in)
Tighten			
4 N·m (35 lb in)			
3	<p>Communication Interface Module Bracket</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the electrical connections.</li> <li>2. Transfer components as necessary.</li> </ol>		

Callout	Component Name
	<p>3. Remove the communication interface module battery. Refer to <a href="#">Communication Interface Module Battery Replacement</a>.</p> <p>4. Remove the fasteners for the communication interface module bracket. Refer to <a href="#">Communication Interface Module Bracket Replacement</a> and reposition the bracket for module removal.</p>
1	<p>Communication Interface Module</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the electrical connectors.</li> <li>2. Slide the module from the bracket tabs to remove.</li> <li>3. For programming and set up, refer to <a href="#">Control Module References</a>.</li> </ol>

Sample