

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2001 FORD F-150 Super Cab OEM Service and Repair Workshop Manual


[Go to manual page](#)

1. Install the power tailgate motor upper bolt.

Torque : 80 lb.in (9 Nm)

2. Tighten the power tailgate motor upper location bolt.

Torque : 80 lb.in (9 Nm)

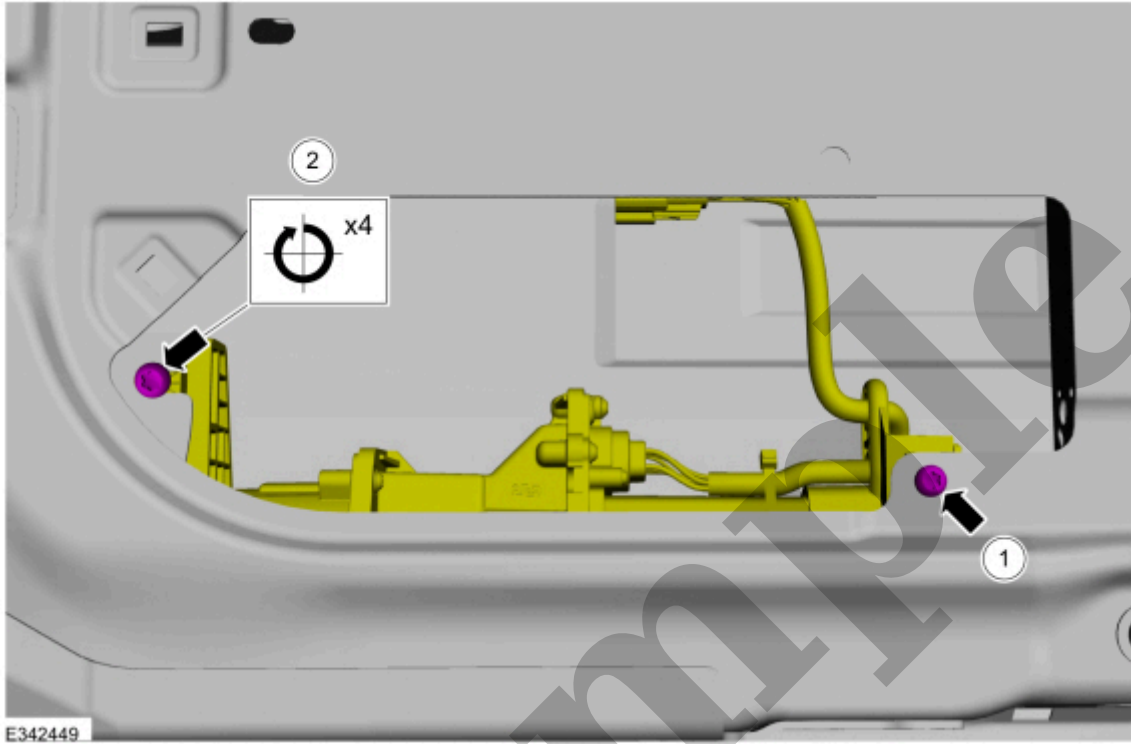

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

1. Install the power tailgate motor bottom bolt.

Torque : 80 lb.in (9 Nm)

2. Tighten the power tailgate motor bottom location bolt.

Torque : 80 lb.in (9 Nm)




[Click here to learn about symbols, color coding, and icons used in this manual.](#)

8. Close the power tailgate fully. Check the operation of power tailgate.

Copyright © Ford Motor Company

3. If equipped.

1. Disconnect the electrical connectors from the main harness.
2. Slide the harness through the box crossmember.

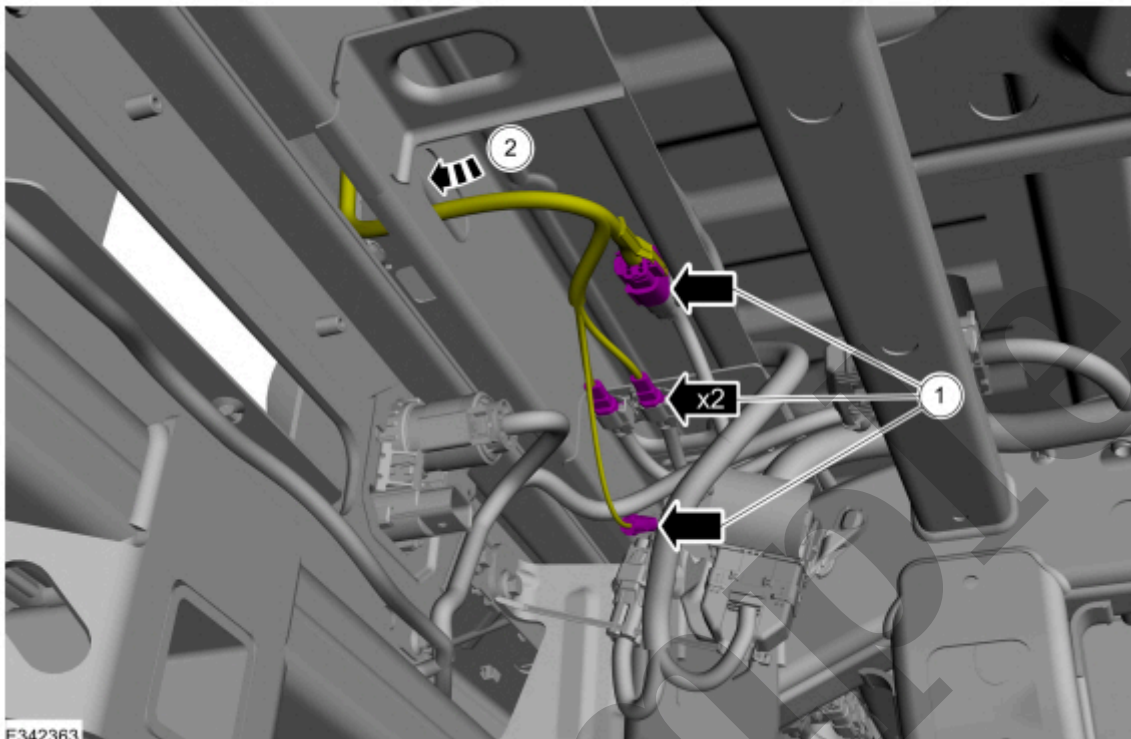


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. **NOTE**

Note the position of the component before removal.


Using a general equipment, gently pry the retainer spring clips and remove the power tailgate damper.

Use the General Equipment: Flat Headed Screw Driver


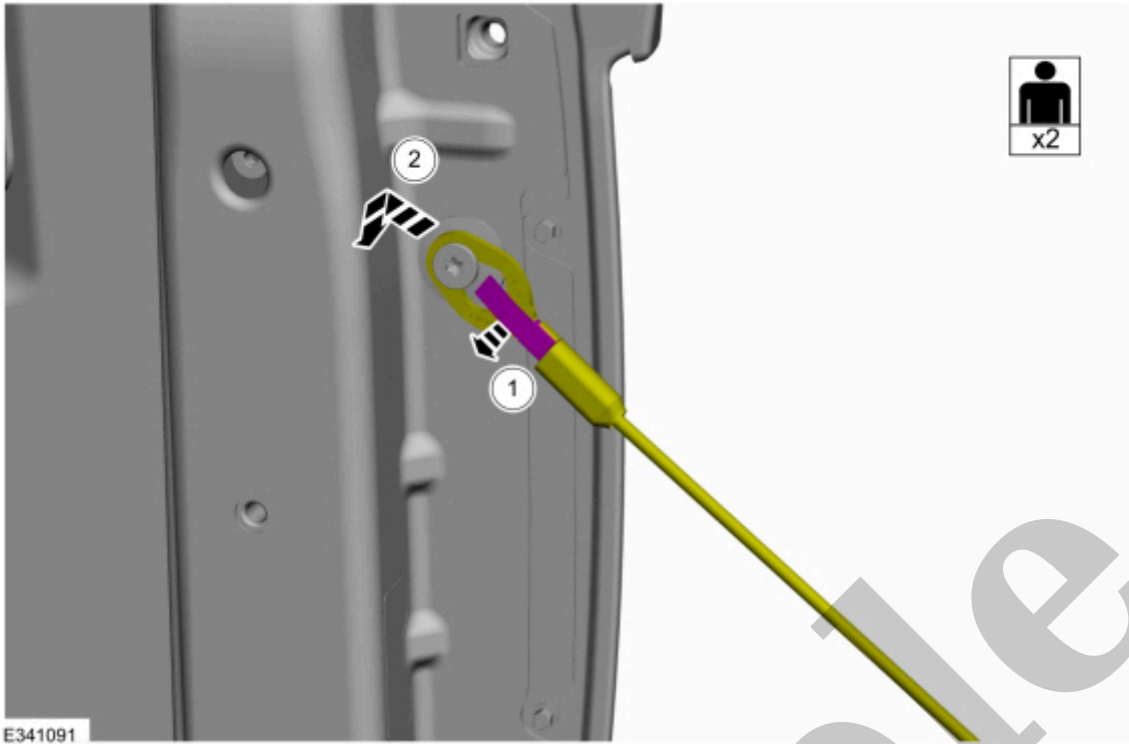


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Remove the retaining screw.

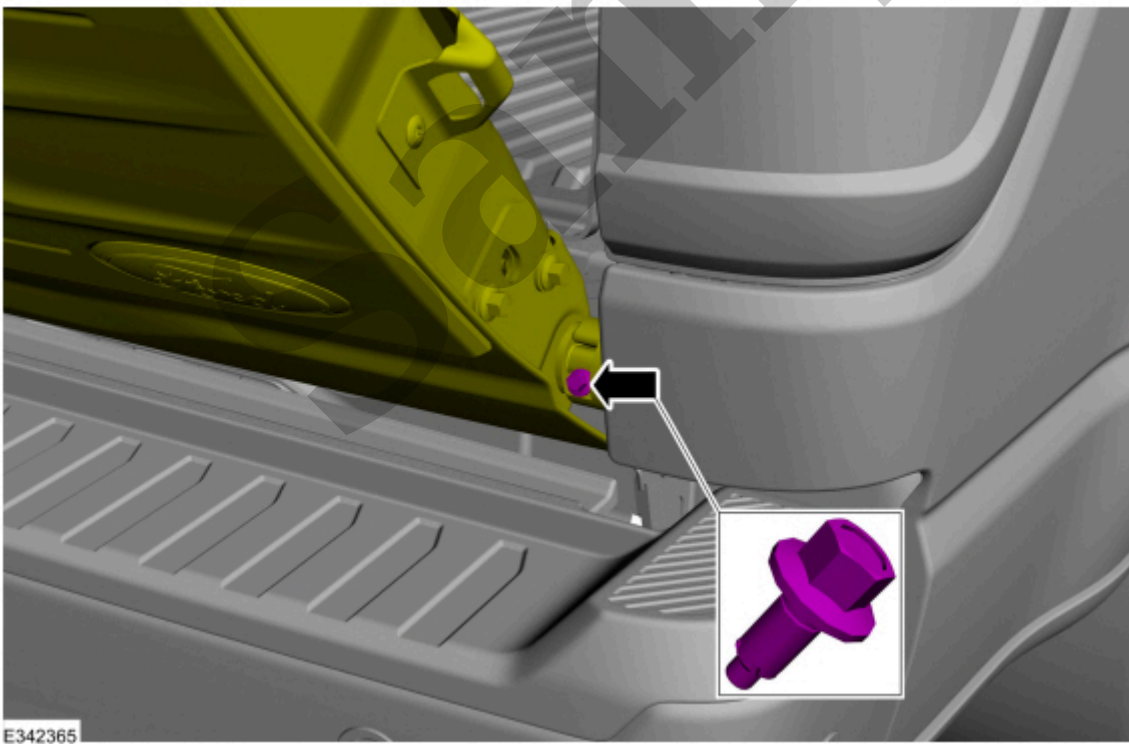

 [Click here to learn about symbols, color coding, and icons used in this manual.](#)

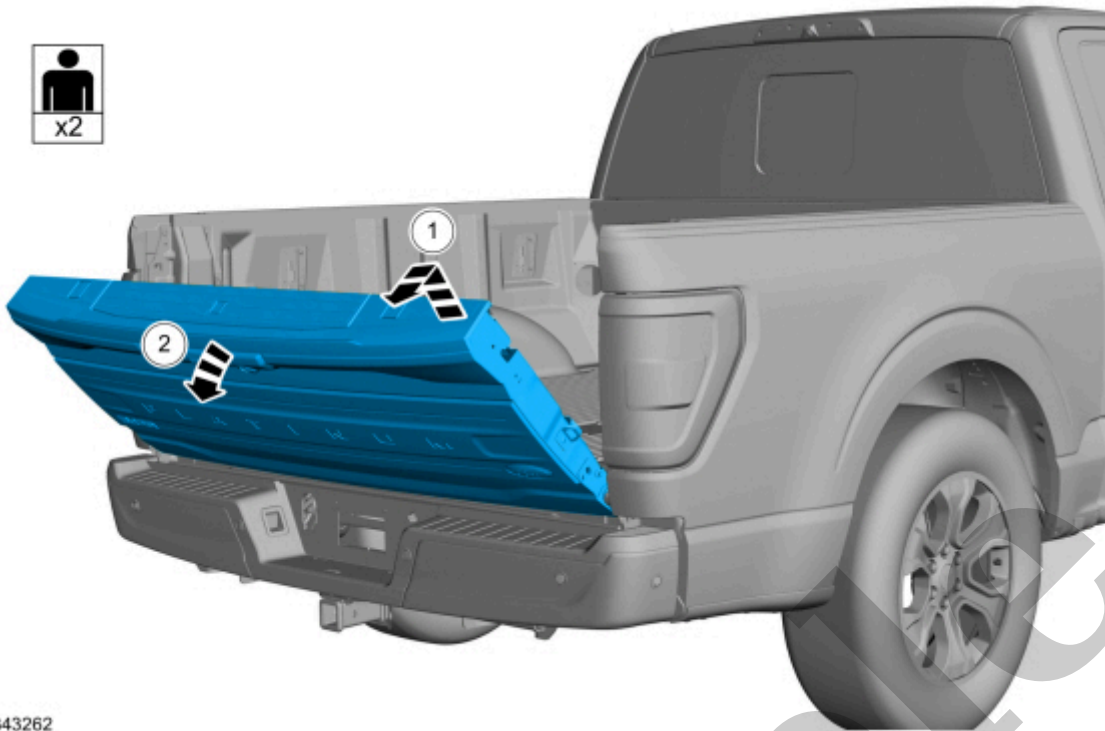

E343262

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


Installation

1. Install the tailgate.

1. Position the tailgate so the LH (left-hand) tailgate pivot is close to the LH (left-hand) hinge and the tailgate is approximately 10 degrees from vertical. Keep the RH (right-hand) tailgate pivot close to the RH (right-hand) hinge, then slide the tailgate left to engage the LH (left-hand) pivot on the LH (left-hand) hinge.
2. Position the tailgate so that it is approximately 41 degrees from vertical. Push the RH (right-hand) pivot onto the hinge.

3. On both sides.

Connect the tailgate support cable to the anchor post.

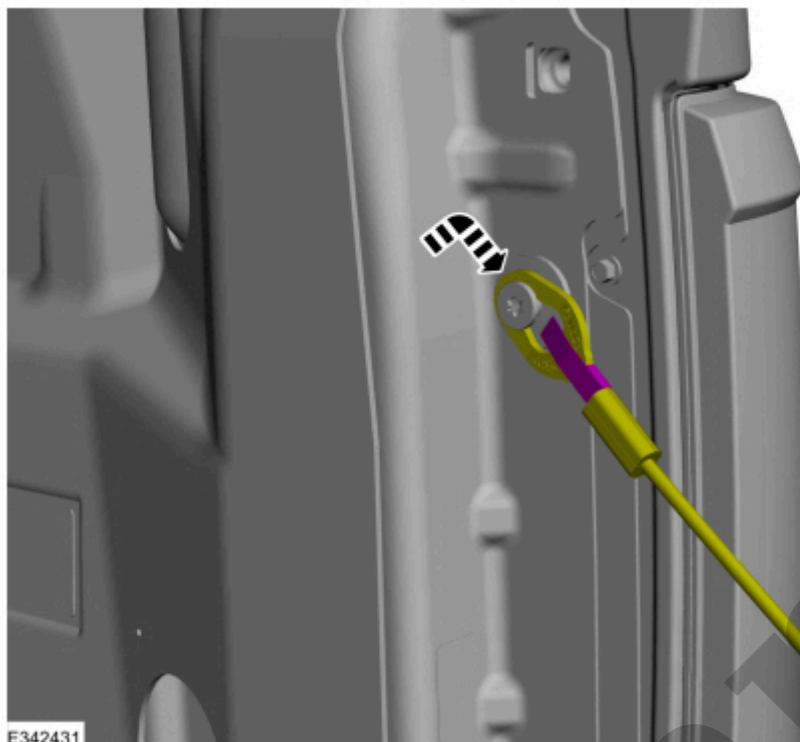

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4.
 1. Slide the harness through the box crossmember.
 2. Connect the electrical connectors to the main harness.



E291780

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

7. Install the tailgate damper and press the ball sockets on to the pivot bolts until fully seated.



Rear Gate Trunk Module (RGTM)

501-04 Pickup Bed and Platform Body	2022 F-150
Removal and Installation	Procedure revision date: 10/2/2020

Rear Gate Trunk Module (RGTM)


Removal

NOTE

Removal steps in this procedure may contain installation details.

1. Remove the screws and the power tailgate panel.



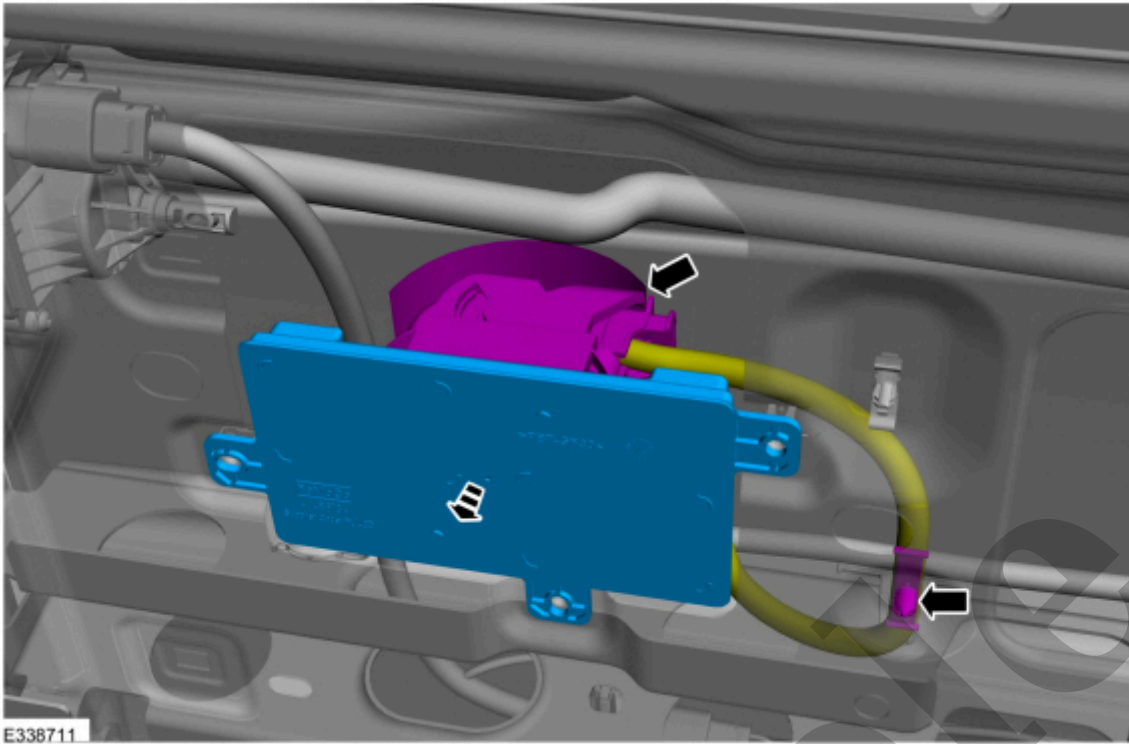

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company