


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


## 2002 FORD F-150 Regular Cab OEM Service and Repair Workshop Manual

[Go to manual page](#)

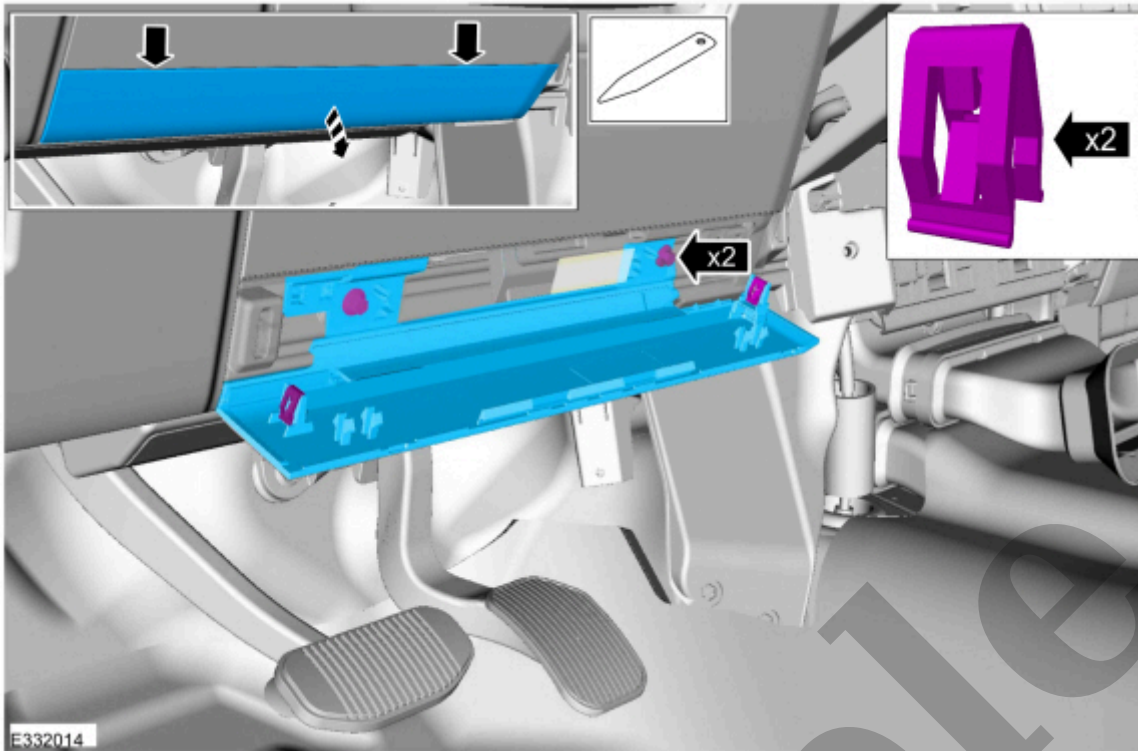

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Release the clips and remove the lower steering column trim panel.

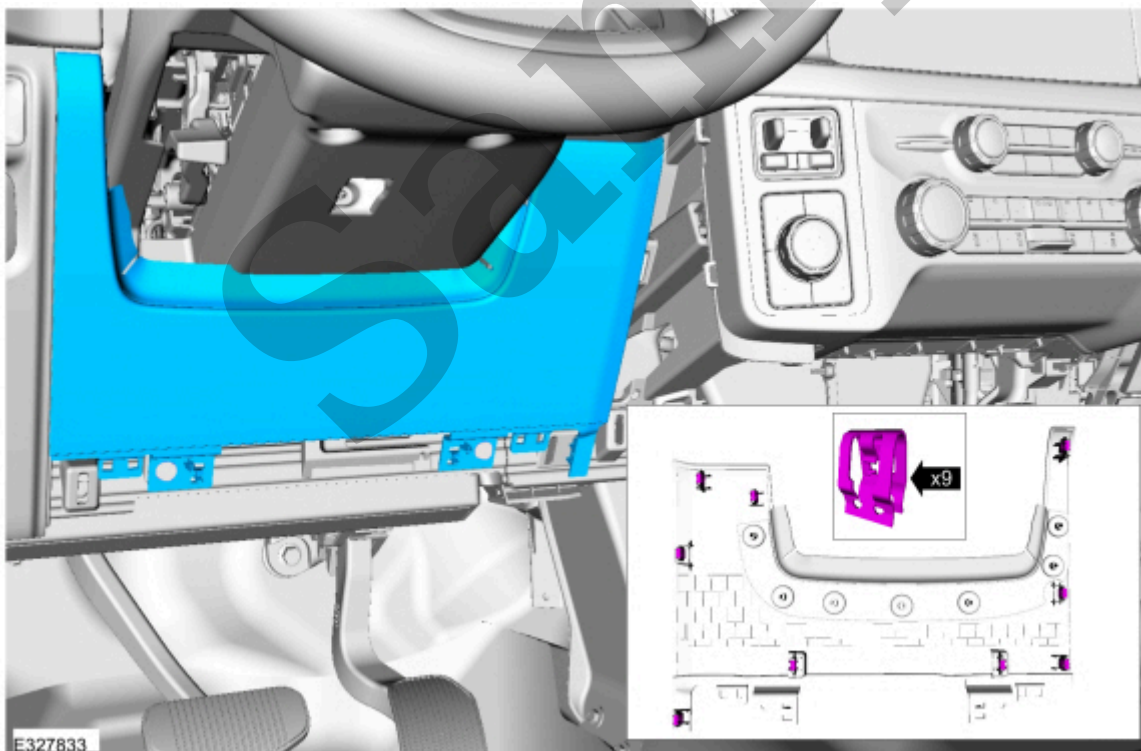


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Release the clips and remove the LH (left-hand) instrument panel trim panel.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. Remove the two bolts and the LH (left-hand) register.

***Torque*** : 22 lb.in (2.5 Nm)

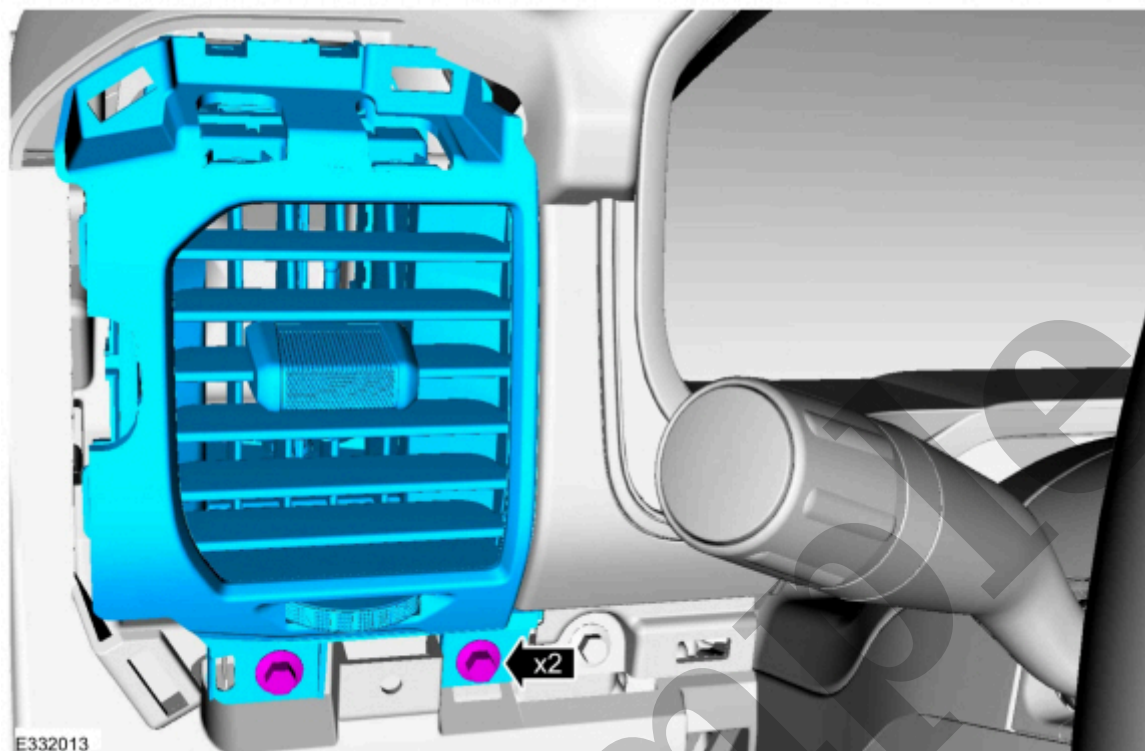

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


6. Remove the bolt and gently release the lower dash panel clips and position out the panel enough to access the rear of the spot lamp switch.

***Torque*** : 22 lb.in (2.5 Nm)

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Sample

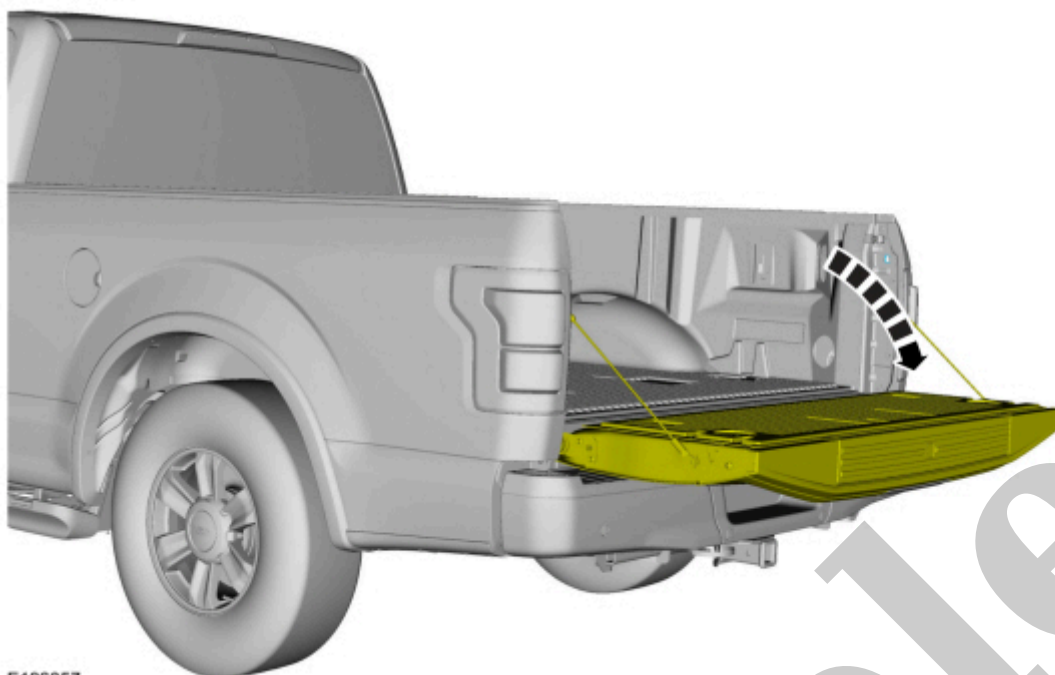

E196057

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. If equipped.

Remove the bedliner tailgate cover.

**Torque** : 22 lb.in (2,5 Nm)




E196058



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

#### **Vehicles without mechanical tailgate handle**


5. Disconnect the right and left tailgate latch actuating rods.

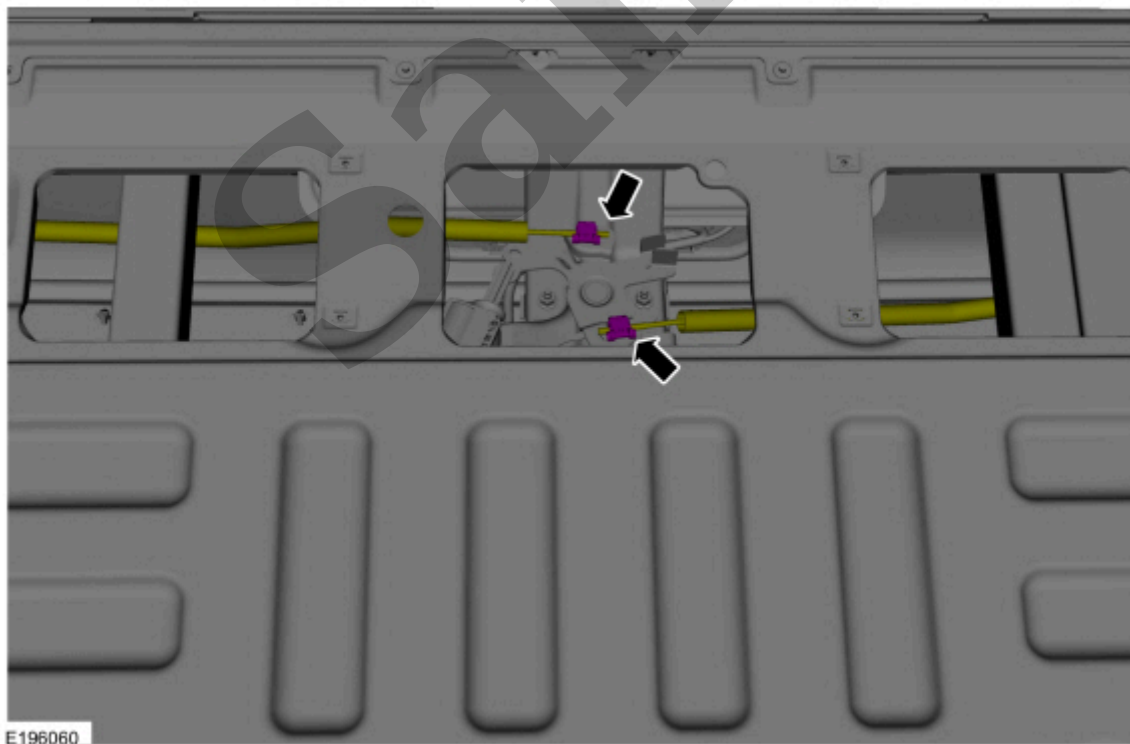

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. If equipped.

Disconnect the tailgate lock to control assembly actuating rod.

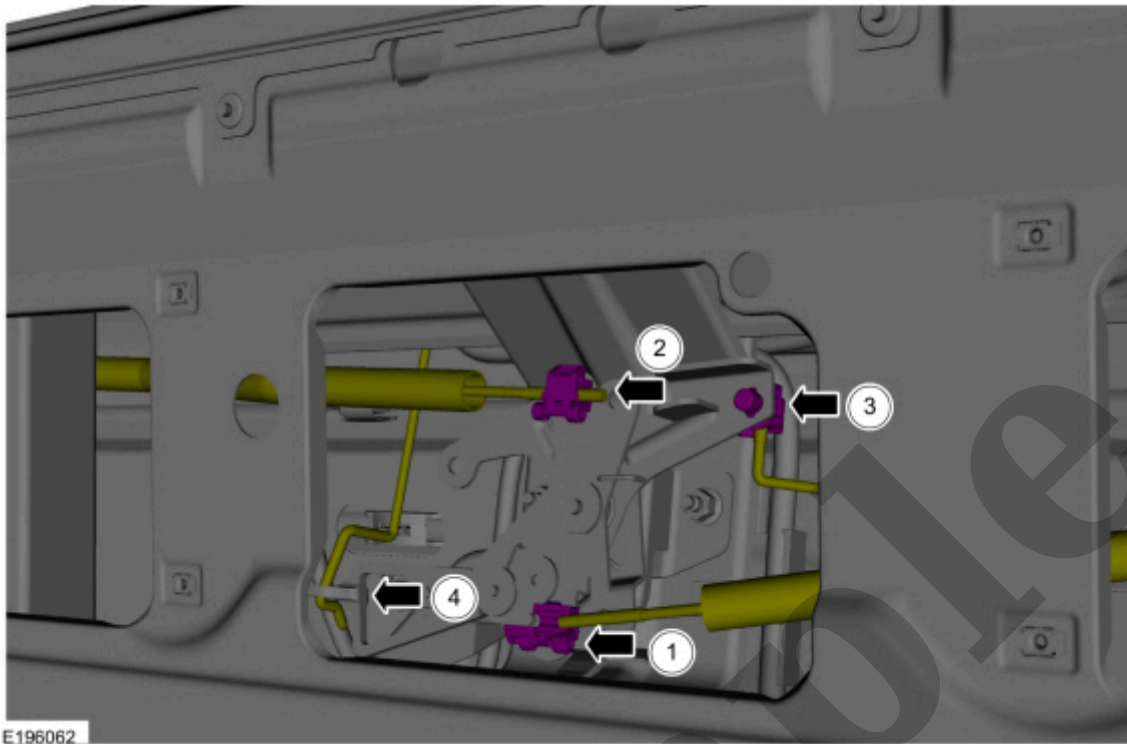

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

8. If equipped.

Disconnect the tailgate lock actuator electrical connector.

**Torque** : 80 lb.in (9 Nm)


## Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Sample




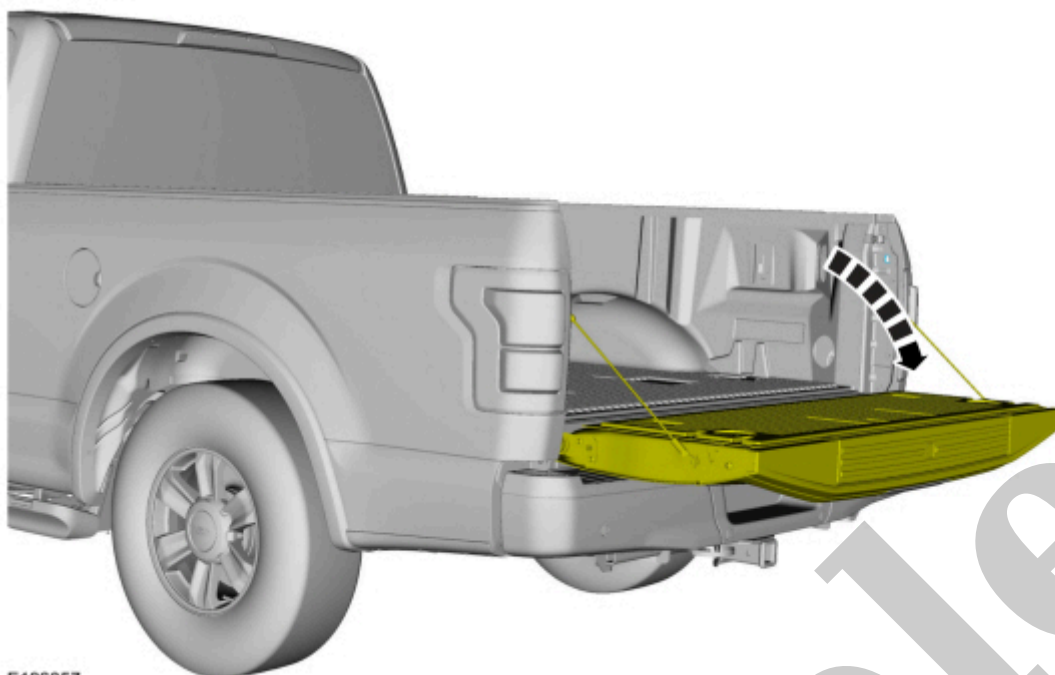


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Remove the tailgate bolts and discard upper tailgate bolt.

**Torque** : 18 lb.ft (25 Nm)

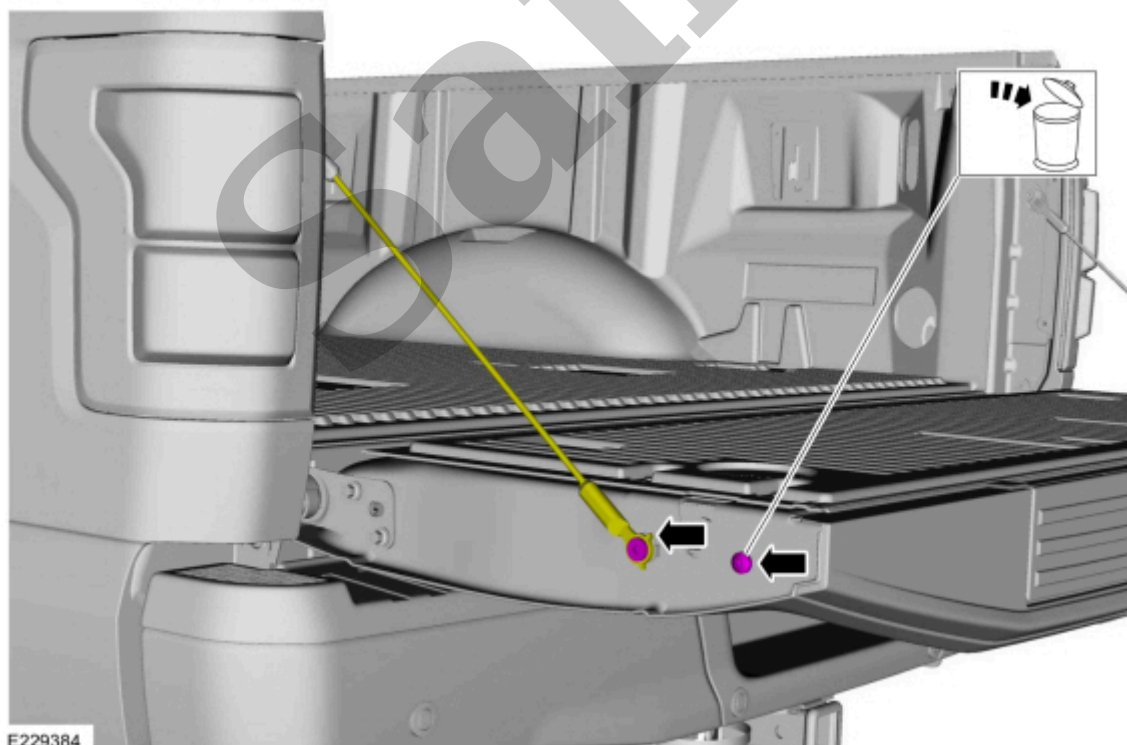

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

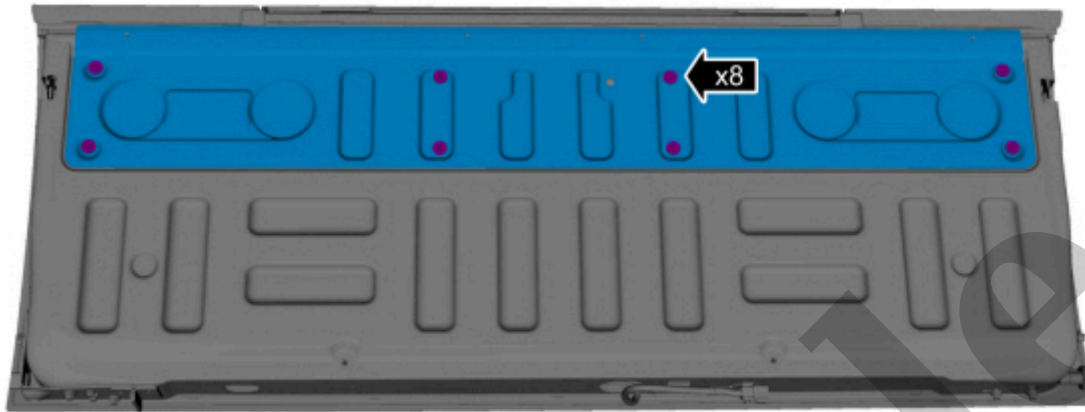

E196059

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

5. If equipped.

Remove the workspace tailgate access panel bolts and the workspace tailgate access panel.

**Torque** : 71 lb.in (8 Nm)



E335410