


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


## 2003 VOLVO V40 OEM Service and Repair Workshop Manual

[Go to manual page](#)

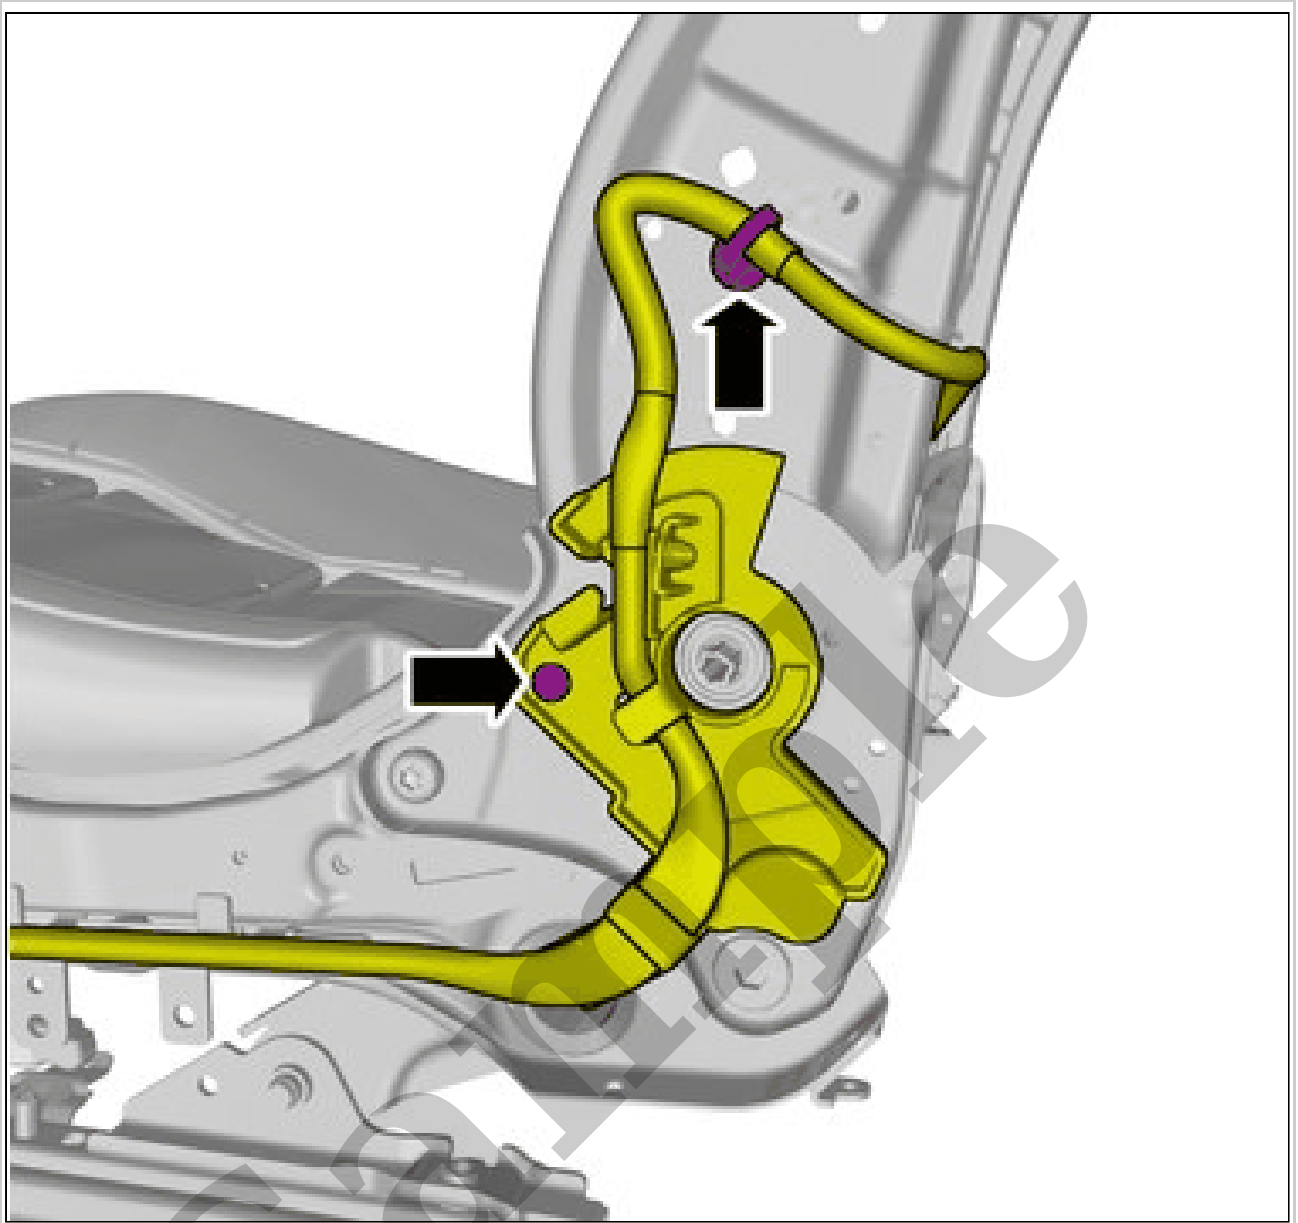


Courtesy of VOLVO CARS CORPORATION

Remove the cable harness clips.  
Remove the clip.  
Loosen the wiring harness or move it to the side.  
**ON BOTH SIDES.**

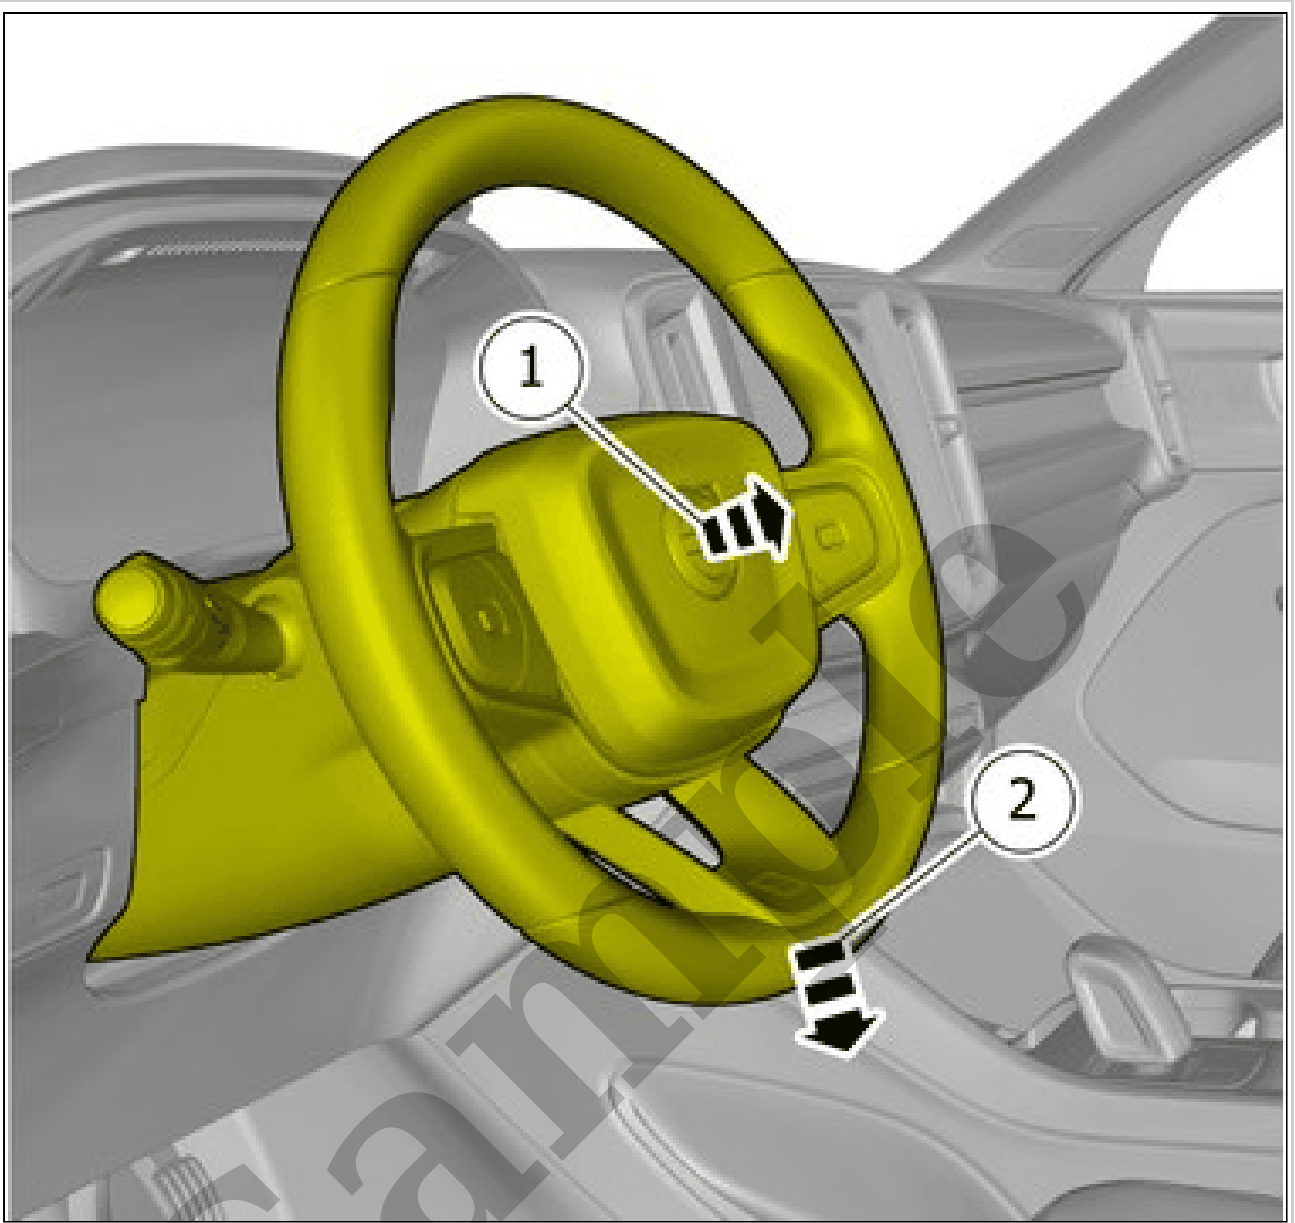


Courtesy of VOLVO CARS CORPORATION

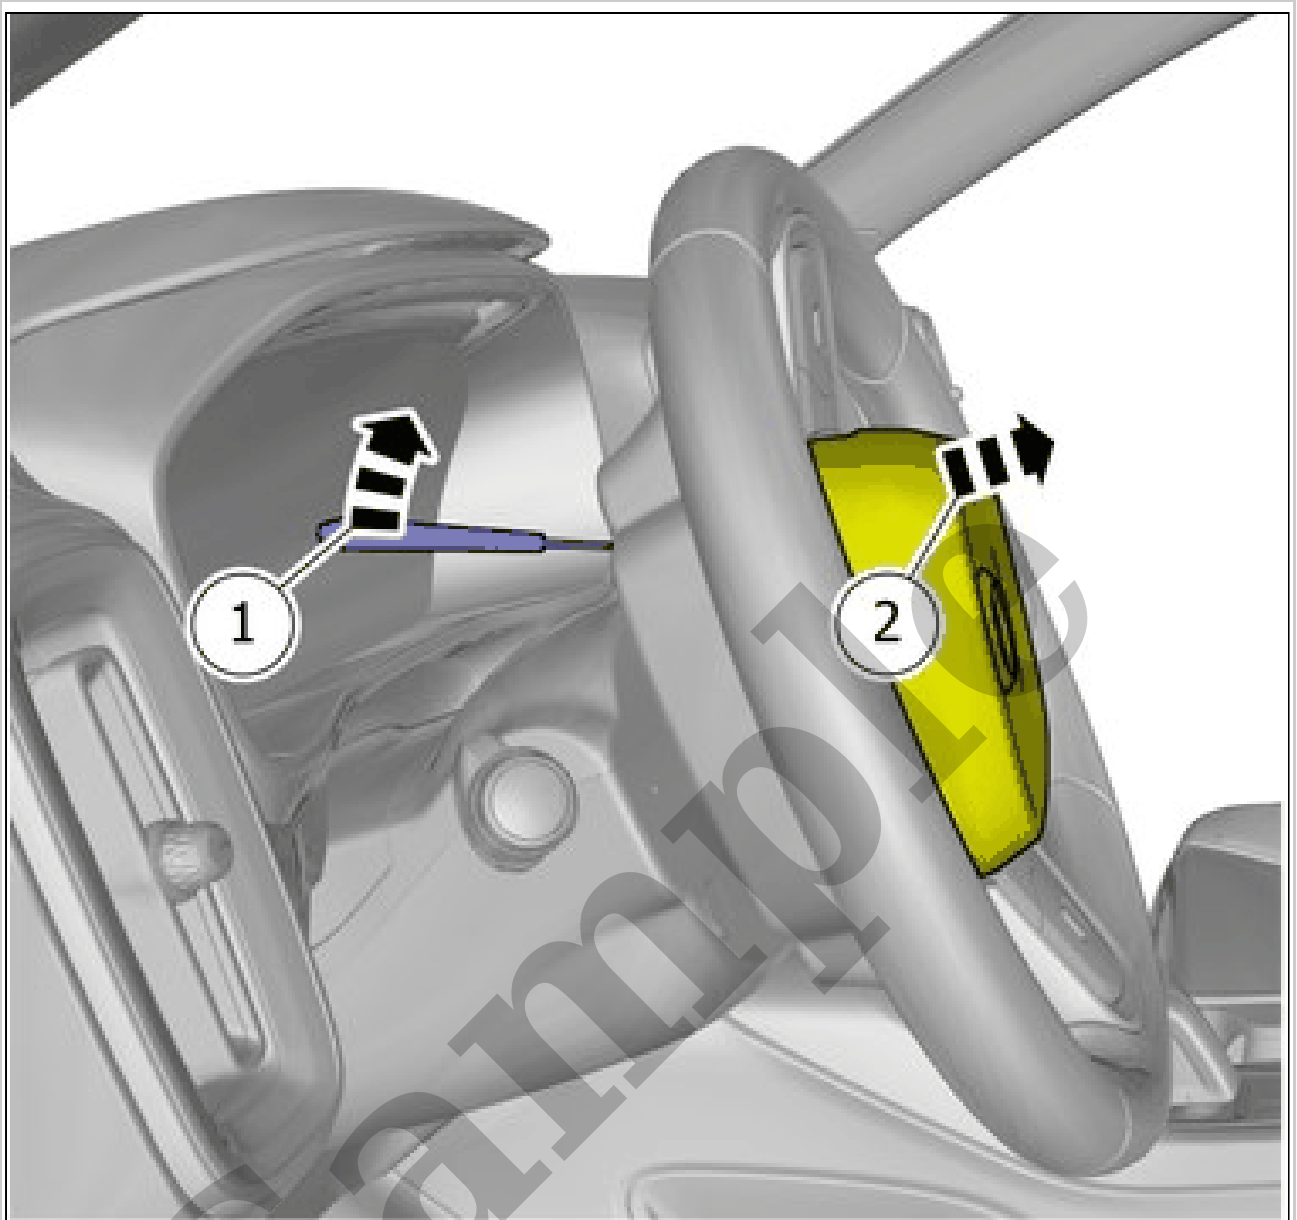

Courtesy of VOLVO CARS CORPORATION


1. Release the catch.
2. Loosen the marked detail.

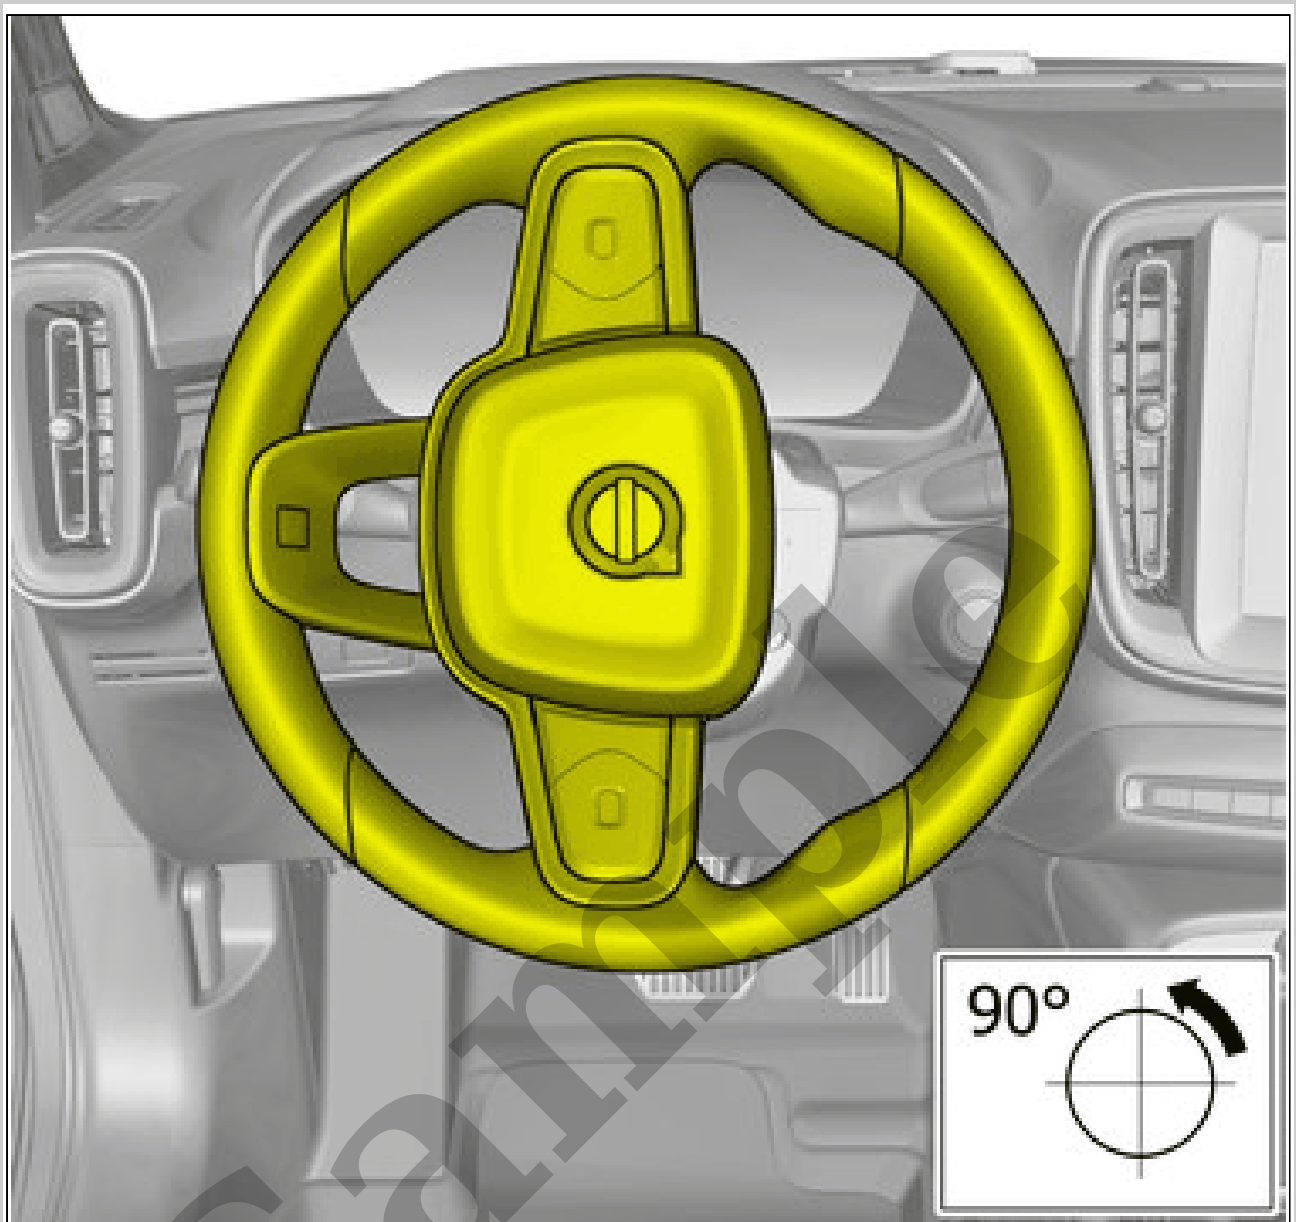

Courtesy of VOLVO CARS CORPORATION


Perform battery disconnecting and connecting. Refer to: BATTERY DISCONNECTING AND CONNECTING

**WARNING:** *The supplemental restraint system (SRS) is active for a certain length of time after the power supply has been disconnected. Wait for a minimum of 30 seconds before disconnecting or removing any SRS components.*

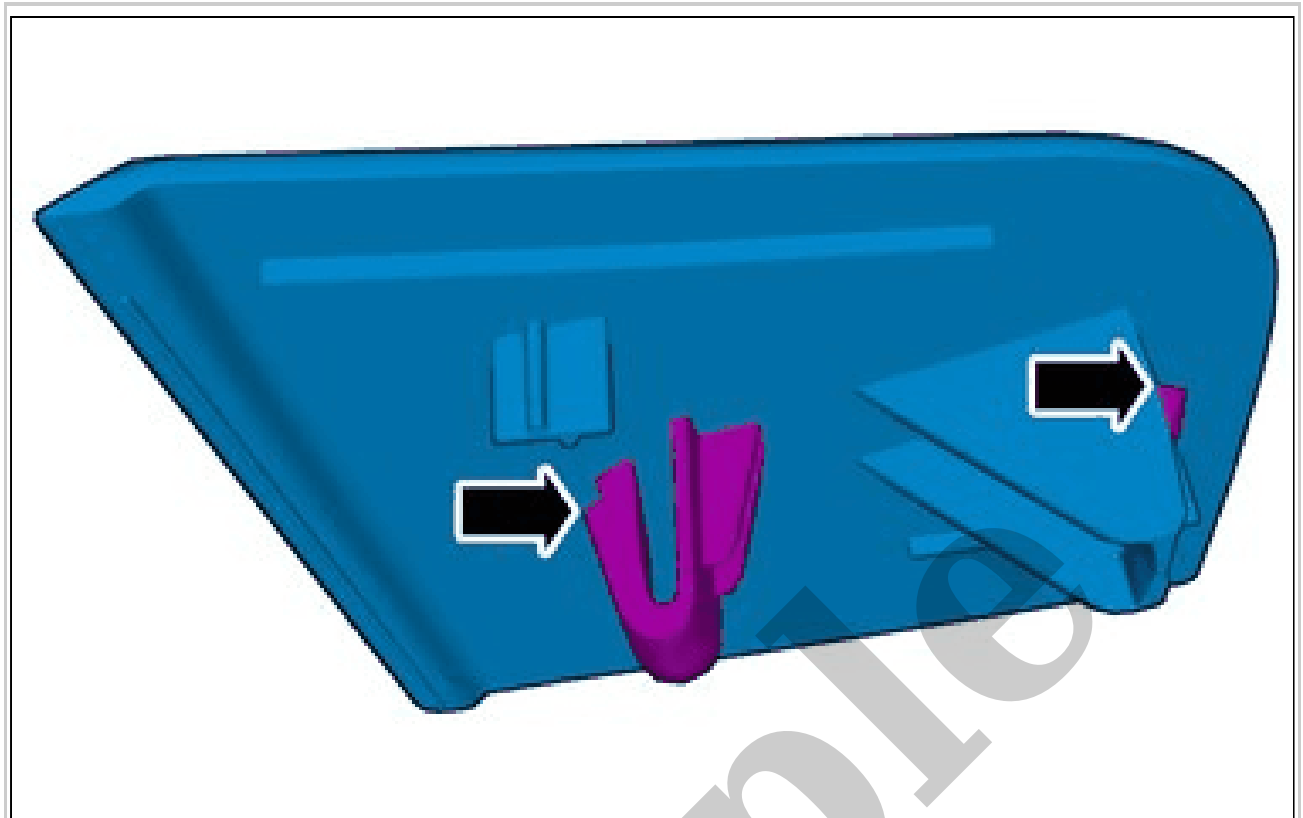


Courtesy of VOLVO CARS CORPORATION

**NOTE:** *The graphic shows the back of the component before removal.*

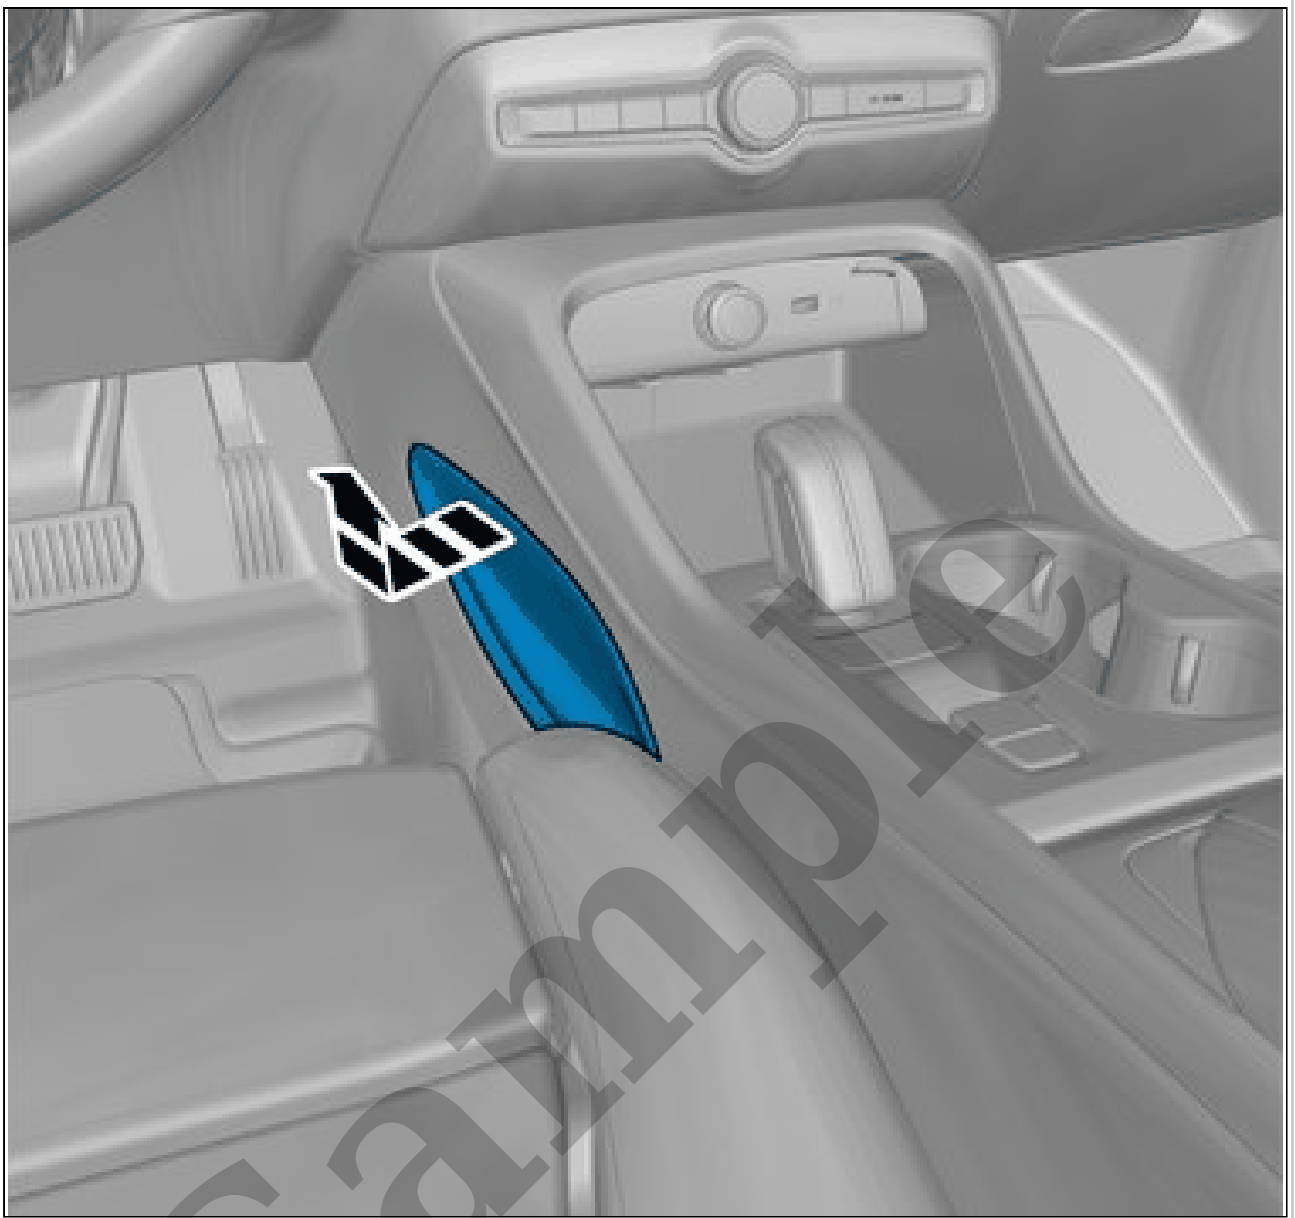

Courtesy of VOLVO CARS CORPORATION


Remove the marked part.  
**Use:** Interior trim remover

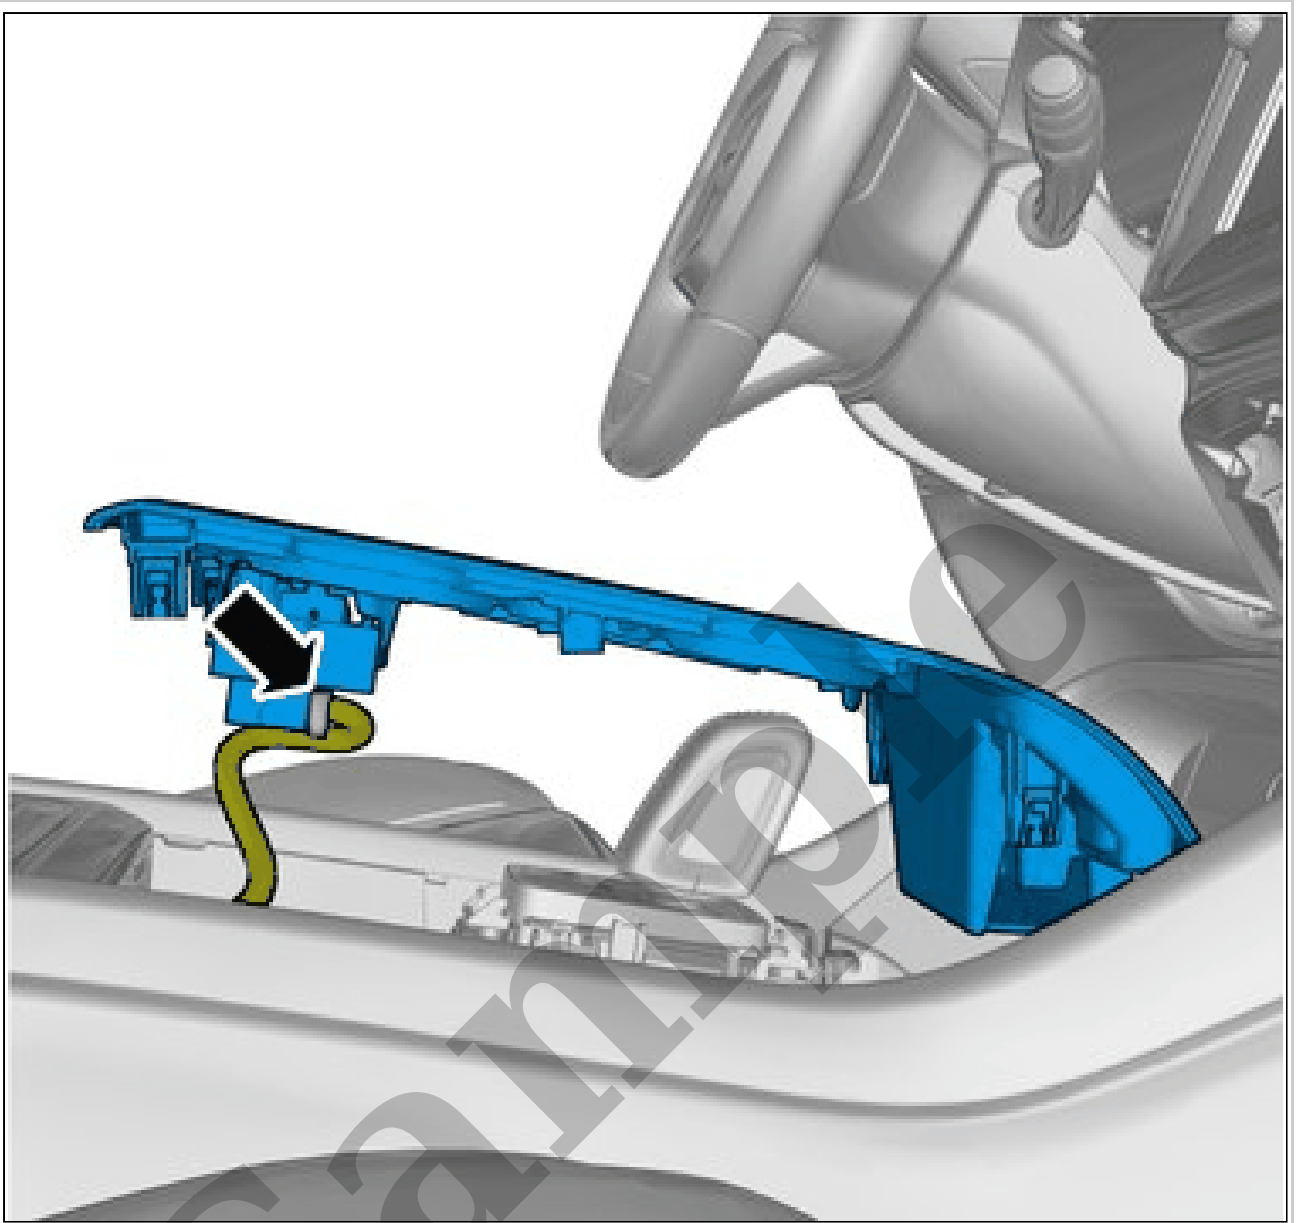

Courtesy of VOLVO CARS CORPORATION


Disconnect the connector.  
Remove the marked part.



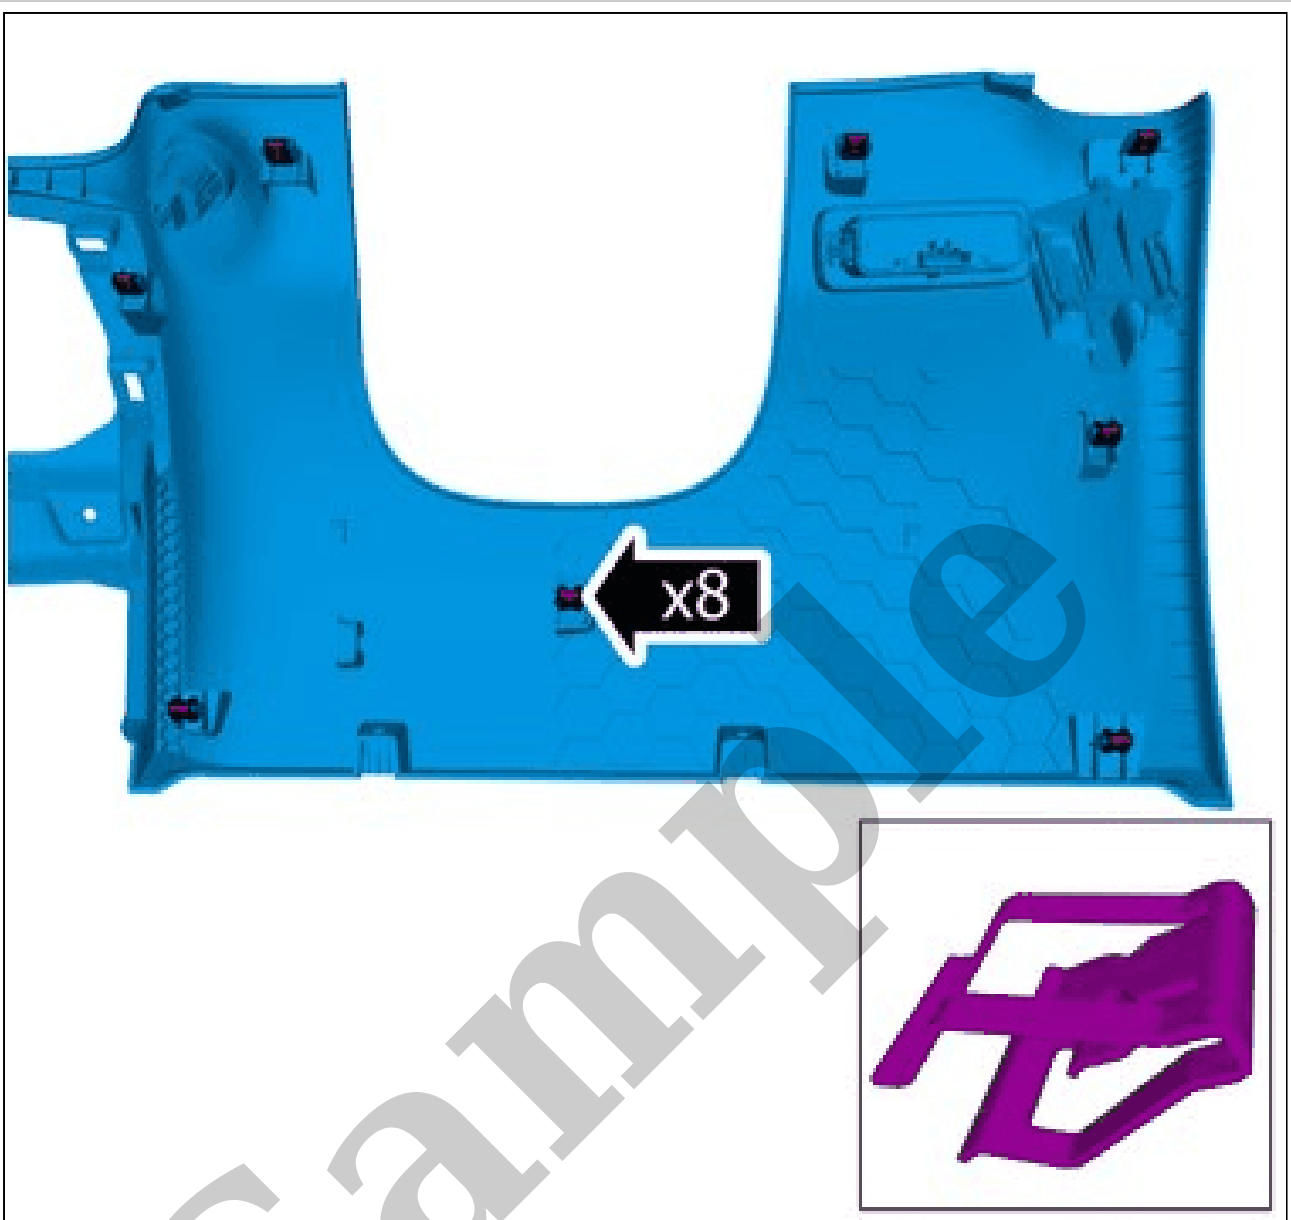

Courtesy of VOLVO CARS CORPORATION

**NOTE:** *The graphic shows the back of the component before removal.*

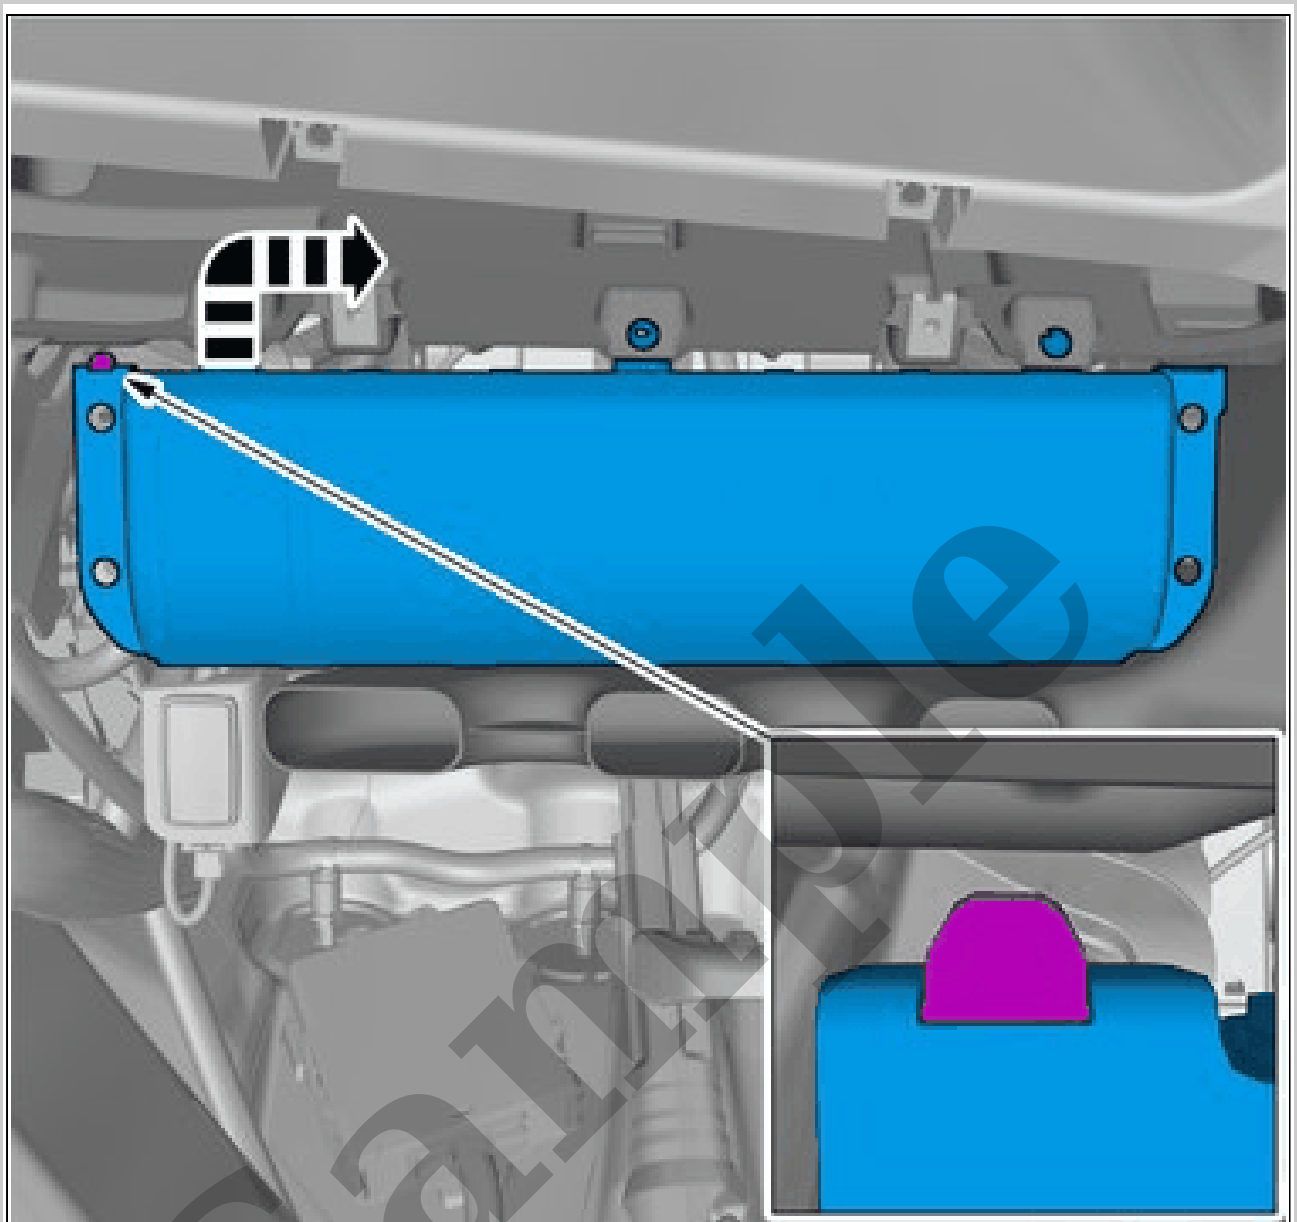

Courtesy of VOLVO CARS CORPORATION

Remove the marked part.  
Disconnect connector, ignition cable. Refer to: IGNITER WIRE CONNECTOR