

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2003 VOLVO V70 OEM Service and Repair Workshop Manual

Go to manual page


NOTE: Removal steps in this procedure may contain installation details.

Follow instructions about safety information pyrotechnical system. Refer to: SAFETY INFORMATION PYROTECHNICAL SYSTEMS


See information regarding the handling of non-deployed pyrotechnical parts. Refer to: HANDLING NON-DEPLOYED PYROTECHNICAL PART

Perform battery disconnecting and connecting. Refer to: BATTERY DISCONNECTING AND CONNECTING

Remove the B-pillar trim panel. Refer to: B-PILLAR TRIM PANEL

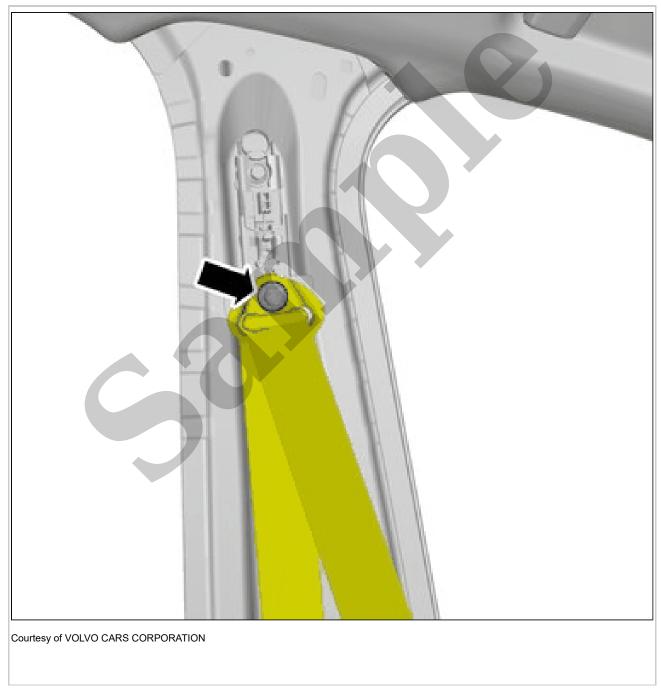

Torque: Safety belt retractor front to body, 40Nm

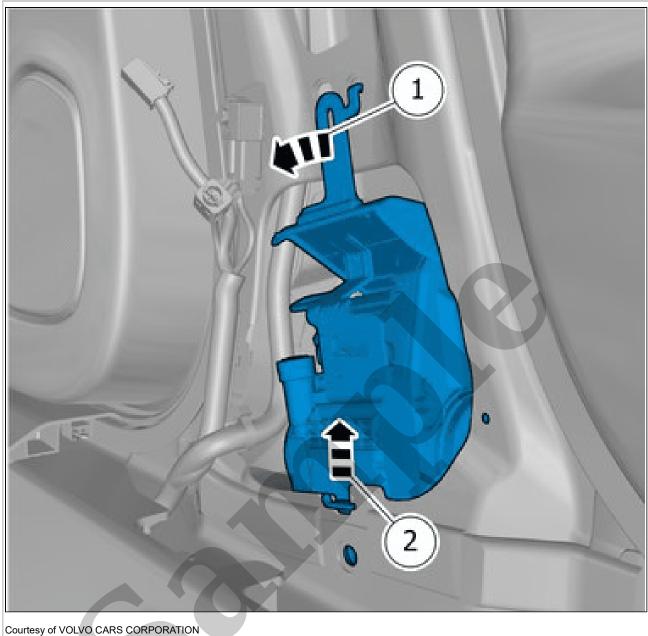

Remove the marked part.


INSTALLATION

To install, reverse the removal procedure.

NOTE: This step is only necessary when installing a new component.

Order and download the appropriate software according to: VIDA/Software/Hardware Changes **CHECK**

Perform seatbelt function, check. Refer to: SEAT BELT FUNCTION, CHECK Perform supplemental restraint system (SRS), post check. Refer to: SUPPLEMENTARY RESTRAINT **SYSTEM**

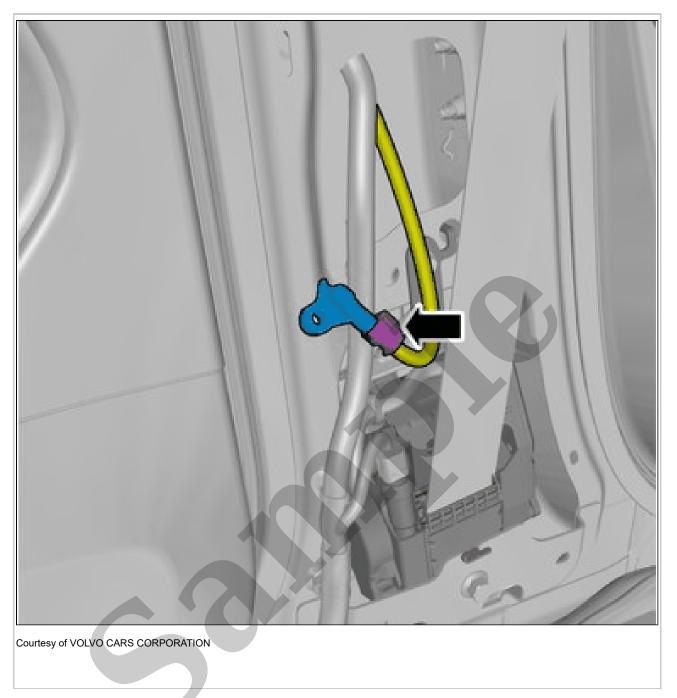

Disconnect the connector. Remove the marked part.

IMPACT SENSOR, B-PILLAR > IMPACT SENSOR, B-PILLAR [2018-2022] > INSTALLATION

To install, reverse the removal procedure.

Perform supplemental restraint system (SRS), post check. Refer to: SUPPLEMENTARY RESTRAINT SYSTEM

IMPACT SENSOR, C-PILLAR > IMPACT SENSOR, C-PILLAR [2018-2022] > REMOVAL



Courtesy of VOLVO CARS CORPORATION

NOTE: The graphic shows the back of the component before removal.




Remove the marked part.

IMPACT SENSOR, C-PILLAR > IMPACT SENSOR, C-PILLAR [2018-2022] > INSTALLATION

To install, reverse the removal procedure.


Perform supplemental restraint system (SRS), post check. Refer to: SUPPLEMENTARY RESTRAINT SYSTEM

IMPACT SENSOR, FRONT > IMPACT SENSOR, FRONT [2021-2022, E400V6] > REMOVAL

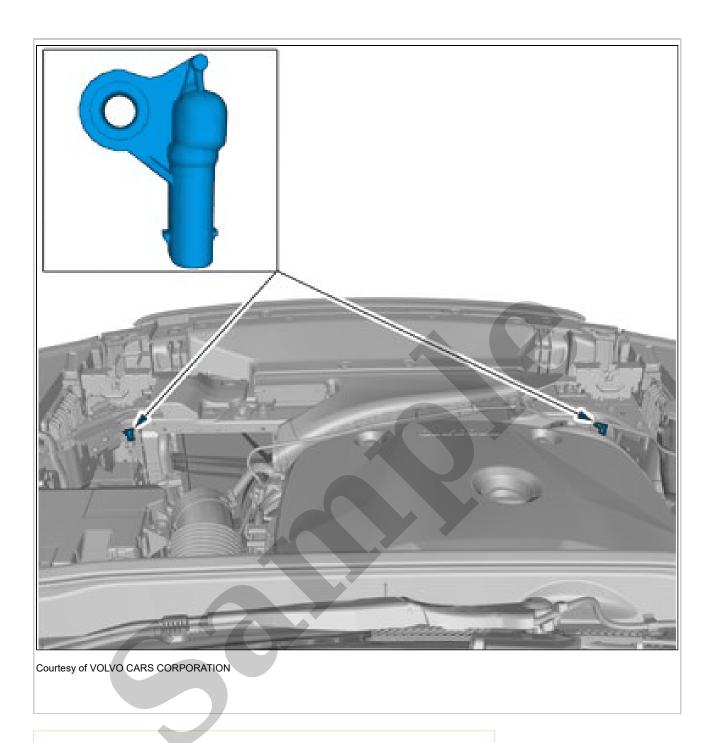


NOTE: Orientation view


APPLIES TO THE RIGHT-HAND SIDE

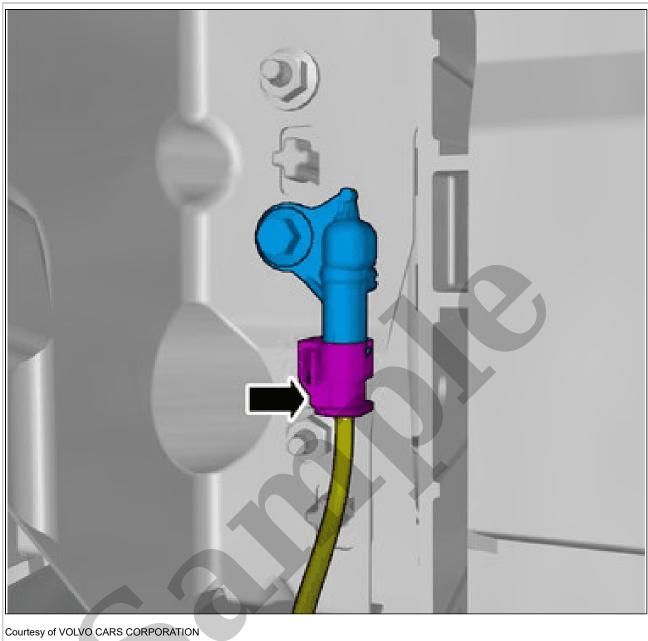

Disconnect the connector.

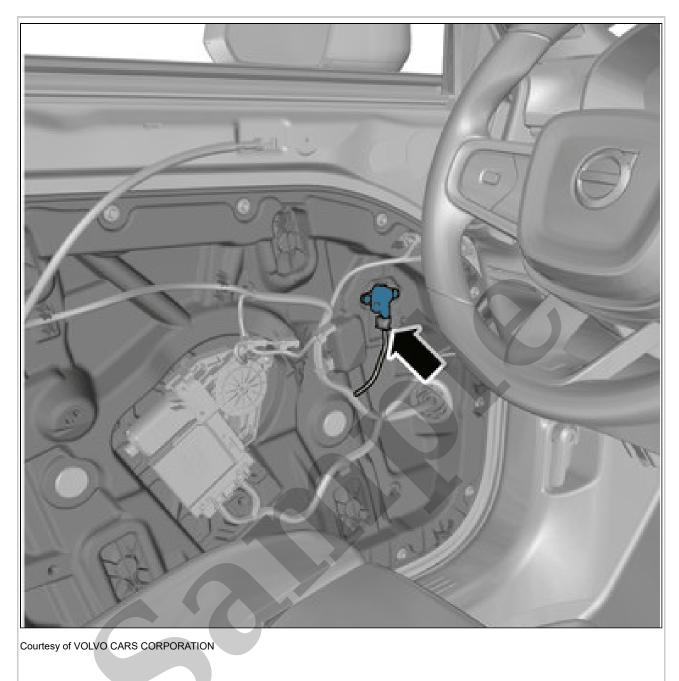

Disconnect the connector.

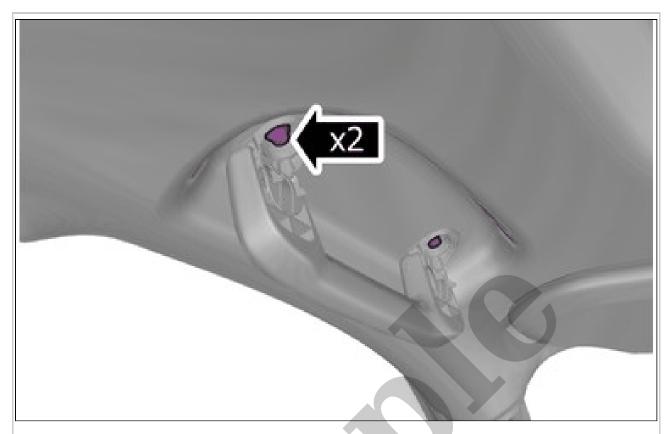

Courtesy of VOLVO CARS CORPORATION

Torque: Entry handle, to bracket, 6Nm

Remove the screws.
On both sides.