

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2004 FORD Focus C-Max OEM Service and Repair Workshop Manual

Go to manual page




E338508

Click here to learn about symbols, color coding, and icons used in this manual.


Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

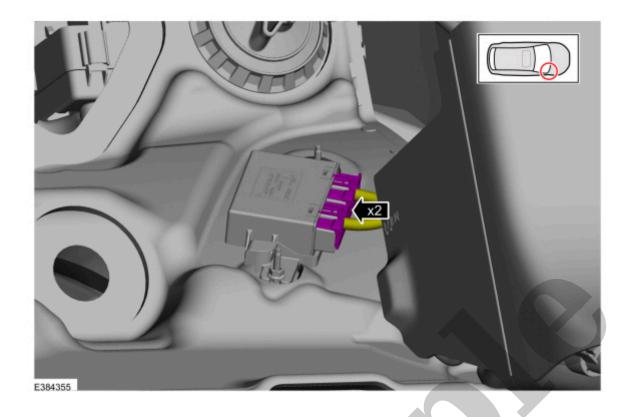

- 2. Remove the nuts and the FHCM (Front Hatch Control Module) bracket assembly.
 - *Torque* : 36 lb.in (4.1 Nm)

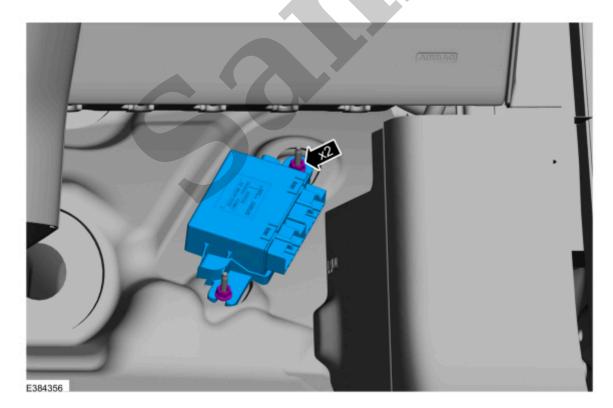

Click here to learn about symbols, color coding, and icons used in this manual.

Hood

501-02 Front End Body Panels	2022 F-150	
Removal and Installation	<i>Procedure revision date: 10/2/2020</i>	

Hood

Removal


NOTE


Removal steps in this procedure may contain installation details.


1. **NOTE**

This step is only necessary when installing a new component.

Remove the retainers and hood insulation.

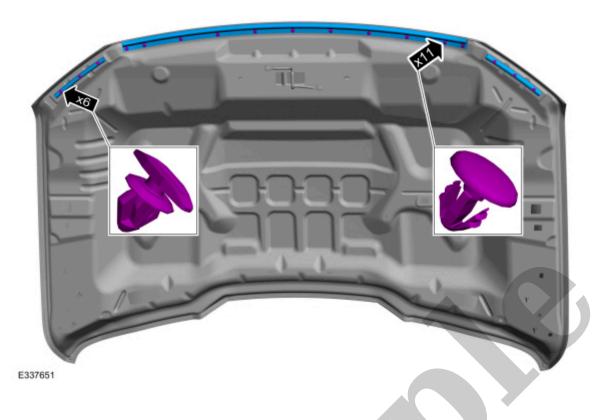

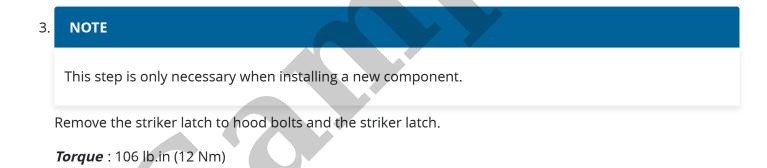

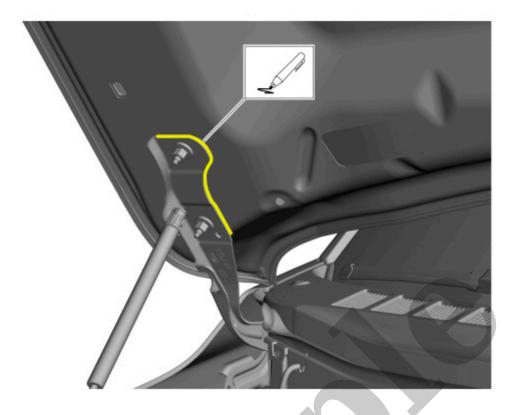

E337653

Click here to learn about symbols, color coding, and icons used in this manual.

5. NOTICE

Support the hood before removing the strut. Failure to follow this direction may result in damage to the components.

NOTICE

Use the correct service parts when replacing the hood struts. The hood struts are not interchangeable and using the incorrect service part will result in damage to components.

Release the clips and position aside the struts.



Installation

- 1. To install, reverse the removal procedure.
- 2. Check the hood alignment. Align the hood as necessary.

Refer to: Hood Alignment(501-03 Body Closures, General Procedures).

Copyright © Ford Motor Company




2. **NOTE**

This step is only necessary when installing a new component.

Remove the striker latch to hood bolts and the striker latch.

Torque : 71 lb.in (8 Nm)

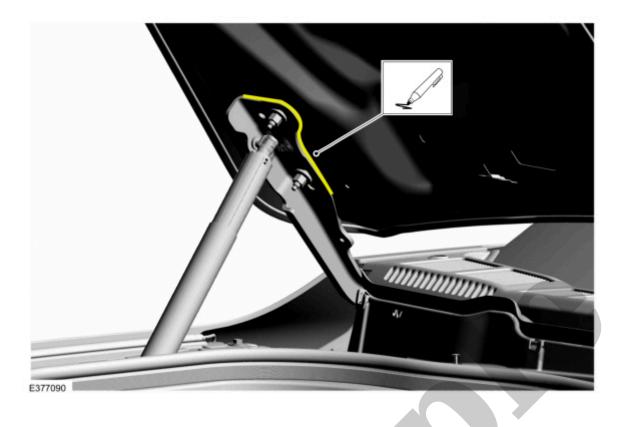

4. NOTICE

Support the hood before removing the strut. Failure to follow this direction may result in damage to the components.

NOTICE

Use the correct service parts when replacing the hood struts. The hood struts are not interchangeable and using the incorrect service part will result in damage to components.

NOTE


RH (right-hand) side shown, LH (left-hand) side similar.

Release the clips and position aside the struts.

6. 1. If equipped.

Disconnect the front camera electrical connector.

- 2. Disconnecct the power hood electrical connector.
- 3. Detach the retainers and postion aside the wiring harness.

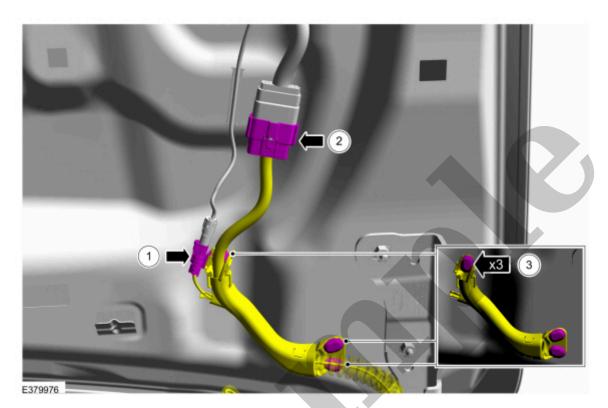

Click here to learn about symbols, color coding, and icons used in this manual.

7. NOTE

This step requires the aid of another technician.

Remove the nuts and the power hood.

Torque : 177 lb.in (20 Nm)