


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


2004 FORD Mustang OEM Service and Repair Workshop Manual

[Go to manual page](#)

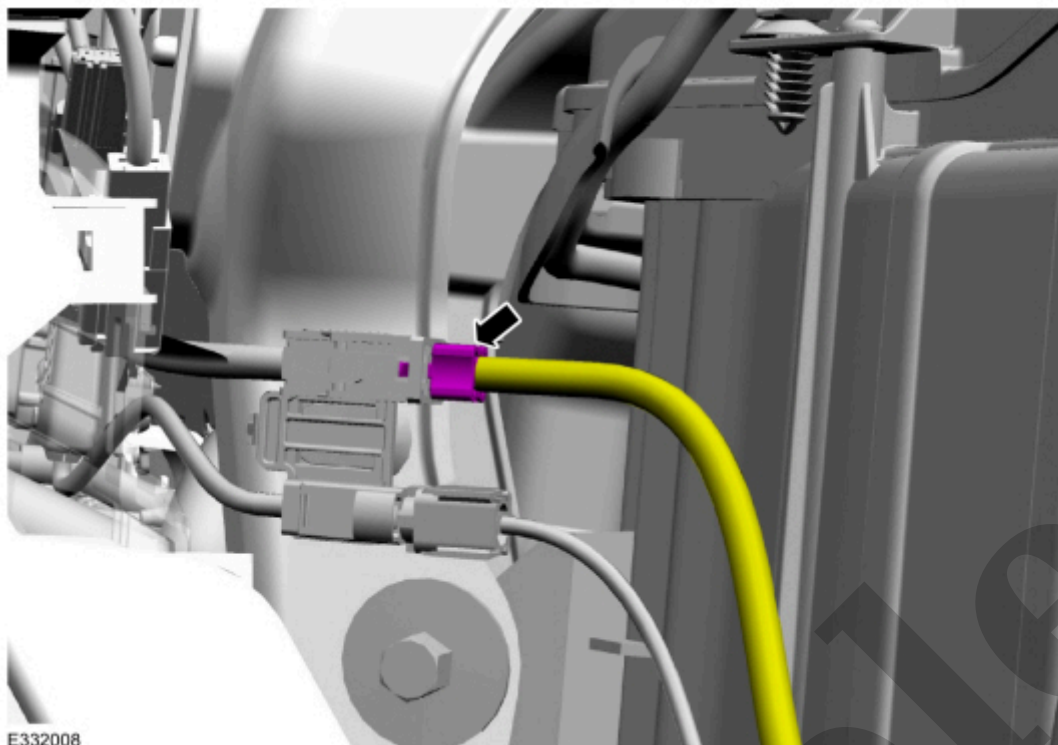

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

65. Separate the cable retainer and remove the cable.

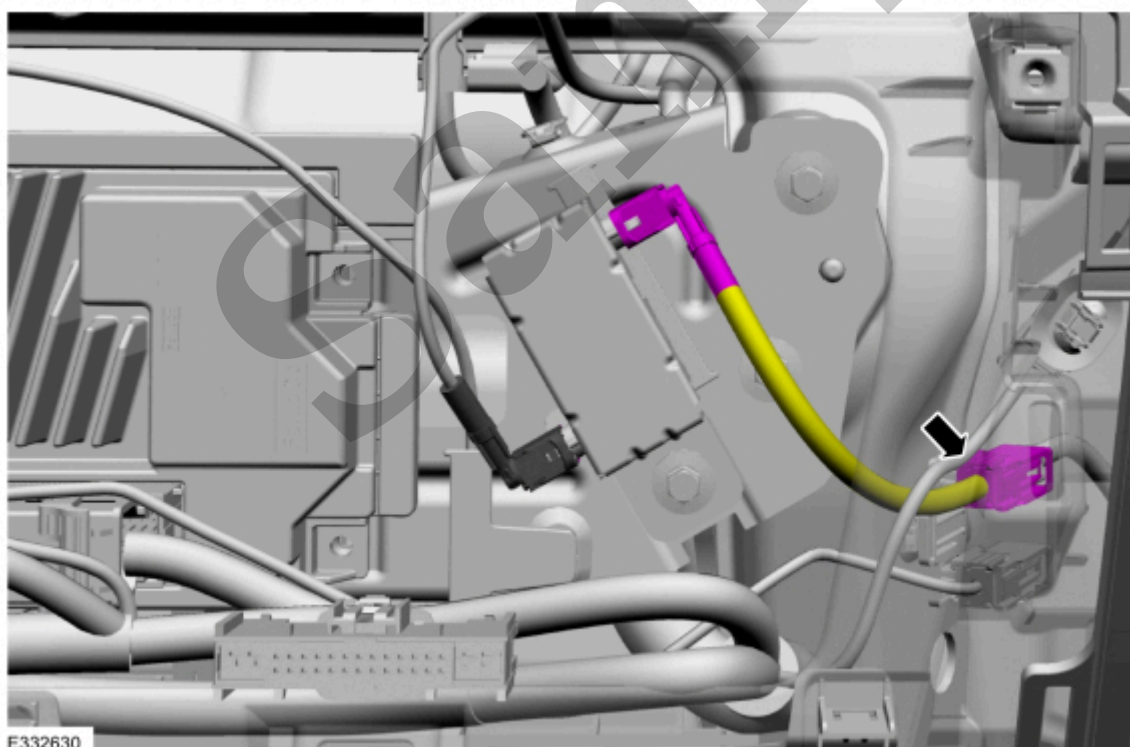

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation



Audio Unit Antenna

415-00 Information and Entertainment System - General Information	2022 F-150
Removal and Installation	Procedure revision date: 09/18/2020

Audio Unit Antenna


Removal

NOTE

Removal steps in this procedure may contain installation details.

Antenna mast

1. Remove the antenna mast.

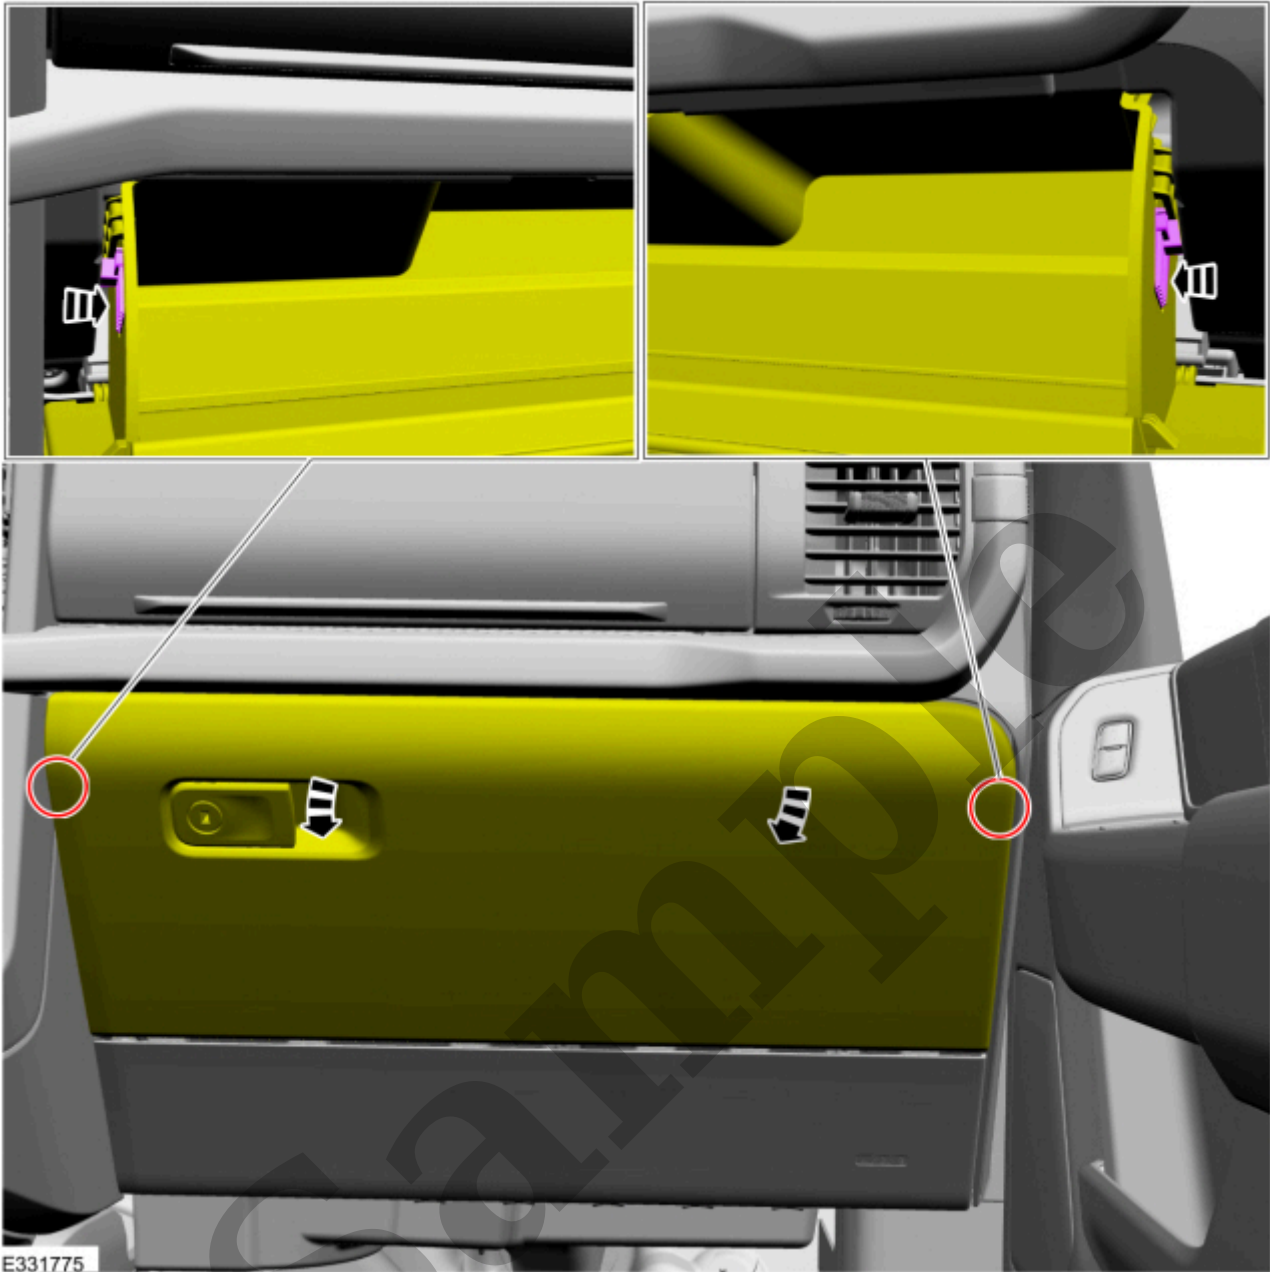


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Disconnect the audio unit antenna cable and unclip from the HVAC (heating, ventilation and air conditioning) case.

6. Remove the cowl panel grille.

Refer to: [Cowl Panel Grille](#)(501-02 Front End Body Panels, Removal and Installation).

7. Remove the screws and the audio unit antenna and cable lead assembly.

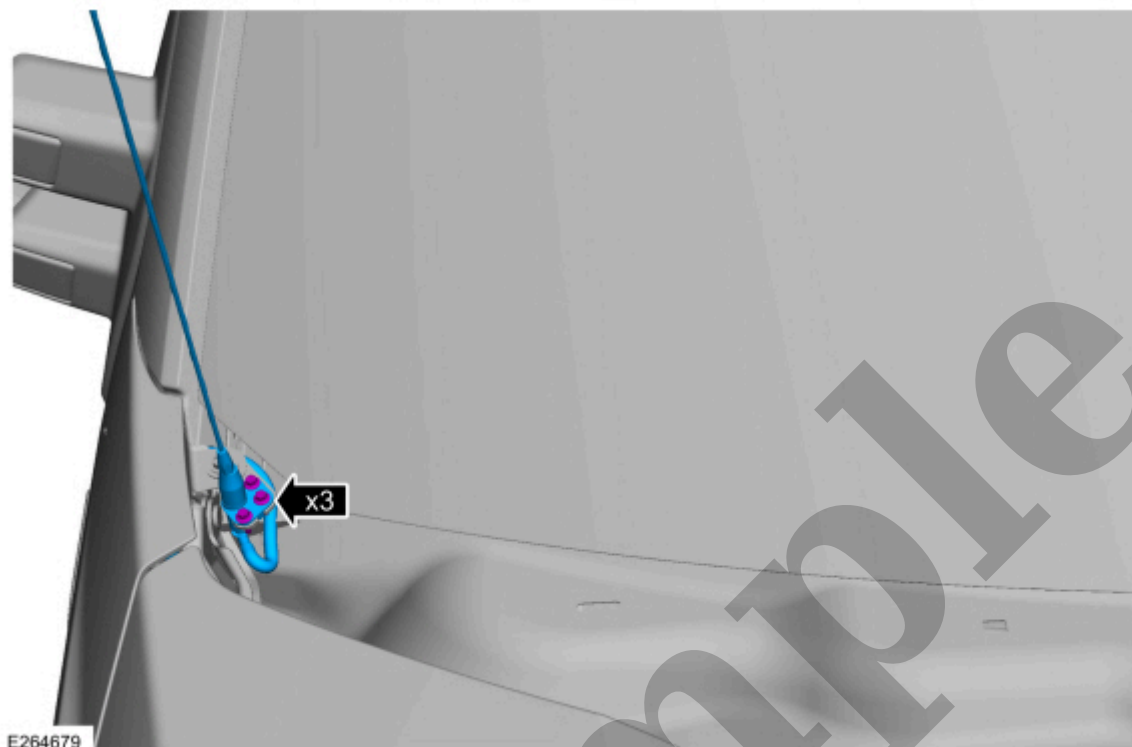


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

Disconnect the electrical connector.

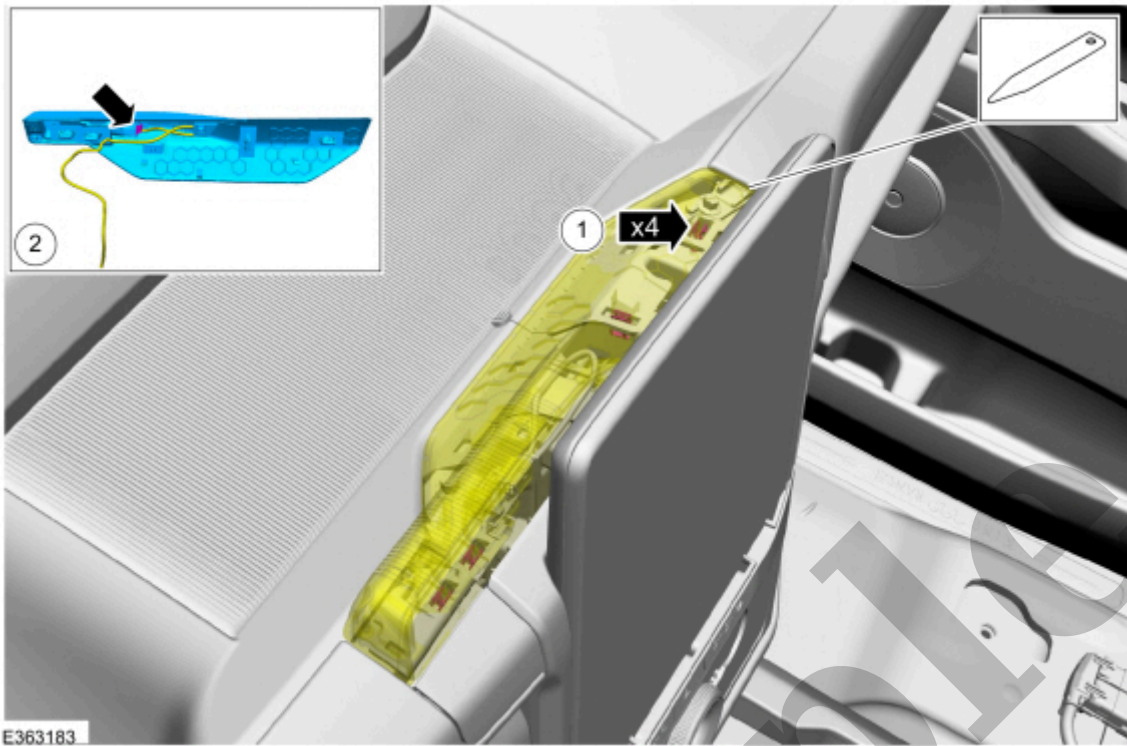


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Remove the bolts.

Torque : 106 lb.in (12 Nm)



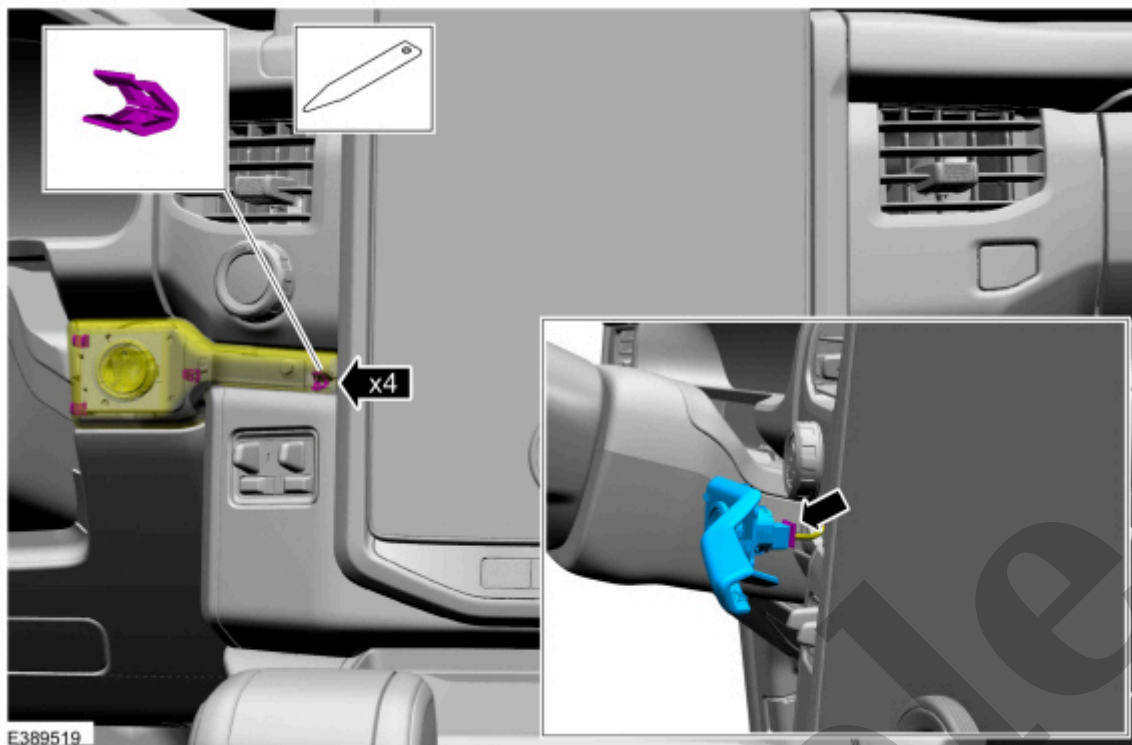


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Remove the screws.

Torque : 22 lb.in (2.5 Nm)




[Click here to learn about symbols, color coding, and icons used in this manual.](#)

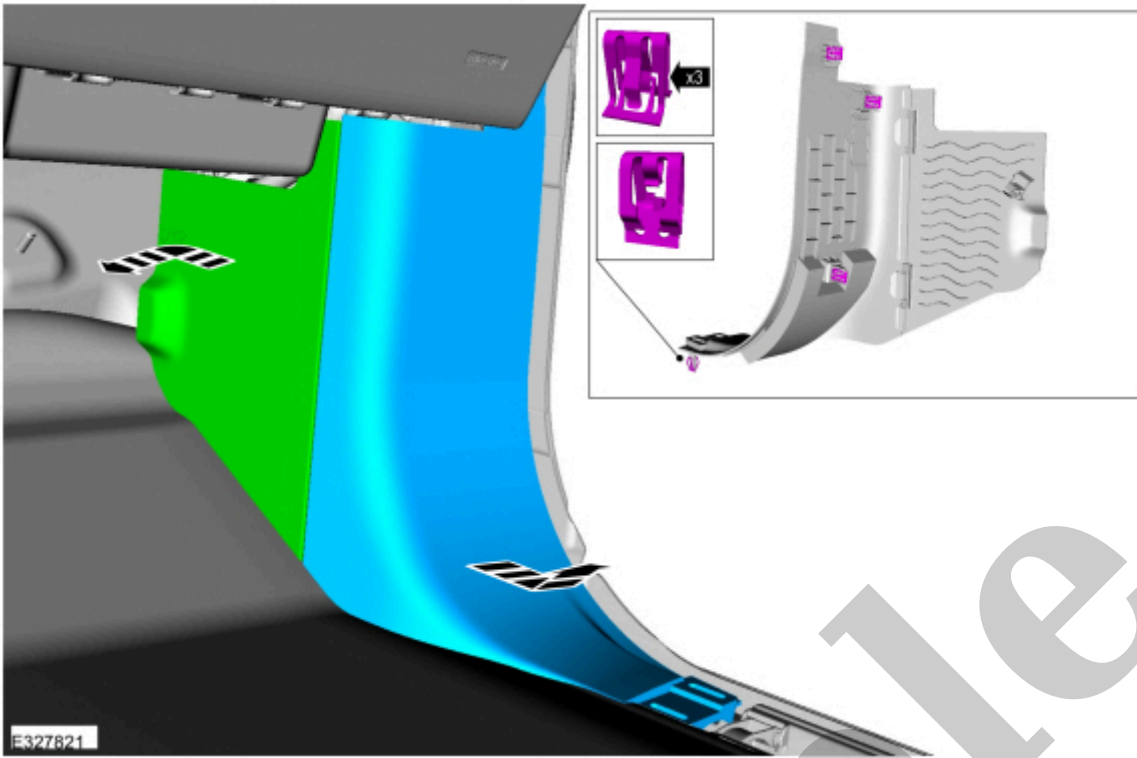


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

12. Release the clips and remove the LH (left-hand) lower cowl trim panel.

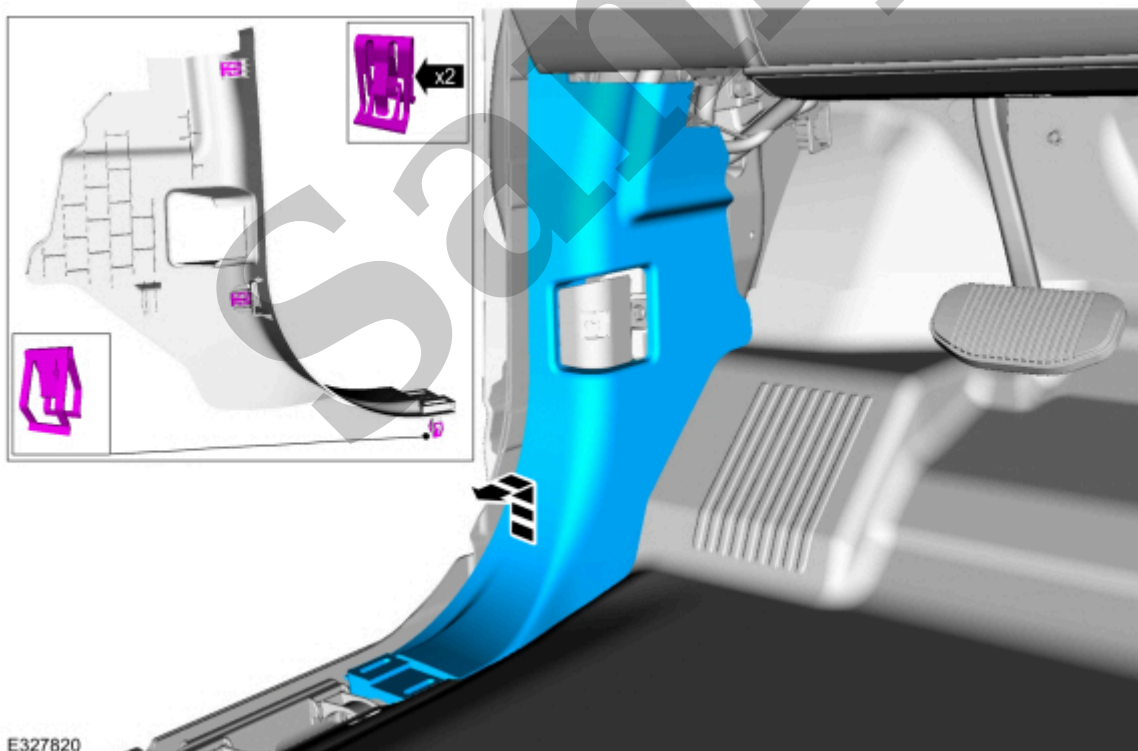

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

13. Remove the LH (left-hand) B-pillar trim panel.

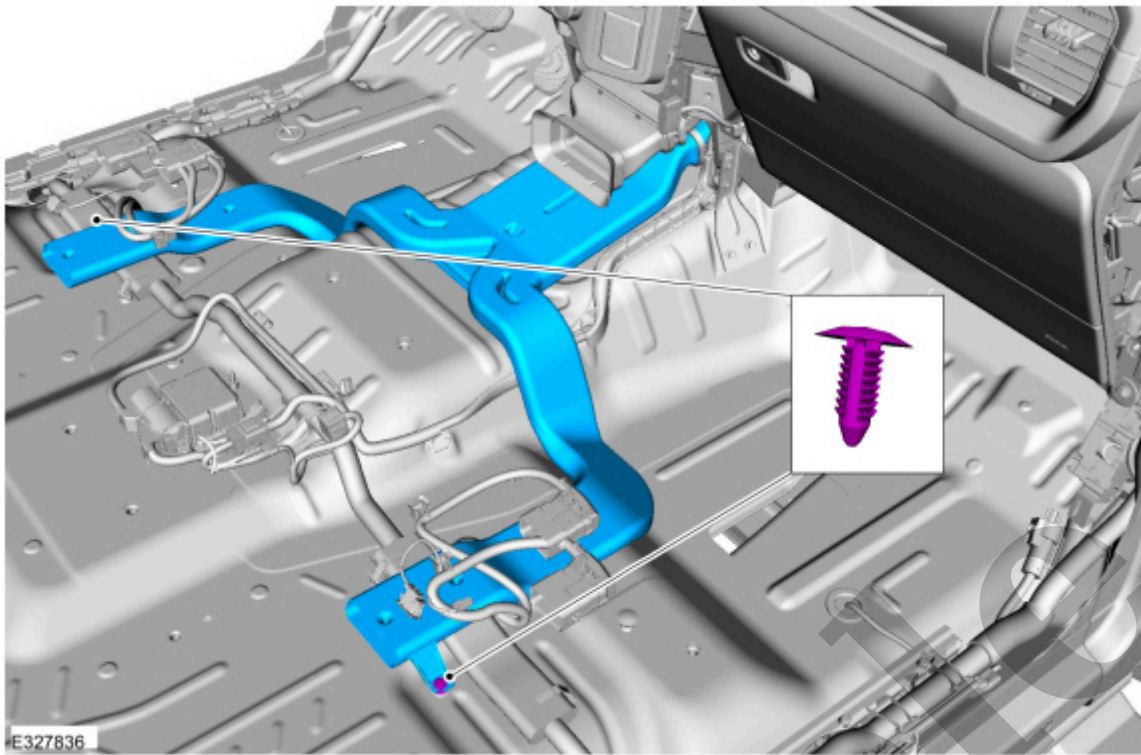

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

16. **NOTE**

SuperCab equipped vehicles

NOTE

The striker should be in its lowest position for the latch to engage.


Lower the LH (left-hand) seat backrest.

1. Pull the backrest release strap and release the latch from the striker.
2. Lower the backrest.

18. **NOTE**

Eight speaker system DSP (audio digital signal processing module) is shown, 18 speaker system DSP (audio digital signal processing module) is similar.

Disconnect the rear body harness AAB (automotive audio bus) rear connector.

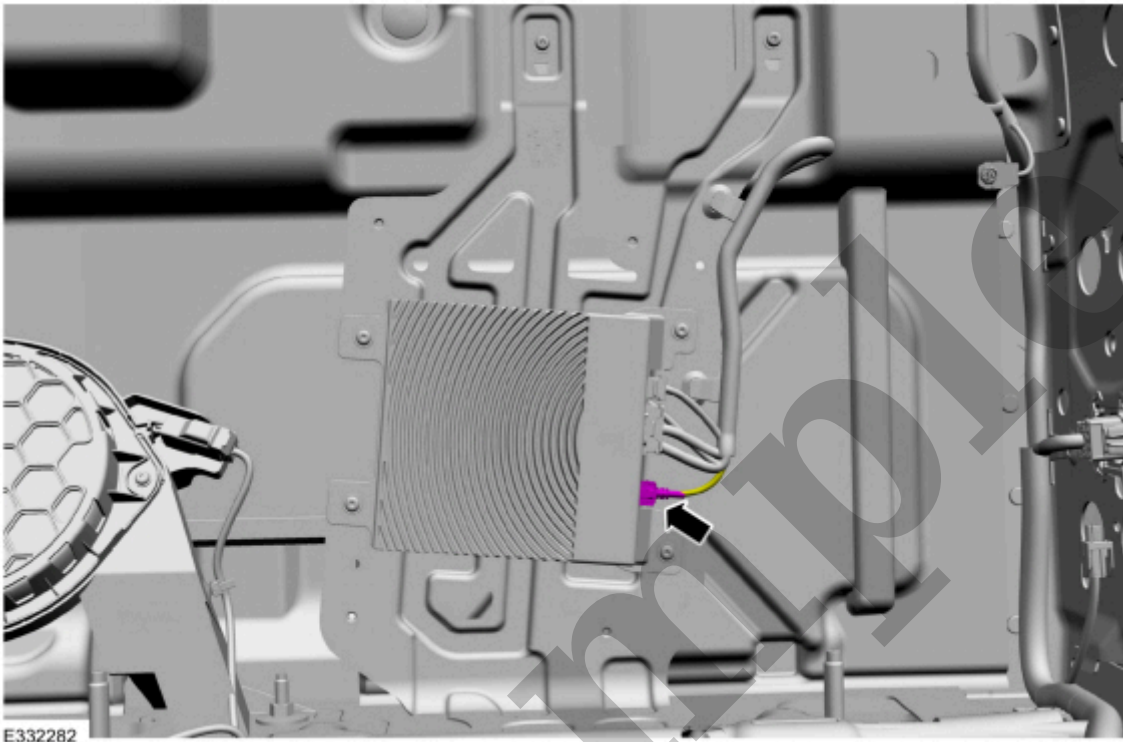

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Body harness automotive audio bus cable - Supercrew vehicles

19. Remove the front seats.

Refer to: [Front Seat](#)(501-10A Front Seats, Removal and Installation).

Refer to: [Front Center Seat](#)(501-10A Front Seats, Removal and Installation).

20. Vehicles equipped with a floor console.

Remove the floor console.

Refer to: [Floor Console](#)(501-12 Instrument Panel and Console, Removal and Installation).

21. Remove the front scuff plate trim panels.

Refer to: [Front Scuff Plate Trim Panel - SuperCab](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).