

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2005 Chevrolet Malibu Service and Repair Manual

Go to manual page

2239 Run/Crank Ignition 1 Voltage

CAV_K2 K2

CONN_X5 X5

2339 Run/Crank Ignition 1 Voltage

2339_VT/GY 2339 VT/GY

CAV_G5 G5

9022_WH 9022 WH

CAV_3 3

CAV_5 5

850 Ground

2239_VT/L-GN 2239 VT/L-GN

2239_VT/L-GN 2239 VT/L-GN

9023_WH 9023 WH

CAV_3 3

CAV_5 5

CAV_1 1

CAV_1 1

850_BK 850 BK

CAV_1 1

CAV_1 1

850_BK 850 BK

850_BK 850 BK

CAV_4 4

CAV_4 4

2339_VT/GY 2339 VT/GY

CAV_4 4

CAV_4 4

2239_VT/L-GN 2239 VT/L-GN

2339_VT/GY 2339 VT/GY



Master Electrical Component List

Exhaust System Description

Exhaust Tail Pipe Flow Control System Description and Operation

Control Module References

CAV_35 35

CAV_5 5

4316 Exhaust Flow Control Valve 2

CAV_13 13

CAV_20 20

NPP

Schematics RPO Code List

CAV_23 23

CONN_X1 X1

CAV_31 31

CONN_X4 X4

CAV_38 38

CONN_X1 X1

1850 Ground

1850_BK 1850 BK

CAV_13 13

X311 X311

Manual Transmission Harness Routing

Fuel Tank Harness Routing

Automatic Transmission Harness Routing

X311 Transmission Harness to Fuel Tank Harness

CAV_37 37

CAV_36 36

X350 X350

Body Harness Routing - Rear Underbody Compartment



Automatic Transmission Harness Routing Manual Transmission Harness Routing **J341** J341 **Automatic Transmission Harness Routing** Manual Transmission Harness Routing **X311** X311 **Manual Transmission Harness Routing Fuel Tank Harness Routing Automatic Transmission Harness Routing** X311 Transmission Harness to Fuel Tank Harness **X350** X350 Body Harness Routing - Rear Underbody Compartment **Fuel Tank Harness Routing** X350 Fuel Tank Harness to Body Harness **K20** K20 Engine Control Module Right Front of the Vehicle Components K20 Engine Control Module X1 (LT1) K20 Engine Control Module X1 (LT4) K20 Engine Control Module X2 (LT1) K20 Engine Control Module X2 (LT4) K20 Engine Control Module X3 (LT1) K20 Engine Control Module X3 (LT4) X53A X53A Fuse Block - Rear Body Middle of Luggage Compartment Components X53A Fuse Block - Rear Body X1 X53A Fuse Block - Rear Body X2 X53A Fuse Block - Rear Body X3 X53A Fuse Block - Rear Body X4 **KR73** KR73 Ignition Main Relay

K38 K38 Chassis Control Module

Middle of Luggage Compartment Components

Fastener Specifications

Fastener Specifications

Single Use Non-Threaded Fasteners/Components

NOTE

Note

All fasteners/components listed in this table MUST BE DISCARDED and replaced with NEW after removal.

Application

Catalytic Converter Gasket

Exhaust Manifold Gasket

Exhaust Pipe Seal

Single Use Threaded Fastener/Component Tightening Specifications

NOTE	
Note All fasteners/components listed in this table MUST BE DISCARDED and replaced with NEW after removal.	
Application	Specification
	Metric (English)