

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2005 FORD Econovan OEM Service and Repair Workshop Manual

[Go to manual page](#)



Front Door Alignment - Regular Cab/SuperCrew

501-03 Body Closures	2022 F-150
General Procedures	Procedure revision date: 10/2/2020

Front Door Alignment - Regular Cab/SuperCrew

Inspection

NOTE

Removal steps in this procedure may contain installation details.

NOTE

LH (left-hand) side shown, RH (right-hand) side similar.

NOTE

Regular Cab shown, SuperCrew similar.

1. Inspect the front door-to-body dimensions.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


2. Remove the bolts and the striker assembly.



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Front door in and out, up and down alignment

3. Open the door.

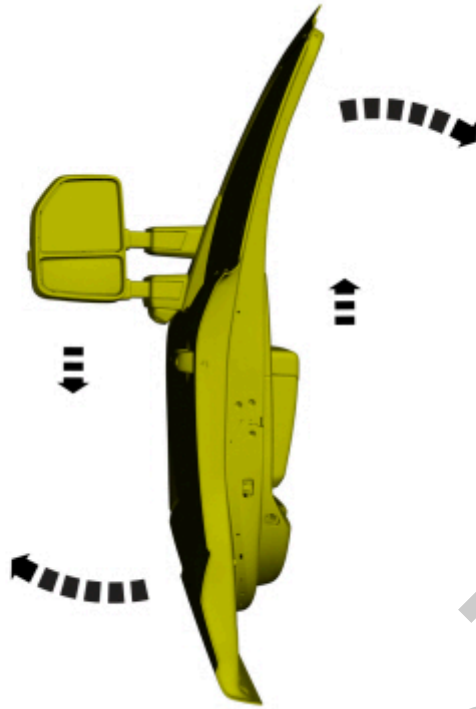


E338142

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Tighten the bolts.

Torque : 41 lb.ft (55 Nm)

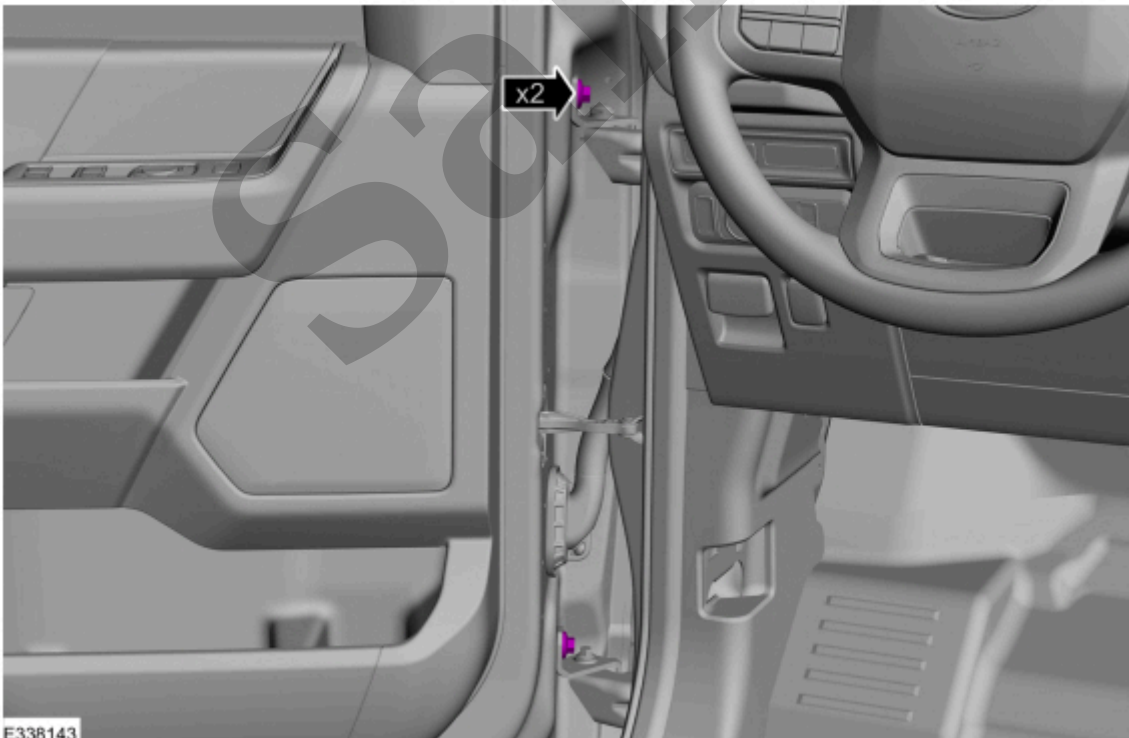


E338143

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


9. Carefully close the door.

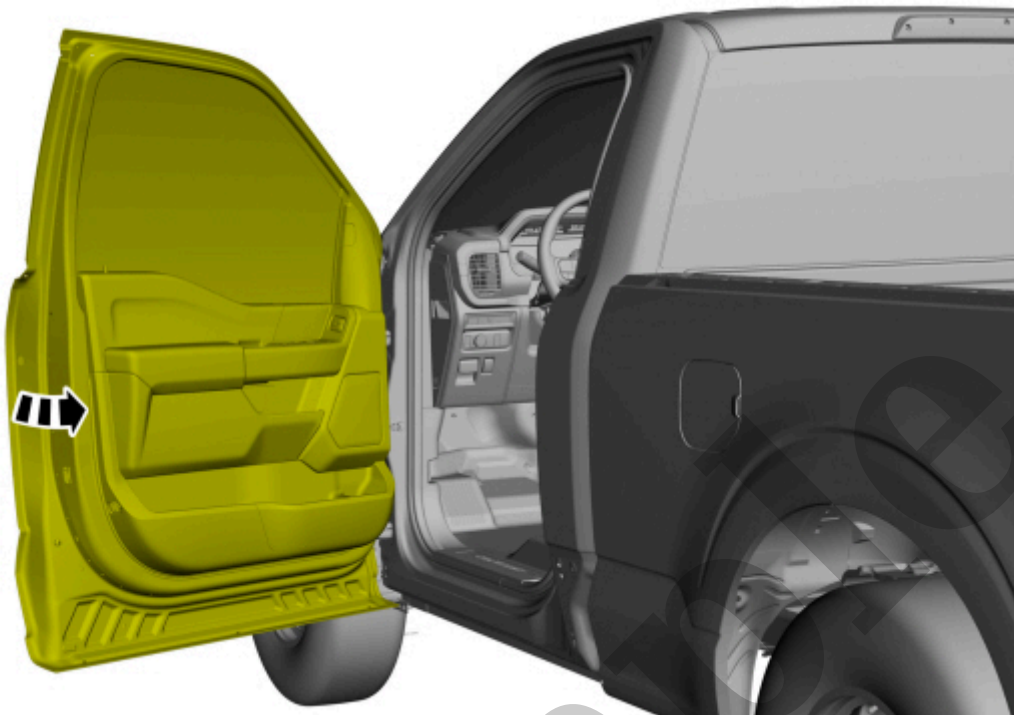


E338145

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

10. Adjust the door as required.

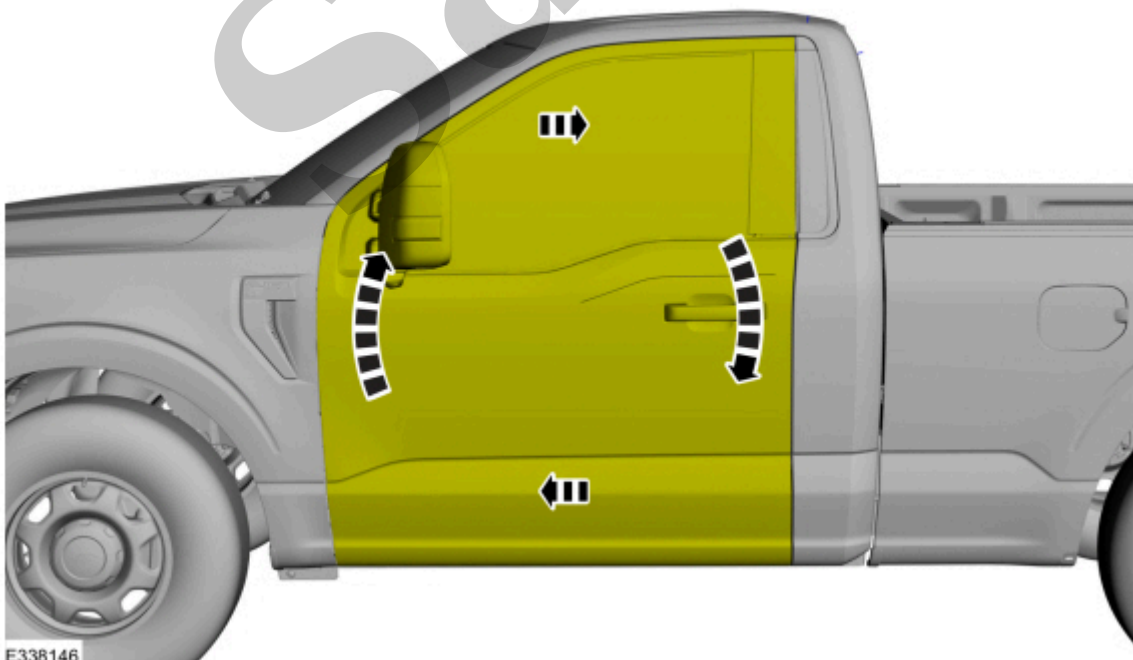

E338146

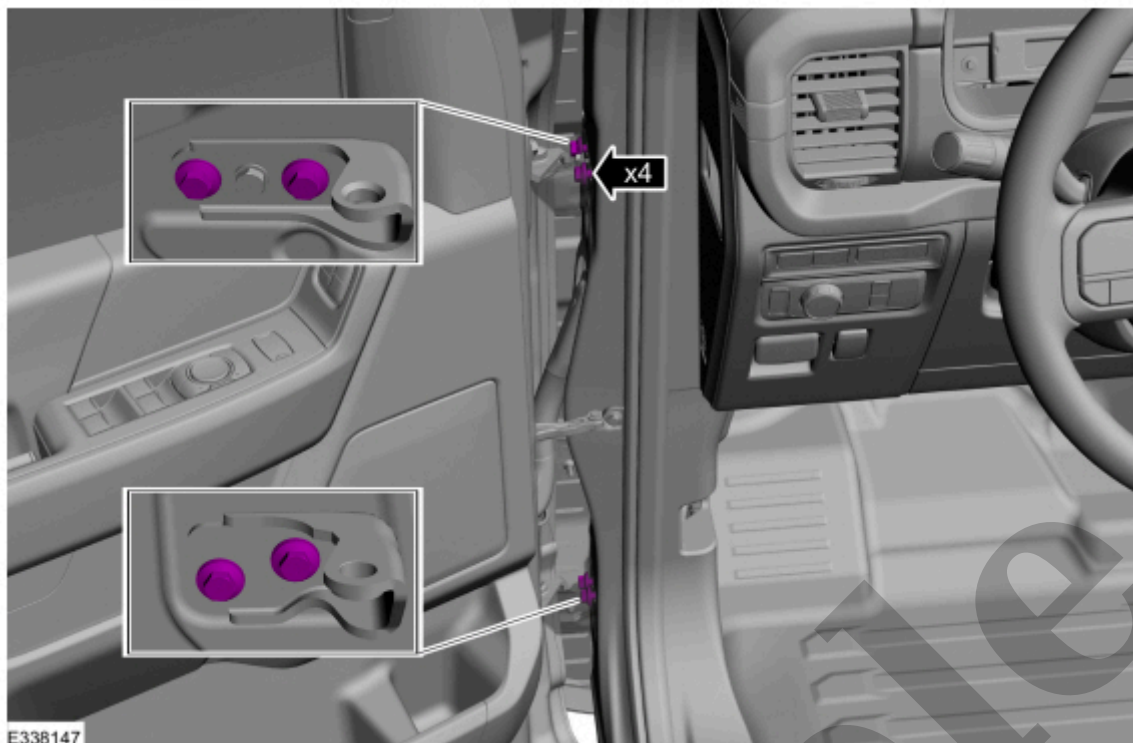

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

All alignments

13. Install the striker assembly.

Torque : 18 lb.ft (25 Nm)





Front Door Alignment - SuperCab

501-03 Body Closures	2022 F-150
General Procedures	Procedure revision date: 10/2/2020

Front Door Alignment - SuperCab

Inspection

NOTE

Removal steps in this procedure may contain installation details.


NOTE

LH (left-hand) side shown, RH (right-hand) side similar.

1. Check the rear door alignment.
Refer to: [Rear Door Alignment - SuperCab](#)(501-03 Body Closures, General Procedures).
2. Inspect the front door-to-body dimensions.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


2. Remove the bolts and the striker assembly.

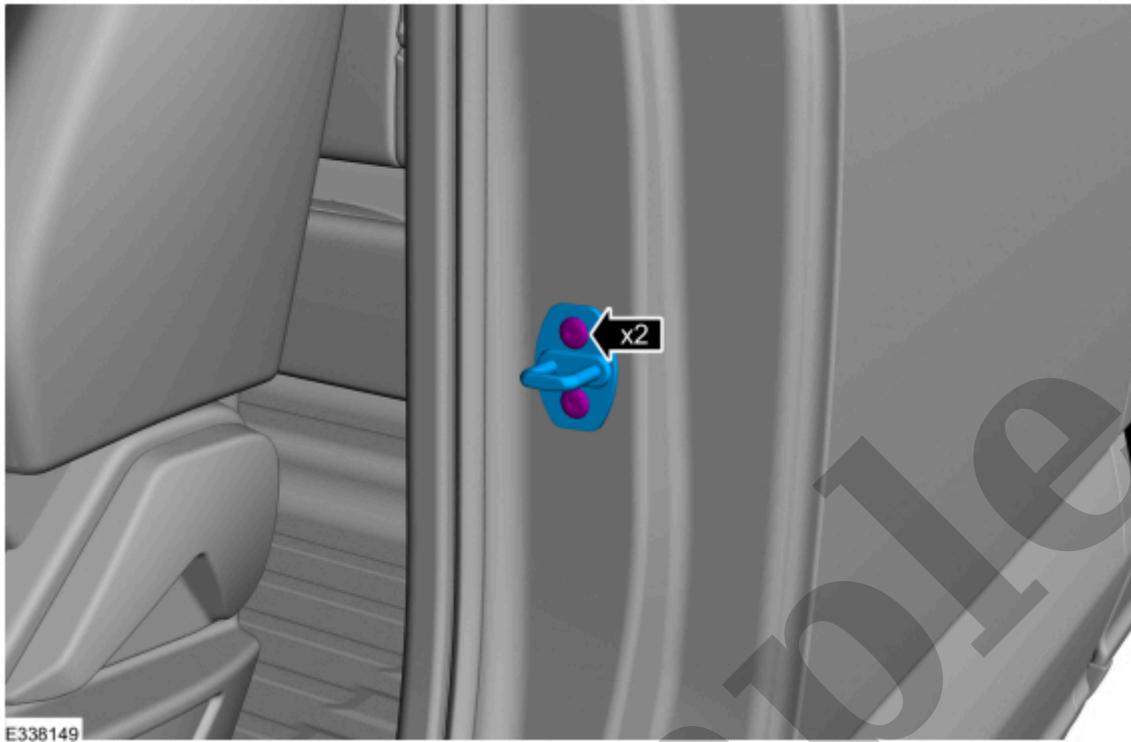

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Front door in and out, up and down alignment

3. Open the door.

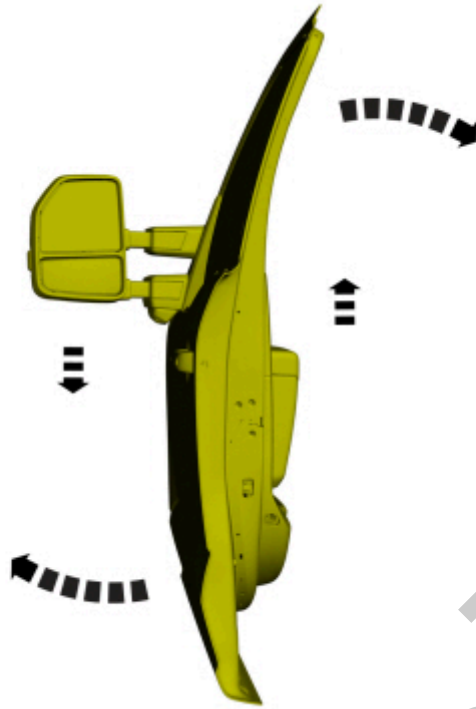


E338142

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Tighten the bolts.

Torque : 41 lb.ft (55 Nm)

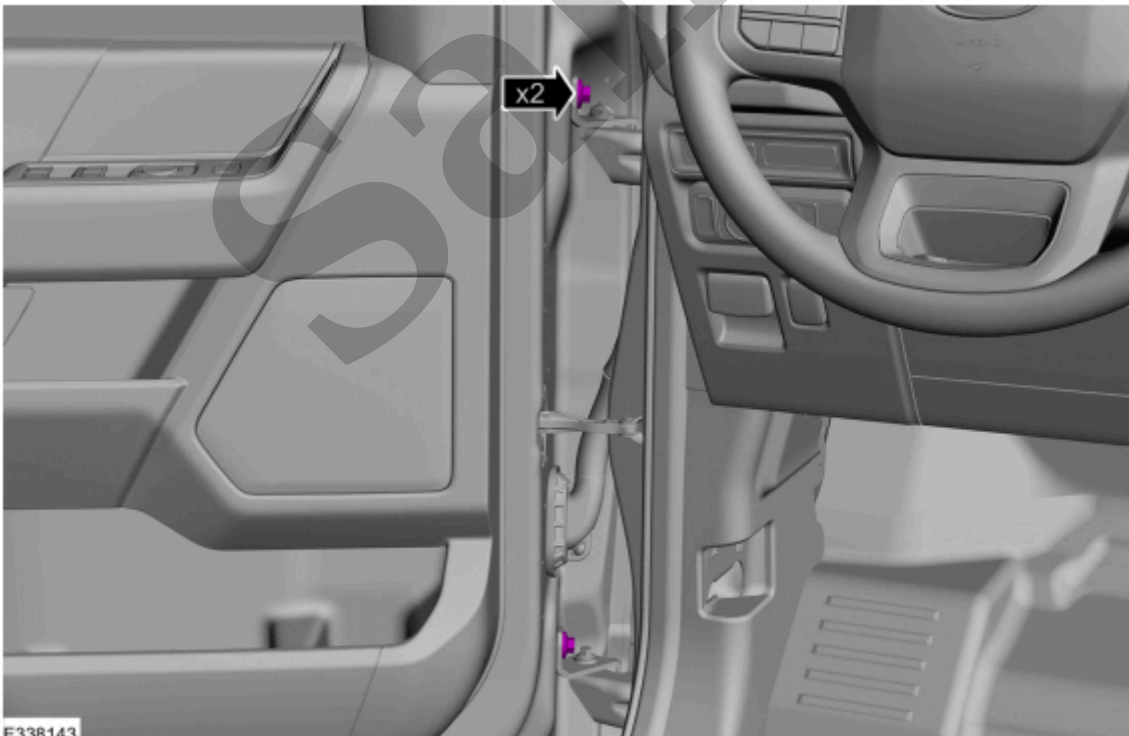

E338143

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


9. Carefully close the door.



E338150

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

10. Adjust the door as required.

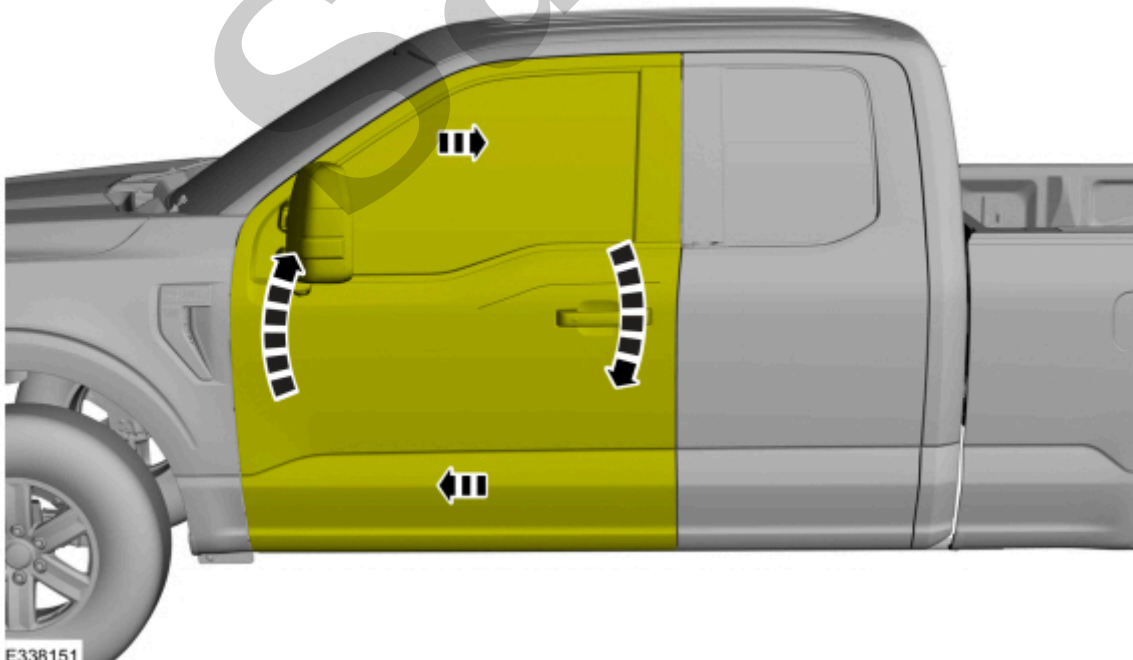

E338151