

Your Ultimate Source for OEM Repair Manuals


FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2005 FORD F-150 Regular Cab OEM Service and Repair Workshop Manual

[Go to manual page](#)


5. Release the clips and remove the windshield interior trim panel.


Use the General Equipment: Interior Trim Remover

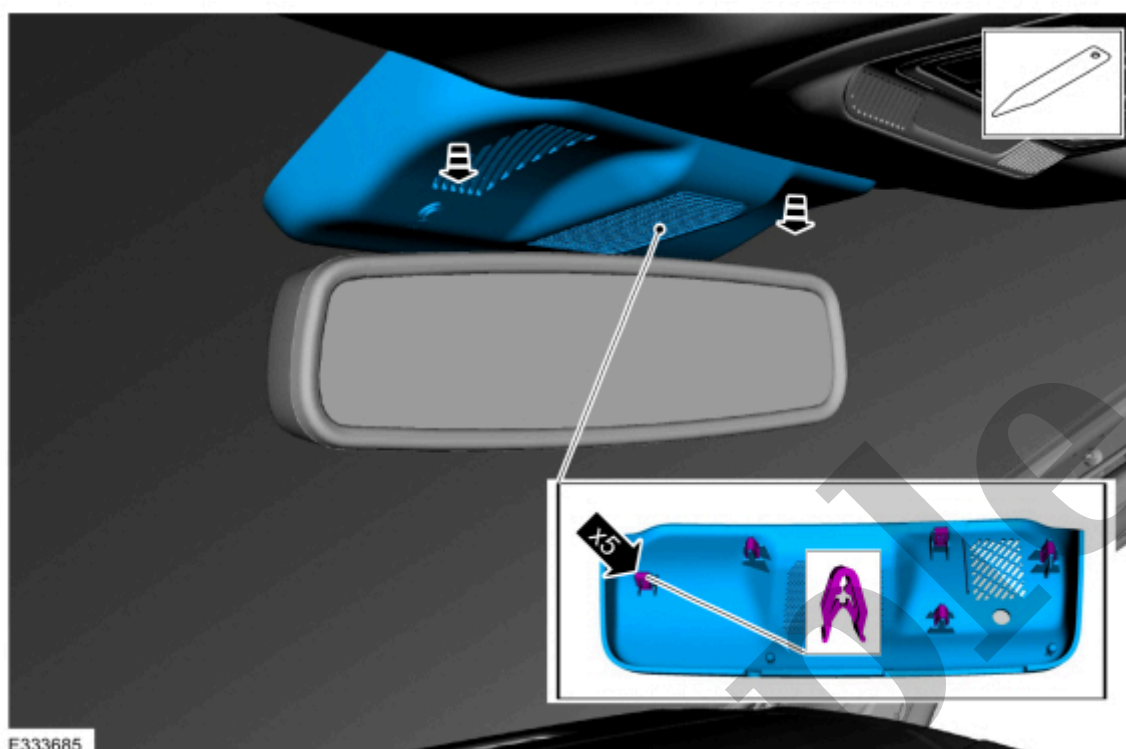

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Disconnect the headliner wiring harness electrical connectors.

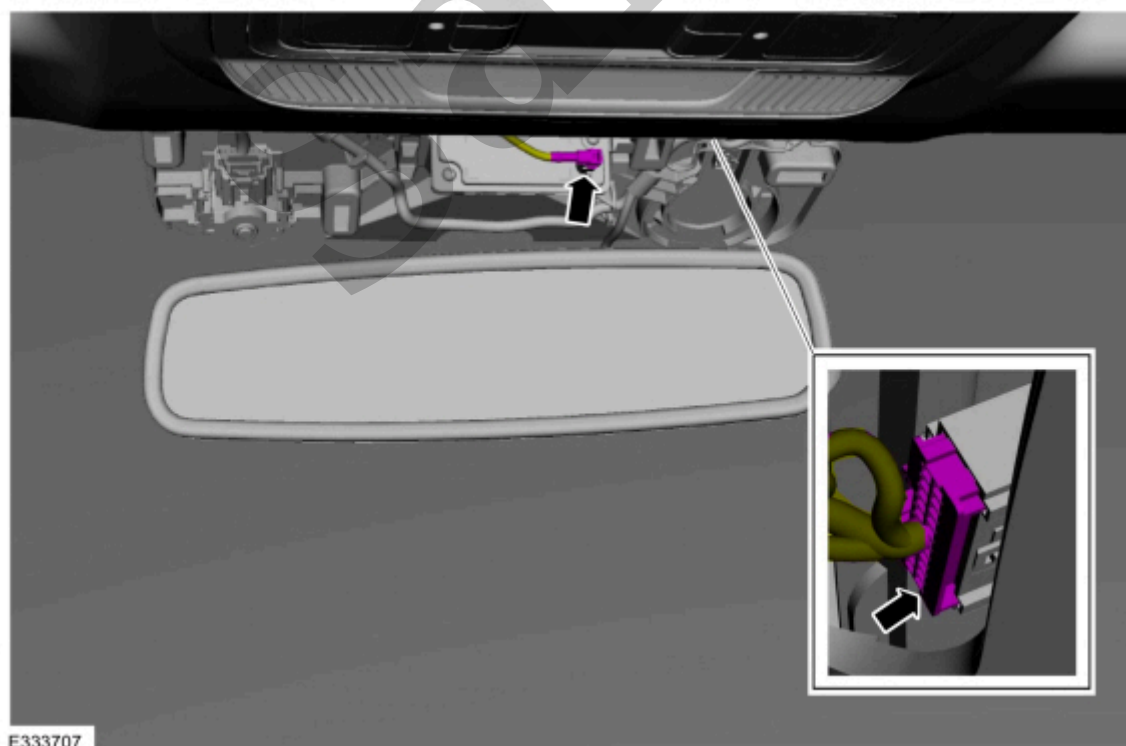


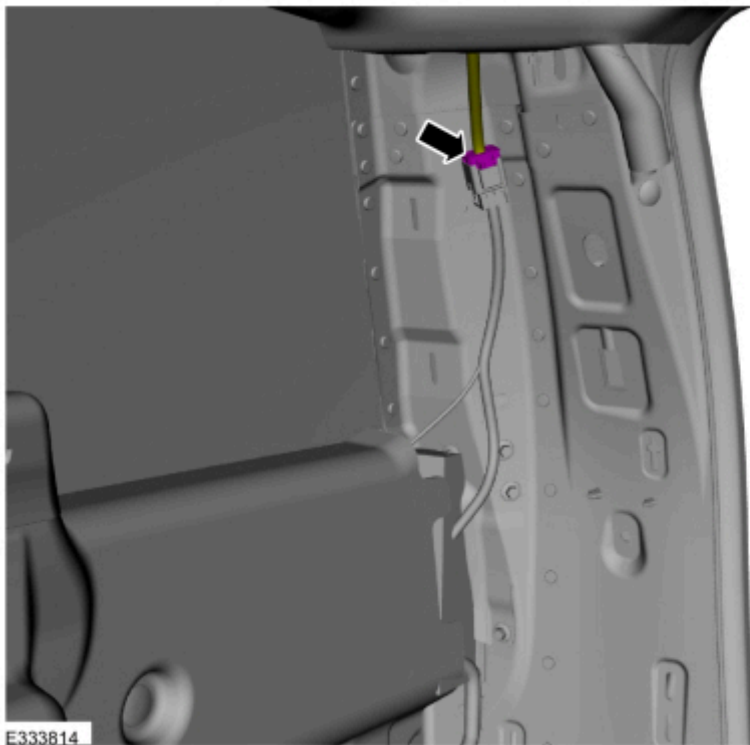

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

9. On RH (right-hand) side.

Disconnect the headliner wiring harness electrical connector.

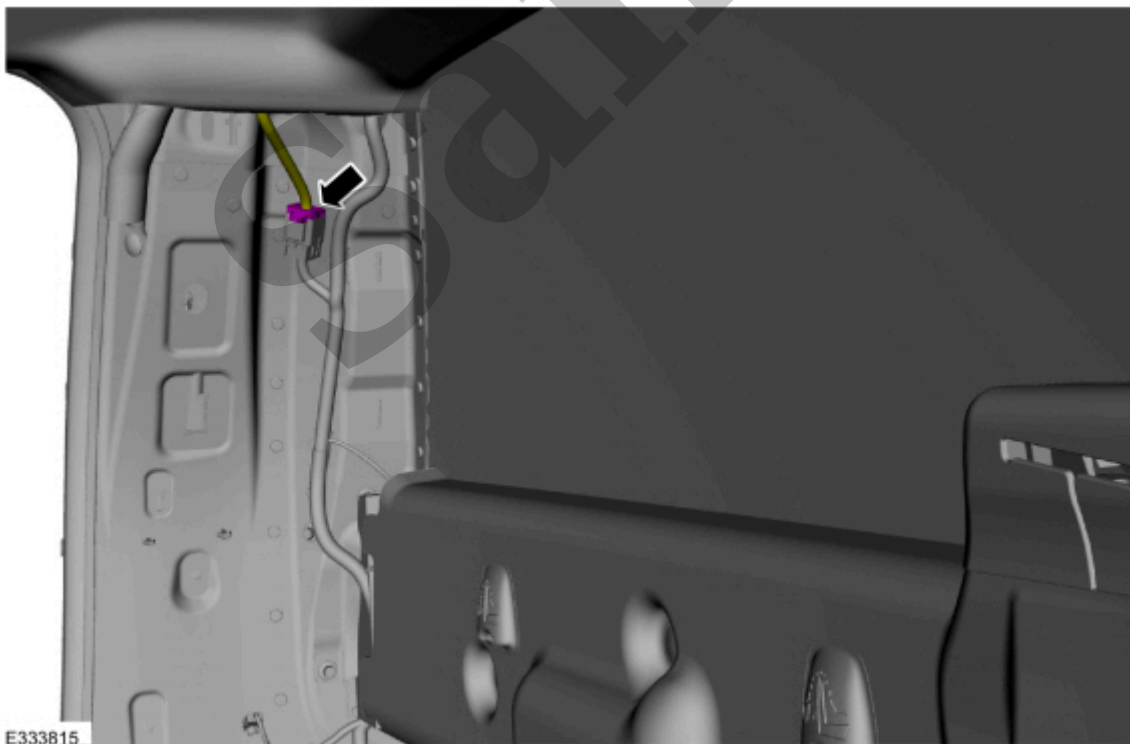

[Click here to learn about symbols, color coding, and icons used in this manual.](#)



Headliner - Lowering - SuperCab

<i>501-05 Interior Trim and Ornamentation</i>	<i>2022 F-150</i>
<i>Removal and Installation</i>	<i>Procedure revision date: 09/18/2020</i>


Headliner - Lowering - SuperCab

- 1. Remove the following items:
 - 1. On both sides.
Remove the A-pillar trim panel.
Refer to: [A-Pillar Trim Panel](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).
 - 2. On both sides.
Remove the B-pillar trim panel.
Refer to: [B-Pillar Trim Panel - SuperCab](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

2. **NOTE**

LH (left hand) side shown, RH (right hand) side similar.

On both sides.
Release the clips and remove the upper striker covers.

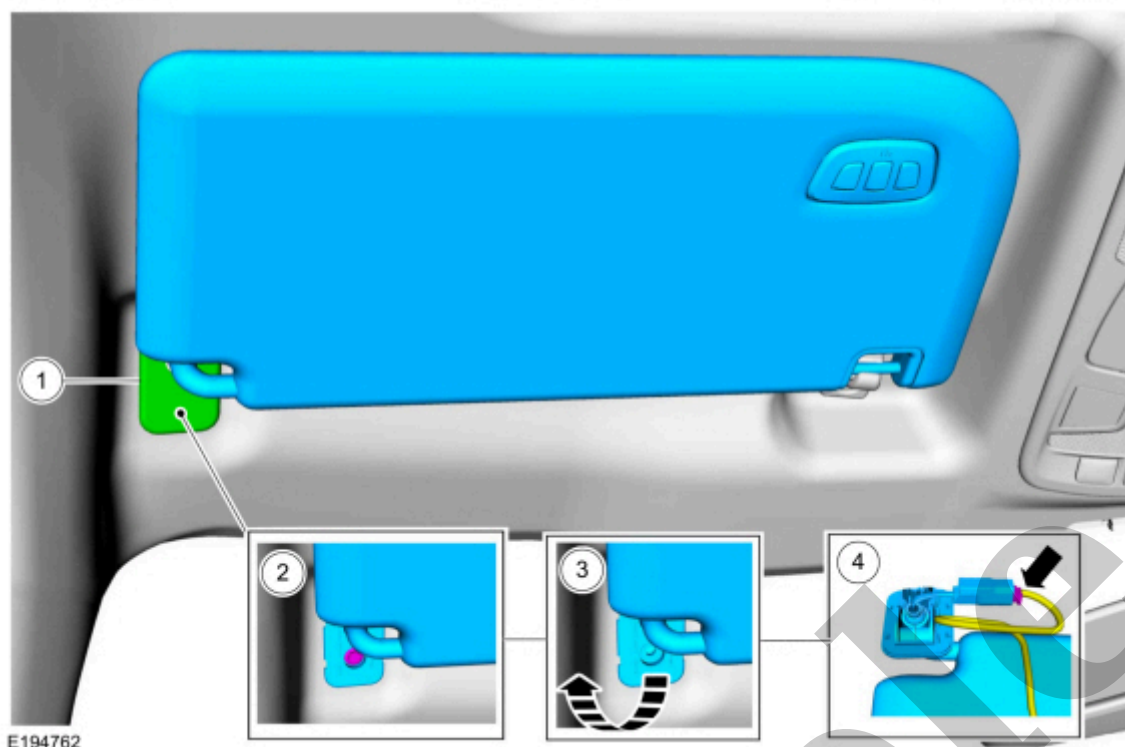


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

4. On both sides.

Remove the bolt and the sun visor clip.




[Click here to learn about symbols, color coding, and icons used in this manual.](#)

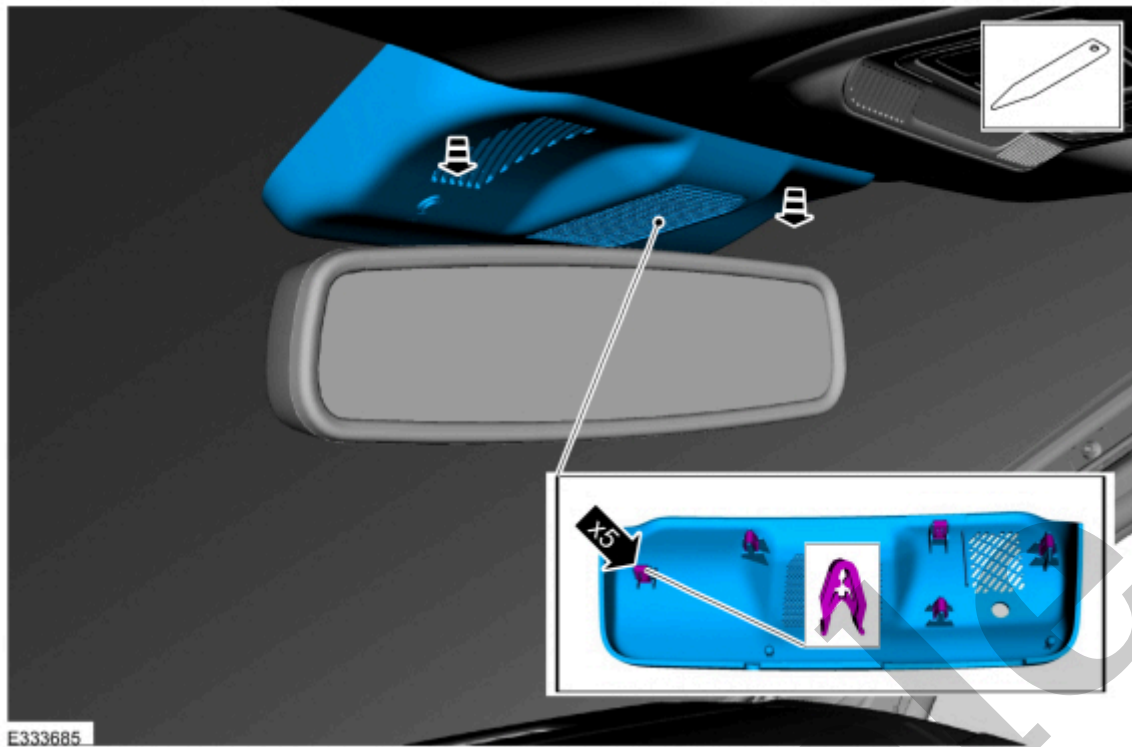


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

7. Disconnect the headliner wiring harness electrical connectors.

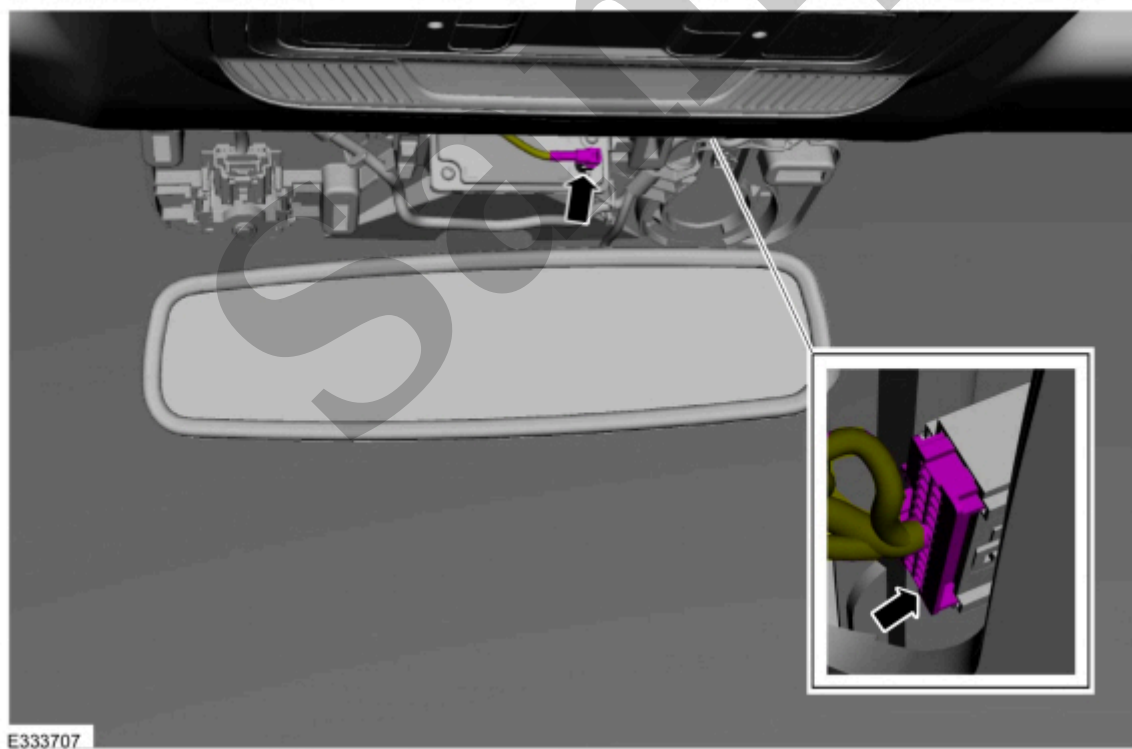

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


8. On both sides.

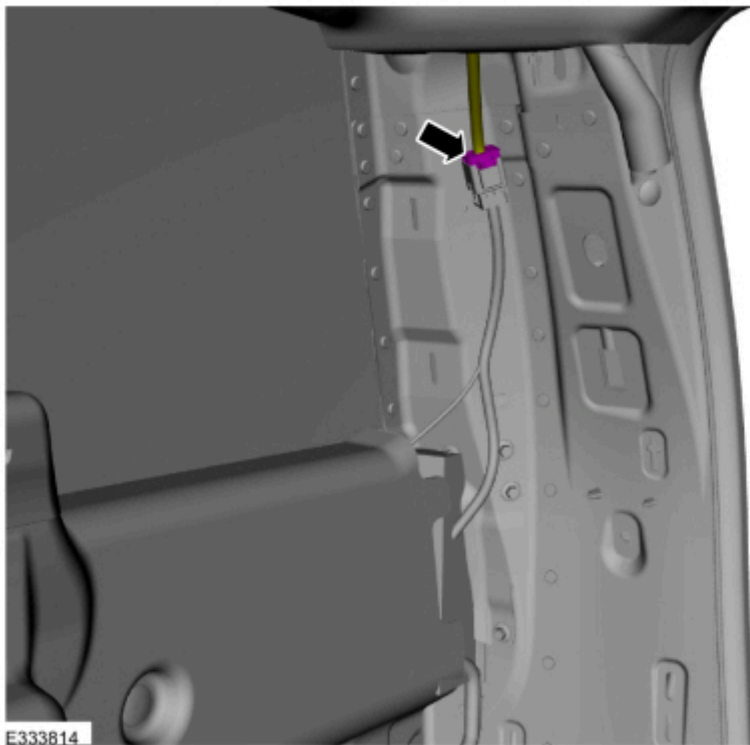




[Click here to learn about symbols, color coding, and icons used in this manual.](#)

10. On RH (right-hand) side.

Disconnect the headliner wiring harness electrical connector.

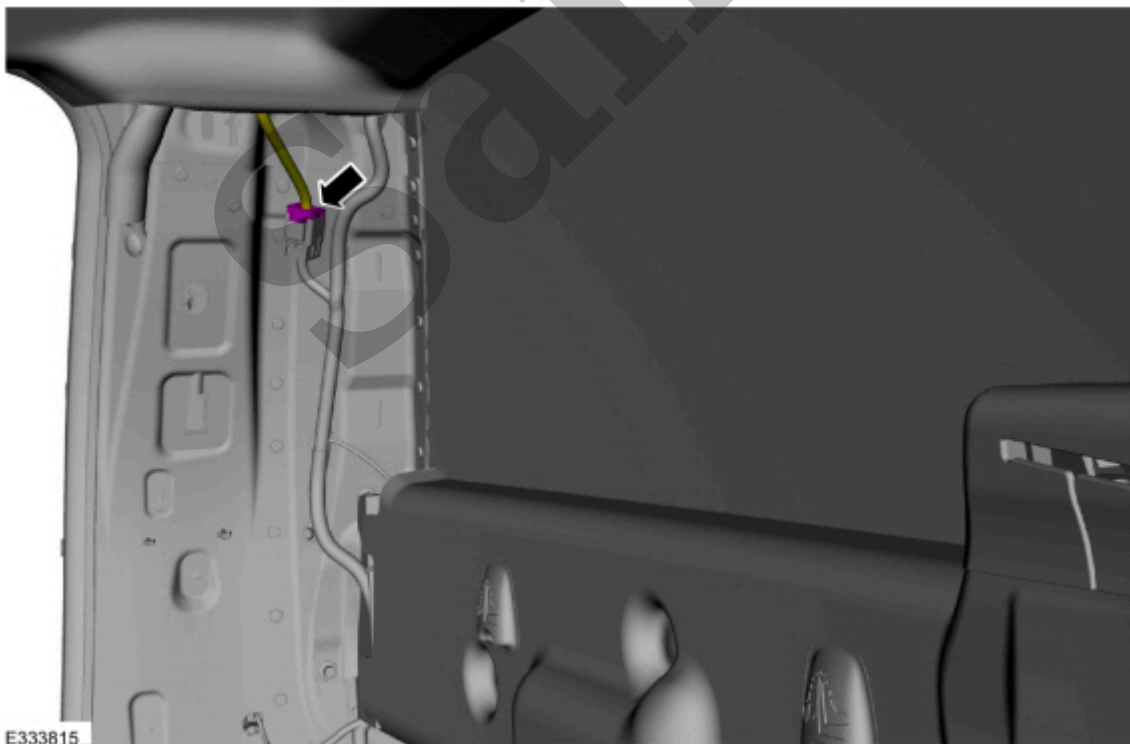

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

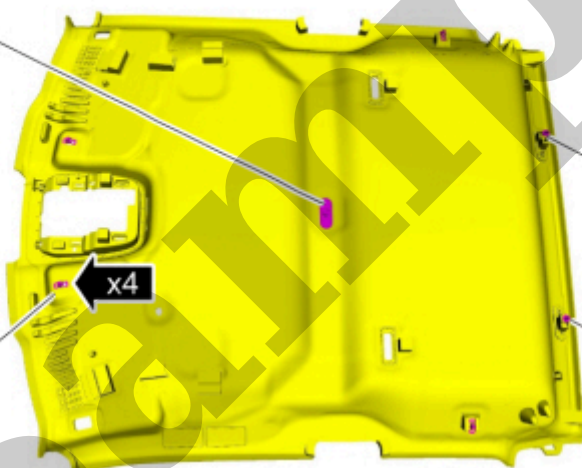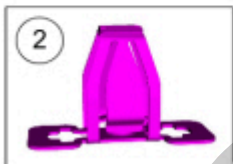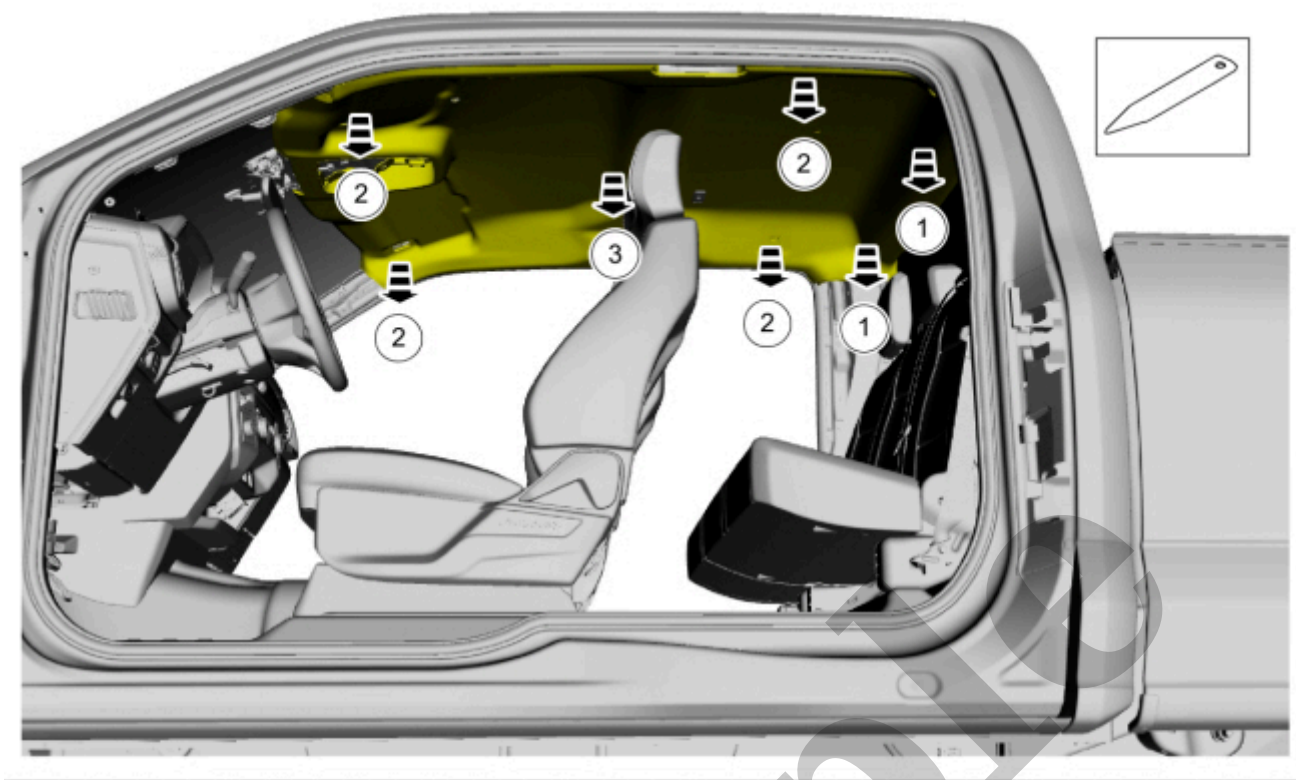


E333952

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Copyright © Ford Motor Company

1. Remove the bolt cover.
2. Remove the bolt.
3. Remove the sun visor.
4. If equipped.

Disconnect the sun visor electrical connector.

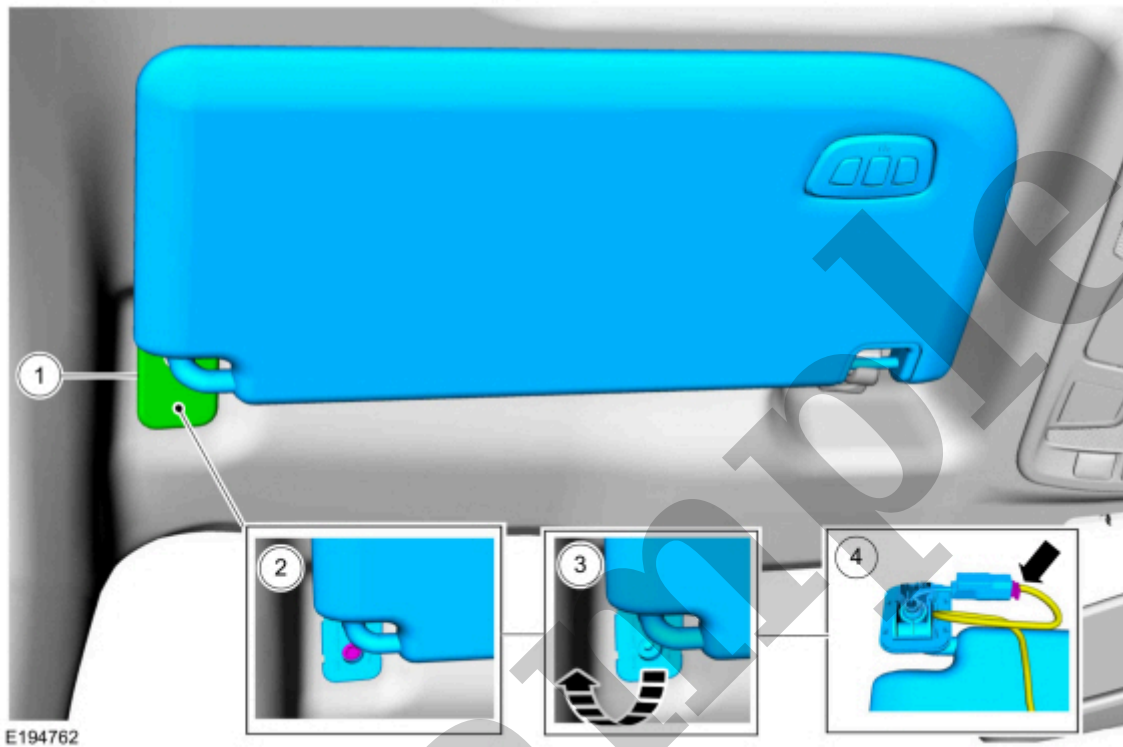


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. On both sides.

Remove the bolt and the sun visor clip.

5. Release the clips and remove the windshield interior trim panel.

Use the General Equipment: Interior Trim Remover

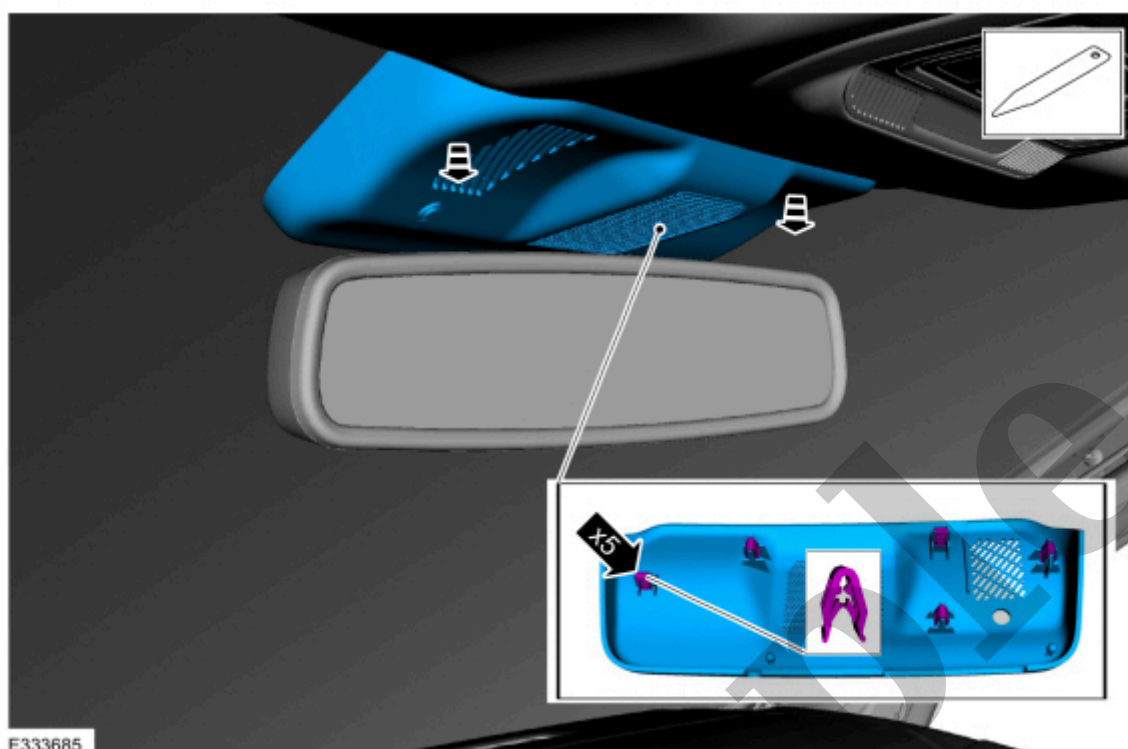

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Disconnect the headliner wiring harness electrical connectors.

