


# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


## 2005 FORD Mustang OEM Service and Repair Workshop Manual

[Go to manual page](#)

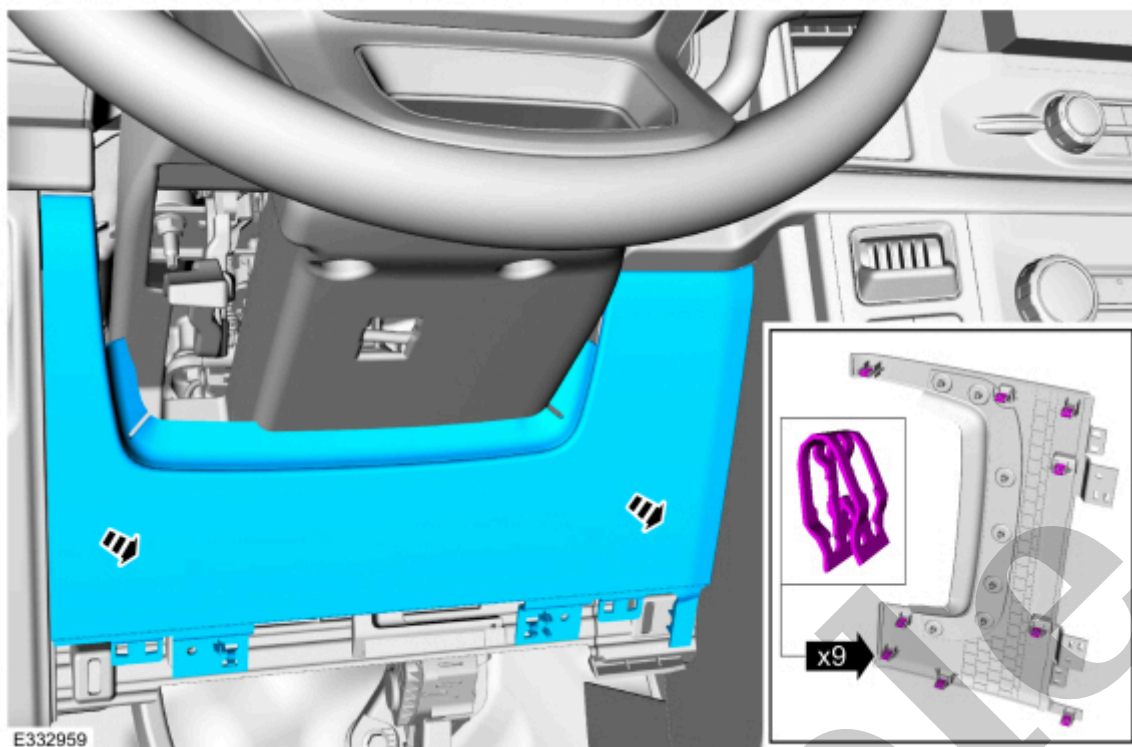

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

35. Fully extend and lower the steering column.

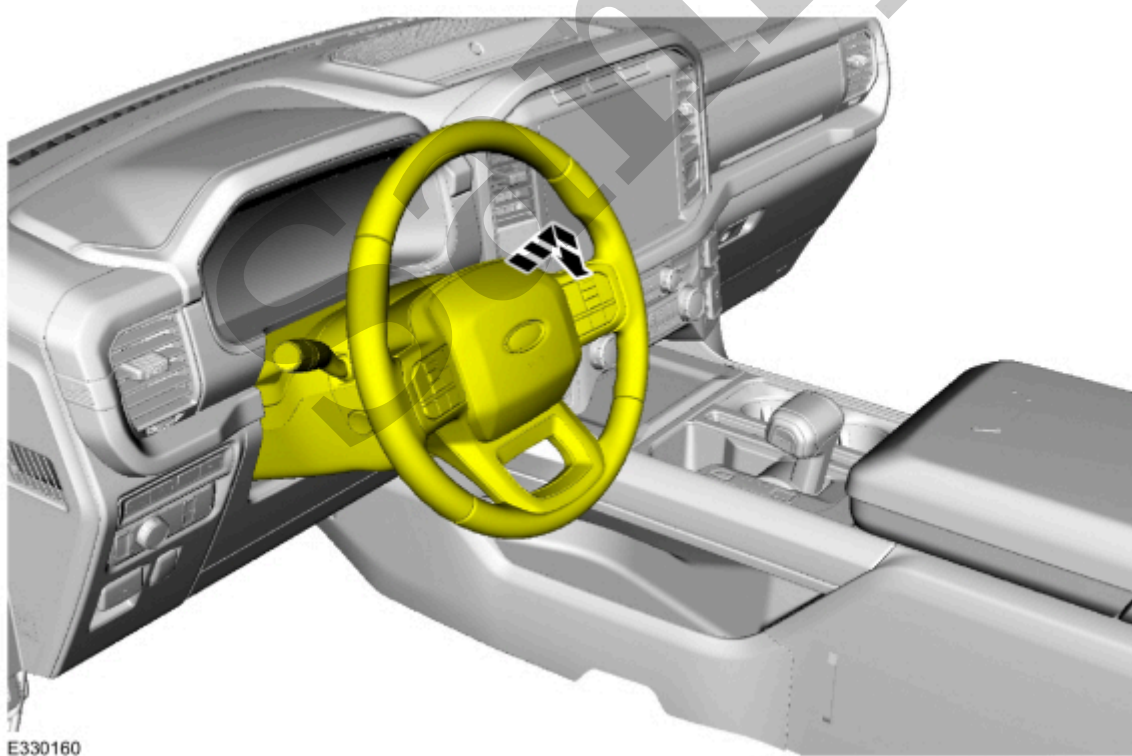


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

36. Release the tabs and disconnect the gap hider from the upper steering column shroud.

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

38. Release the clips and remove the instrument cluster panel bezel.

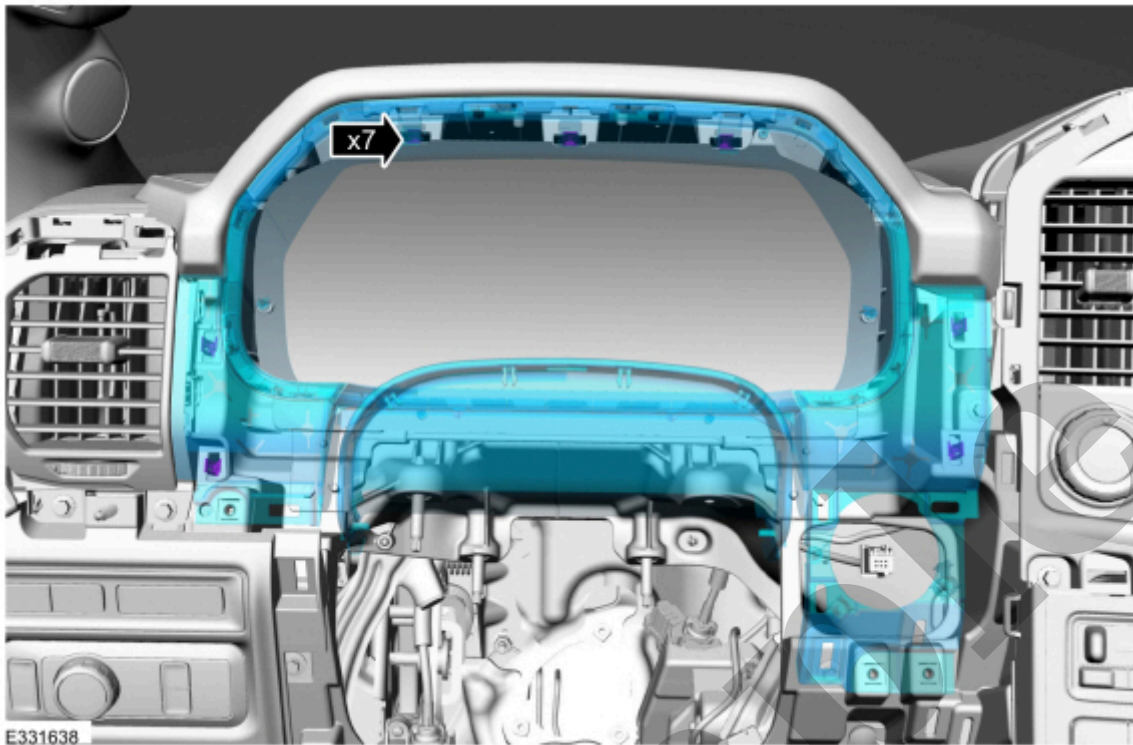

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

39. On vehicles equipped with a floor console.

Remove the floor console.

Refer to: [Floor Console](#)(501-12 Instrument Panel and Console, Removal and Installation).

40. On vehicles equipped with a floor console.

Remove the lower centerstack trim panel.

- Remove the bolts.


***Torque*** : 22 lb.in (2.5 Nm)

- Release the clips.
- Disconnect the electrical connectors.

42. On vehicles without a floor console.

Remove the bolt.


**Torque** : 22 lb.in (2.5 Nm)

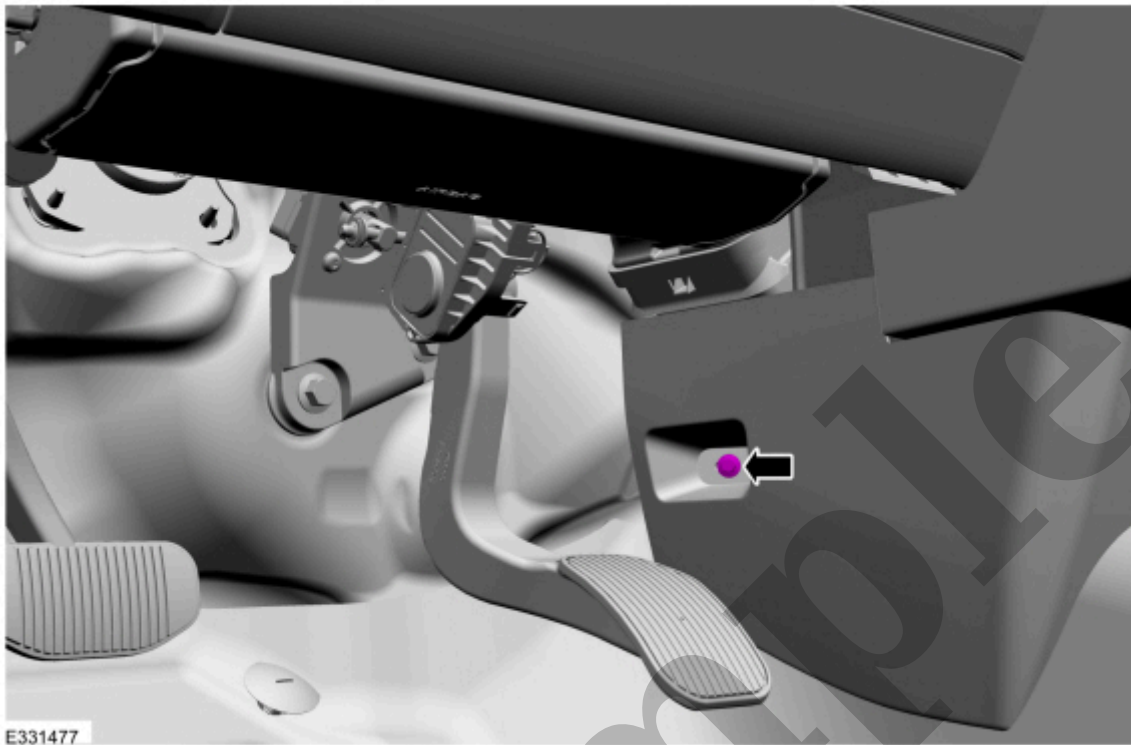


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

43. On vehicles without a floor console.

Release the clips and remove the instrument panel lower trim panel.

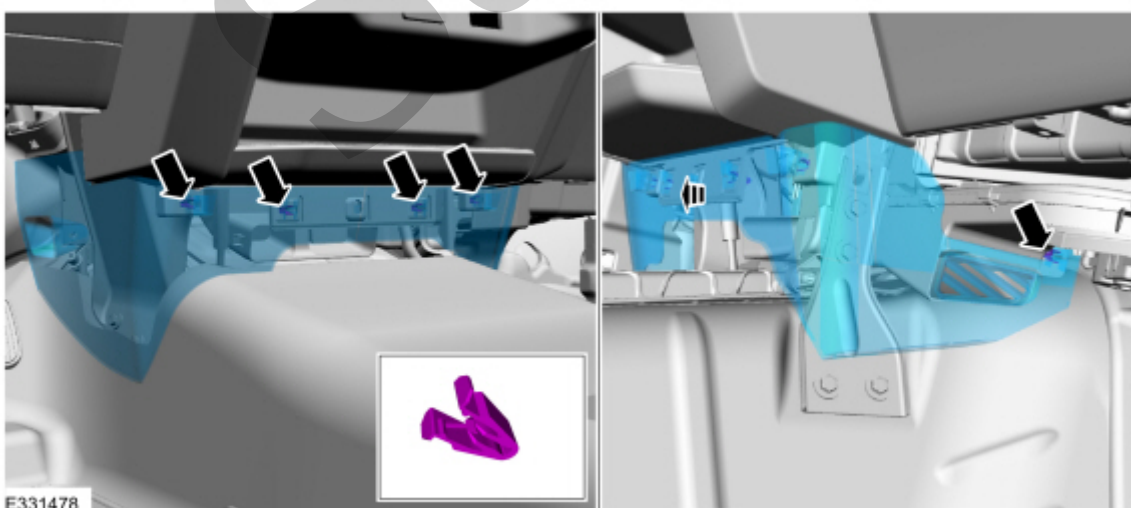

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

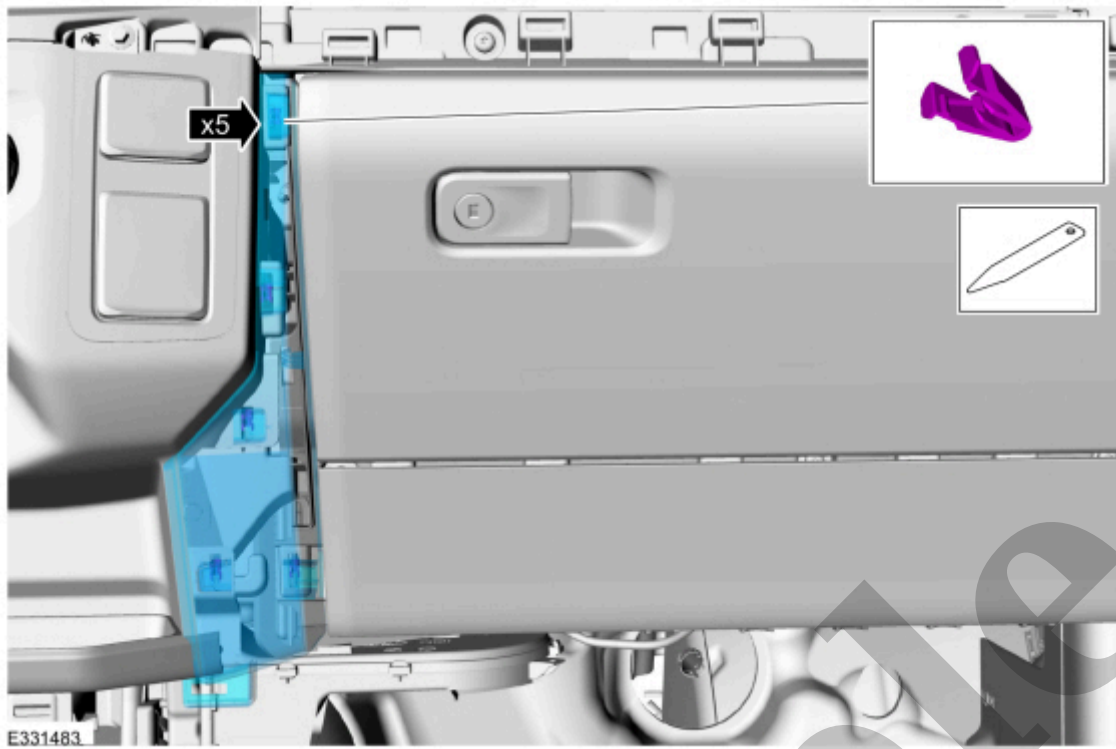

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

46. On vehicles without a floor console.

Remove the lower centerstack trim panel.

- Remove the bolts.

***Torque*** : 22 lb.in (2.5 Nm)

- Release the clips.
- Disconnect the electrical connectors.




48. **NOTE**

Vehicle with a 12 inch display is shown, vehicles with a 8 inch display are similar.

Remove the bolts, disconnect the electrical connectors and remove the FDIM (front display interface module) and centerstack trim panel as an assembly.


**Torque** : 55 lb.in (6.2 Nm)

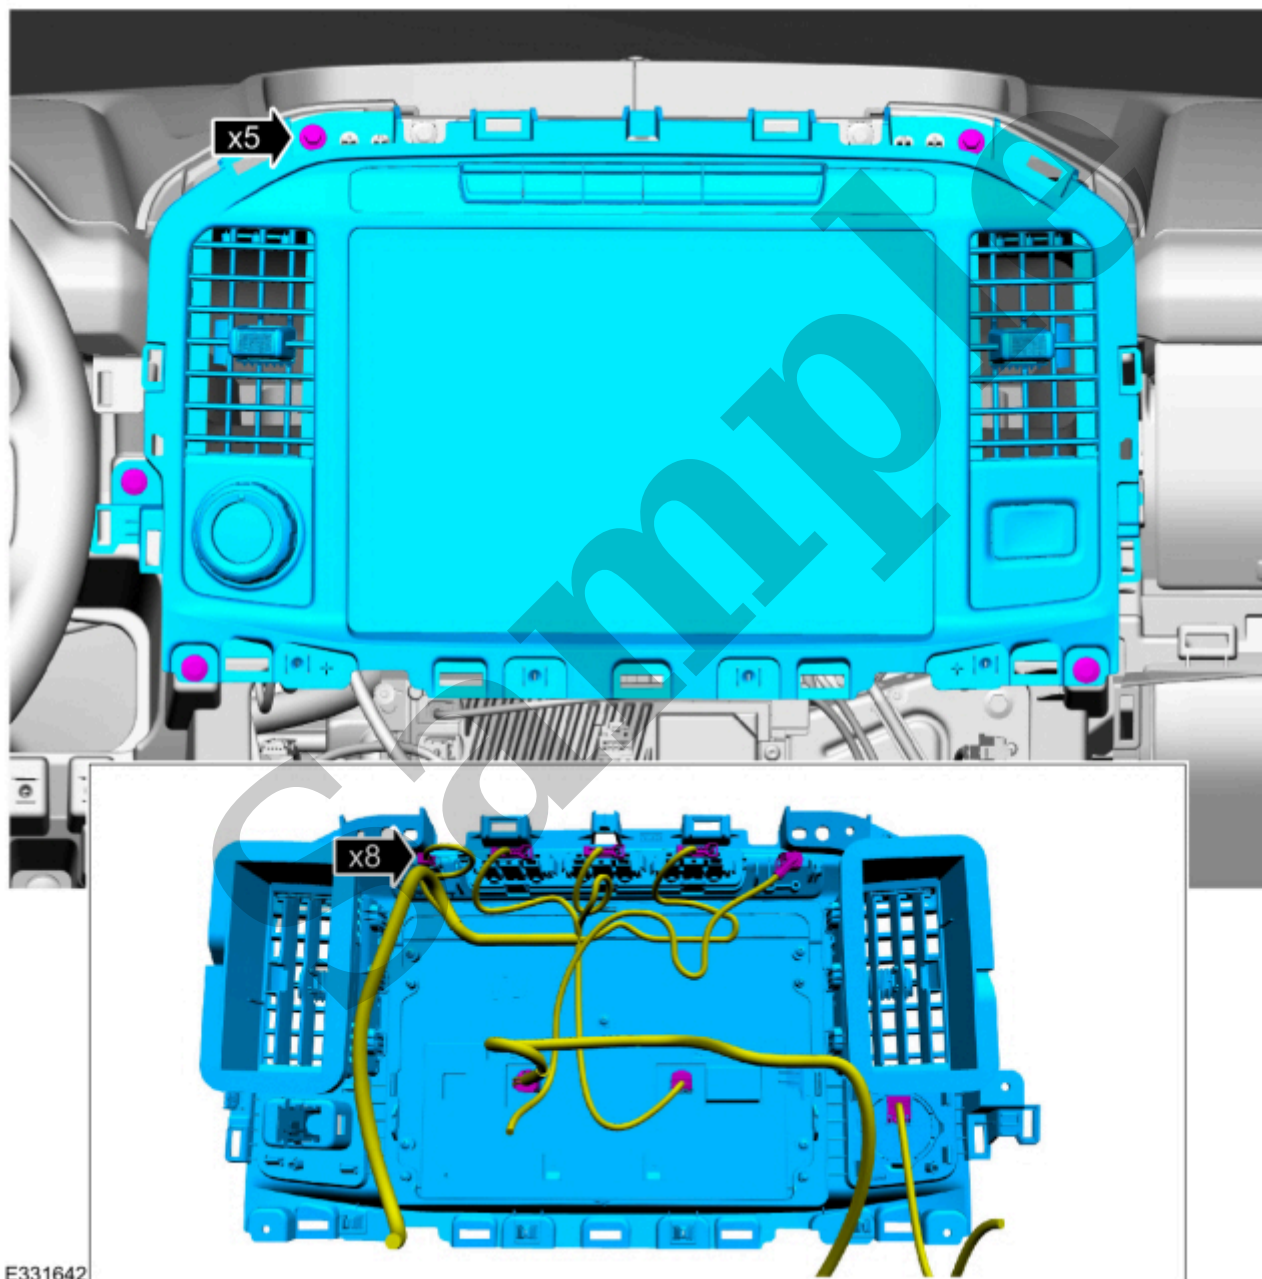

E331642


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

49. On vehicles equipped with a 8 inch display.

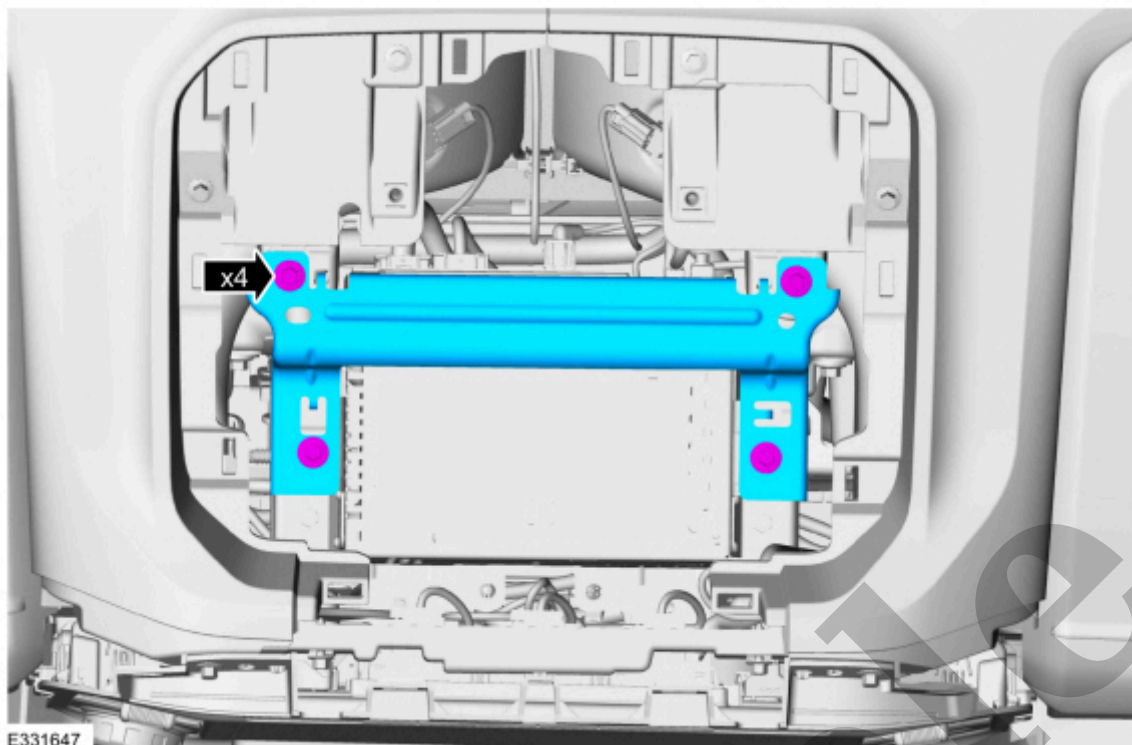

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

51. Remove the bolts, disconnect the electrical connectors and remove the ACM (audio front control module)

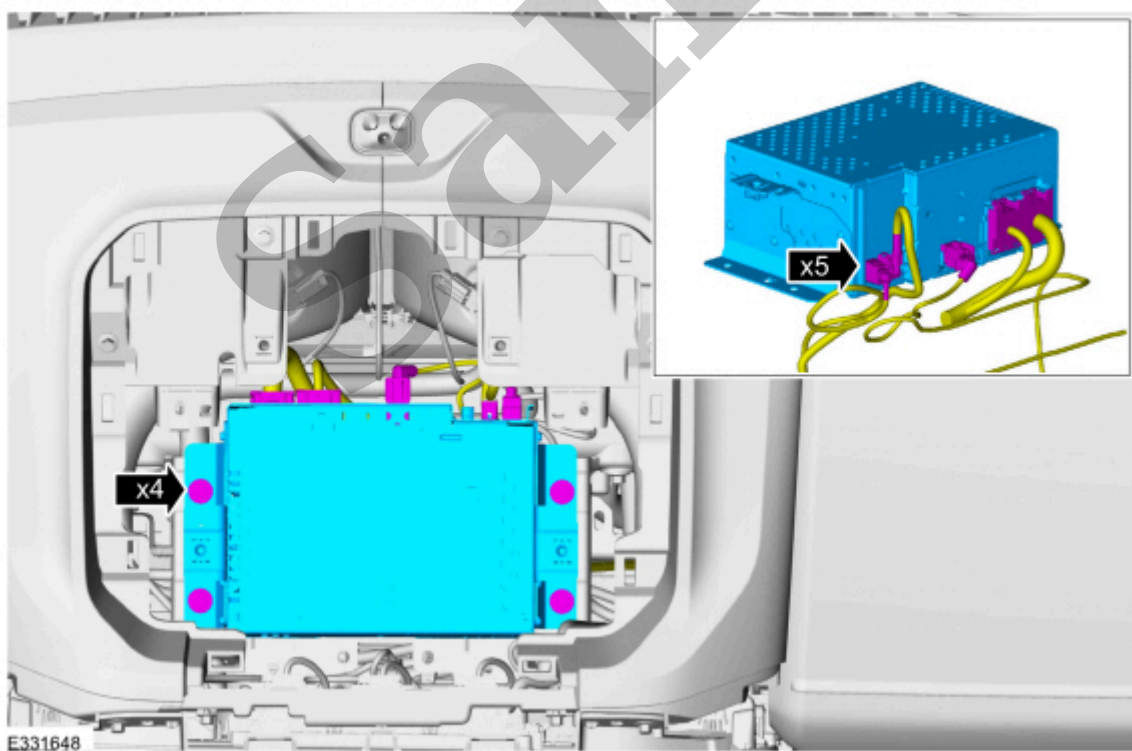

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

## FM2/diversity amplifier to audio unit antenna cable

54. On vehicles equipped with a floor console.

Remove the floor console.

Refer to: [Floor Console](#)(501-12 Instrument Panel and Console, Removal and Installation).


55. On vehicles equipped with a floor console.

Remove the lower centerstack trim panel.

- Remove the bolts.

**Torque** : 22 lb.in (2,5 Nm)

- Release the clips.
- Disconnect the electrical connectors.

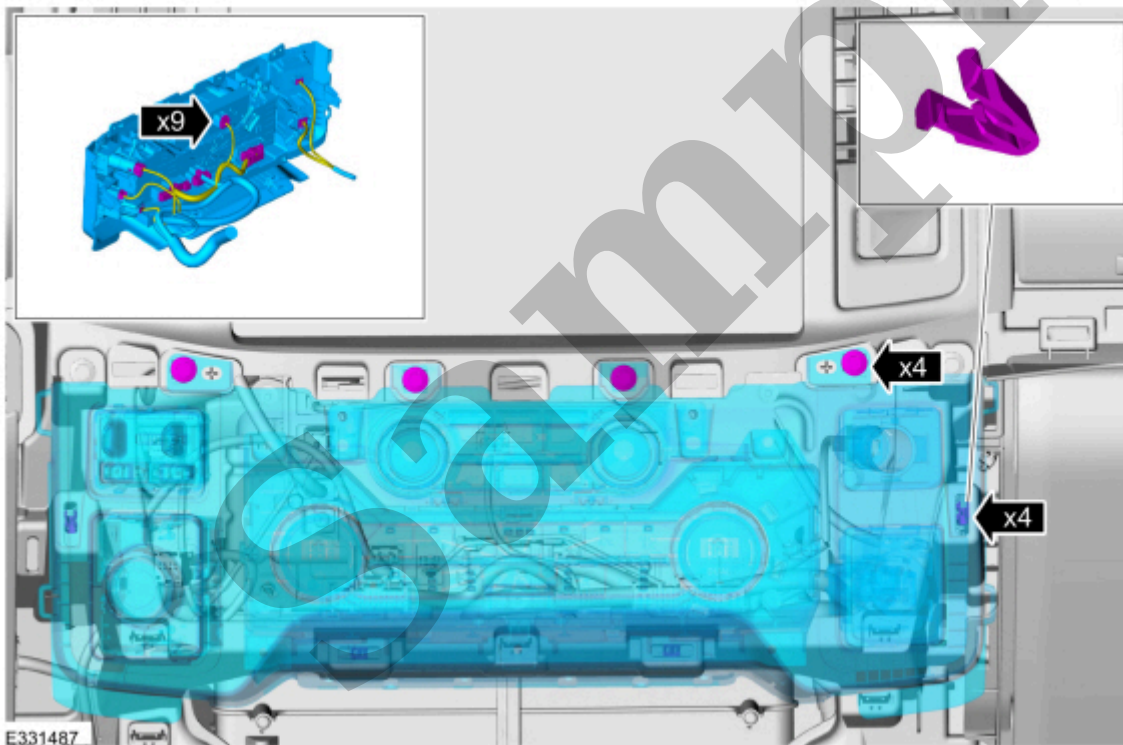

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

56. On vehicles without a floor console.


Remove the pin-type retainers and the RH (right-hand) lower instrument panel closeout trim panel.



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

58. On vehicles without a floor console.

Release the clips and remove the instrument panel lower trim panel.

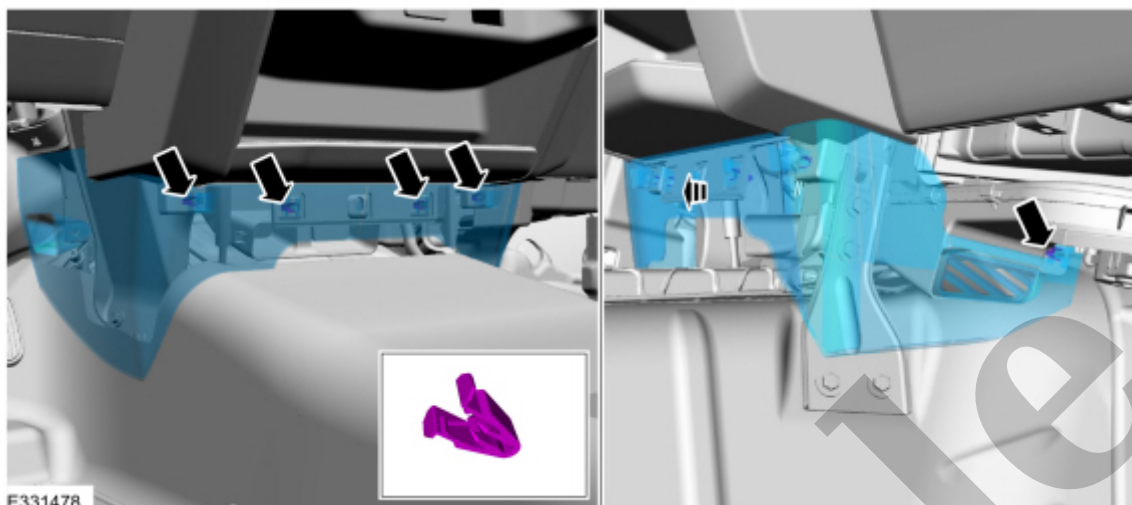



[Click here to learn about symbols, color coding, and icons used in this manual.](#)

59. On vehicles without a floor console.

Release the clips and remove the LH (left-hand) lower centerstack trim panel.


Use the General Equipment: Interior Trim Remover

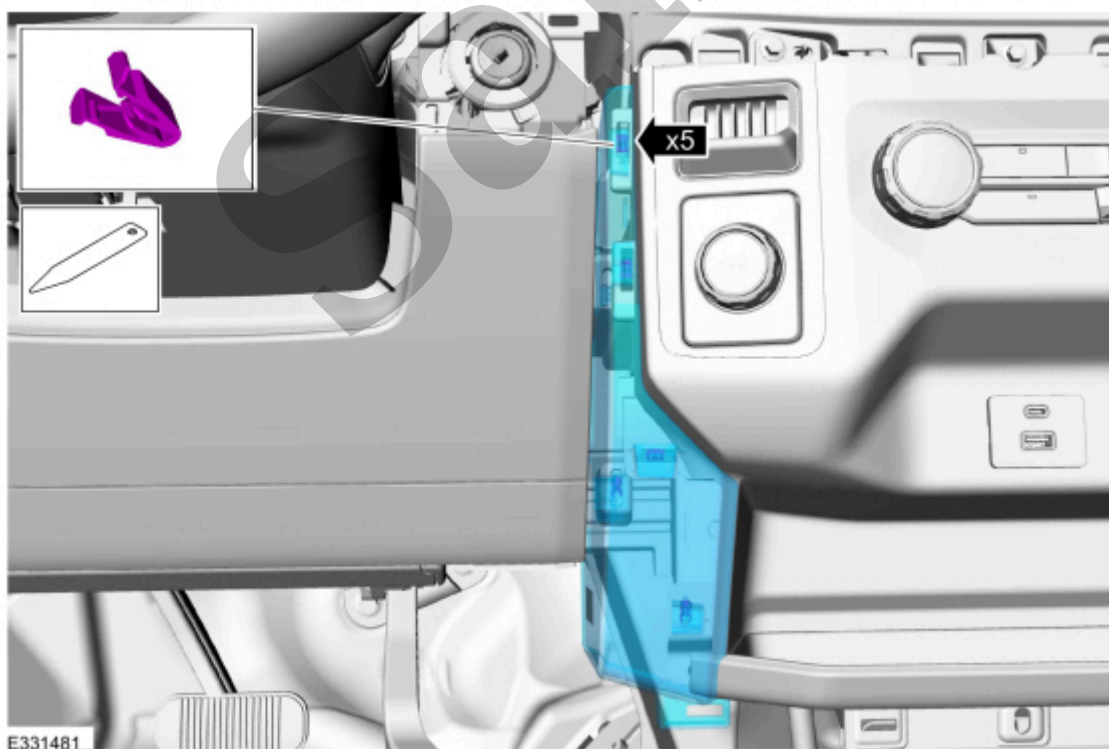

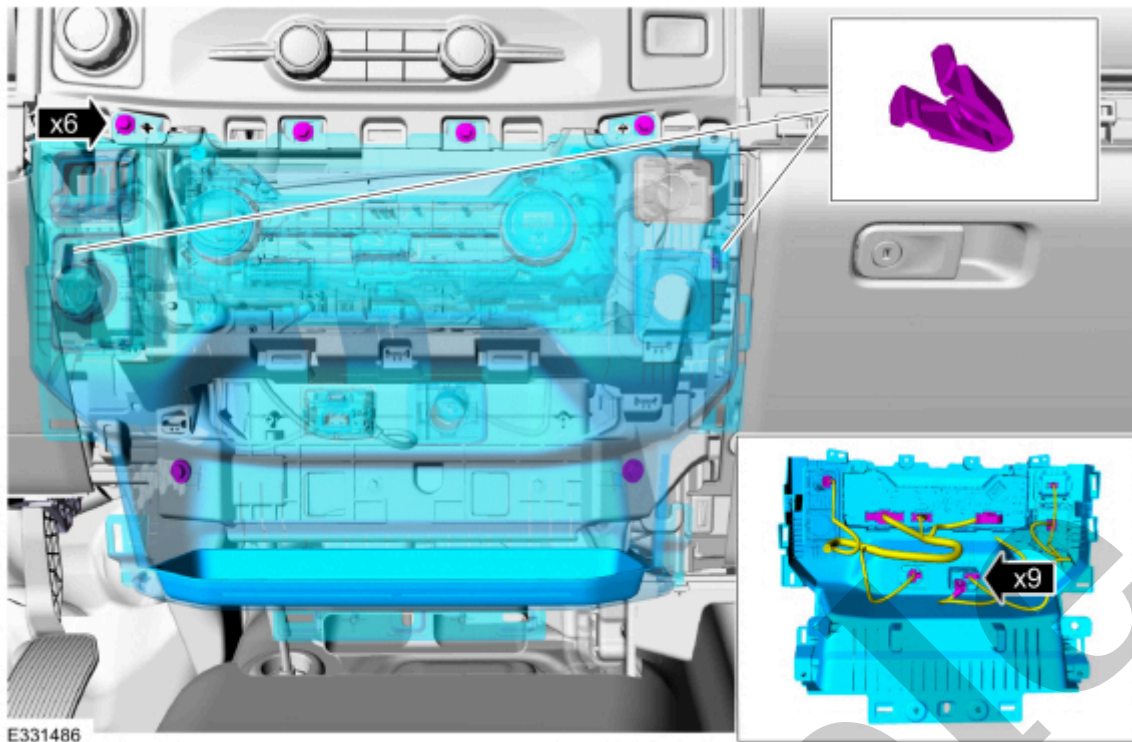

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

62. Disconnect the FM2/diversity amplifier to audio unit antenna cable connector from the FM2/diversity amplifier.

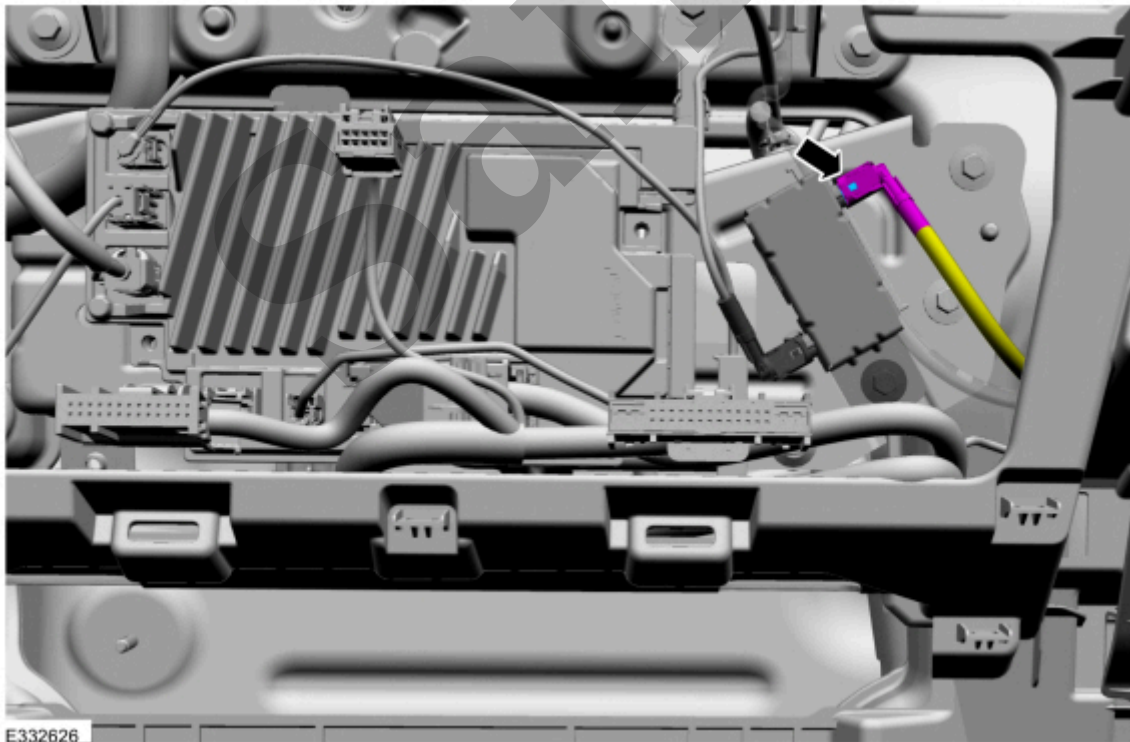

[Click here to learn about symbols, color coding, and icons used in this manual.](#)