

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


2005 NISSAN Micra 5 Doors OEM Service and Repair Workshop Manual

Go to manual page



: Vehicle front


- 3 Remove remaining springs in numerical order from 1 to 2.
- 4 Disconnect driver air bag module harness connectors (B) and horn switch harness terminal (A).

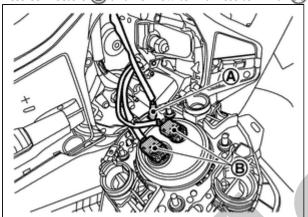

RPR-001930867-03-000390743

CAUTION:

• For installing/removing the driver air bag module harness connector, insert thin screwdriver wrapped in tape into notch, lift lock and remove connector.

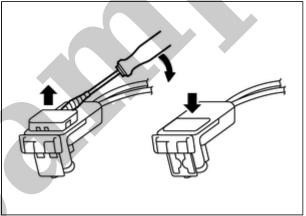


RPR-001930867-07-HIA0953J

- Install connector with lock raised, and push lock into the connector.
- After installing the connector, check that the lock is pushed securely into it.

5 Remove driver air bag module.

CAUTION:

• To prevent accidental explosion, always place the driver air bag module with pad side facing upward.

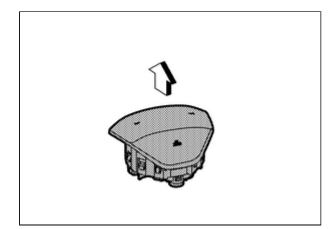



: Upward

• To prevent damage to the parts, never impact the driver air bag module.



RPR-001930867-09-MHIA0009ZZ


- Replace driver air bag module if it has been dropped or sustained an impact.
- To prevent accidental explosion, never insert any foreign objects (screwdriver, etc.) into the driver air bag module.
- To prevent accidental explosion, never disassemble the driver air bag module.
- To prevent accidental explosion, never expose the driver air bag module to temperatures exceeding 90 °C (194 °F).
- To prevent damage to the parts, never allow oil, grease, detergent, or water to come in contact with the driver air bag module.

INSTALLATION

Note the following items, and install in the reverse order of removal.


CAUTION:

• Fix the driver air bag module harnesses to the harness fixing hook (A) and (B).

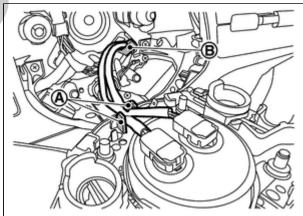

RPR-001930867-05-000391458


• Align the engage points (A) of steering wheel and driver air bag module, and then press driver air bag module until it snaps into place with a clicking sound.

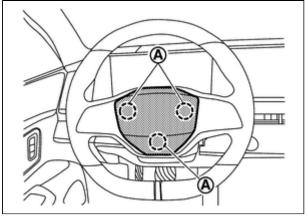

RPR-001930867-06-000372146

- Check that horn does not sound when driver air bag module is not pressed.
- Never damage the harness while installing.
- After installation is completed, perform self-diagnosis using CONSULT or air bag warning lamp, if the system is normal and "PAST" of "Self Diagnostic Result" is indicated, always perform "ERASE" of "Self Diagnostic Result" using CONSULT. Refer to Work Flow.
- After the work is completed, check that no system malfunction is detected by air bag warning lamp in the user mode.



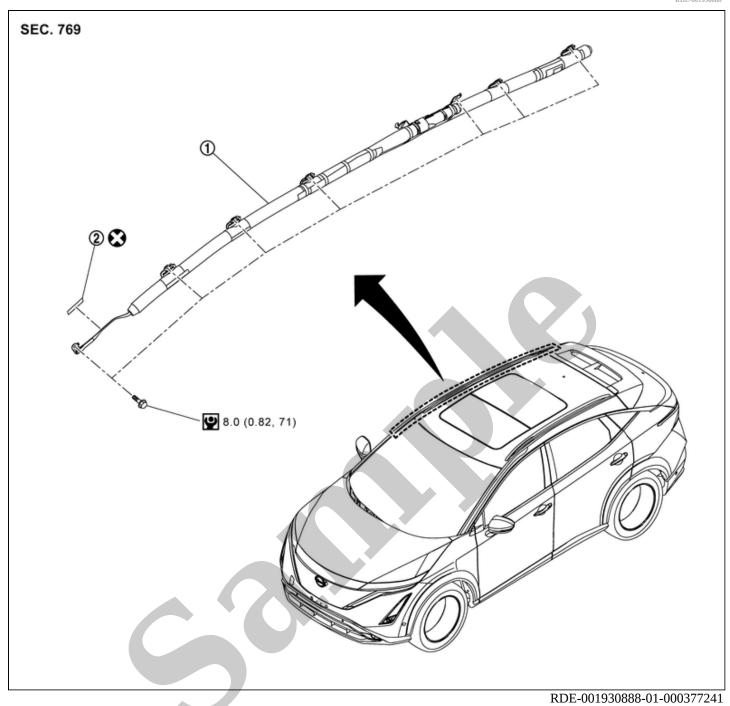

1	Curtain airbag module	2	Double-sided tape					
		©	[t: 0.16 mm (0.006 in)]					
8	: Always replace after every disassembly.							
٥	: N·m (kg-m, in-lb)							

 
WARNING:


Always observe the following items for preventing accidental activation.

- Before servicing, power switch OFF, disconnect 12V battery negative terminal and wait for 3 minutes or more (discharges electricity held in the additional power supply circuit of the air bag diagnosis sensor unit). Refer to <u>Precautions for Removing Battery Terminal</u>.
- · Always work from the side of air bag module. Never work in front of it.
- Never use air tools or electric tools for servicing.

REMOVAL

1 Remove headlining assembly. Refer to Removal & Installation.



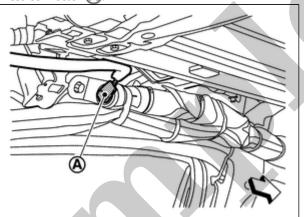


RPR-001930889-03-000372156



: Vehicle front

CAUTION:

• For installing/removing the curtain air bag harness connector, insert a thin screwdriver wrapped in tape into notch, lift lock and remove the connector.

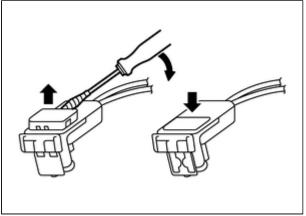

RPR-001930889-01-HIA0953J

- Install connector with lock raised, and push lock into the connector.
- After installing the connector, check that the lock is pushed securely into it.
- 3 Remove curtain air bag module front side mounting bolt, and then peel off double-sided tape from vehicle.
- 4 Remove curtain air bag module mounting bolts.

5 Remove bracket part of curtain air bag module from vehicle, and then remove curtain air bag module.

CAUTION:

• To prevent damage to the parts, never impact the curtain air bag module.



RPR-001930889-02-MHIA0009ZZ

- · Replace curtain air bag module if it is dropped or sustains an impact.
- To prevent accidental explosion, never insert any foreign objects (screwdriver, etc.) into the curtain air bag module.
- To prevent accidental explosion, never disassemble the curtain air bag module.
- To prevent accidental explosion, never expose the curtain air bag module to temperatures of more than 90°C (194°F).
- To prevent damage to the parts, never allow oil, grease, detergent, or water to come in contact with the curtain air bag module.

INSTALLATION

Note the following items, and then install in the reverse order of removal.

CAUTION:

- When reuse curtain air bag module, replace double-sided tape.
- Never damage the harness while installing.
- After installation is completed, perform self-diagnosis using CONSULT or air bag warning lamp, if the system is normal and "PAST" of "Self Diagnostic Result" is indicated, always perform "ERASE" of "Self Diagnostic Result" using CONSULT. Refer to Work Flow.
- After the work is completed, check that no system malfunction is detected by air bag warning lamp.

For exploded view of seat belt pre-tensioner, refer to the following.

• Front: Refer to Exploded View.

• Rear: Refer to Exploded View.




For removal and installation procedure of seat belt pre-tensioner, refer to the following.

• Front: Refer to Removal & Installation.

• Rear: Refer to Removal & Installation.



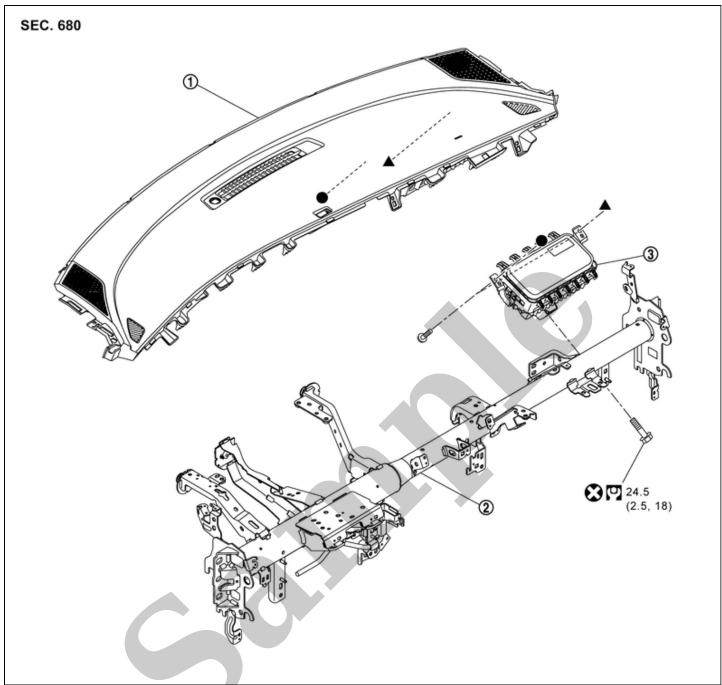

RDE-001930876-02-000372151

1	Instrument upper garnish	@	Steering member	3	Passenger air bag module				
8	: Always replace after every disassembly.								
Ō	: N·m (kg-m, ft-lb)								
●, ▲: Indicates that the part is connected at points with same symbol in actual vehicle.									