

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2006 CHEVROLET Suburban OEM Service and Repair Workshop Manual

[Go to manual page](#)

CAV_3 3

7603 Folding Top Sensor Voltage Reference

7603_YE/BN 7603 YE/BN

5933 Folding Top Position Sensor Signal

5933_VT/WH 5933 VT/WH

CAV_11 11

5935 Folding Top Unlatch Switch Signal

5935_BN 5935 BN

CAV_12 12

5744 Left Luggage Barrier Limit Switch Signal

5744_L-GN/YE 5744 L-GN/YE

CAV_8 8

5933_VT/WH 5933 VT/WH

5935_BN 5935 BN

CAV_1 1

CAV_A A

CAV_A A

CAV_2 2

7603_YE/BN 7603 YE/BN

CAV_B B

CAV_B B

7603_YE/BN 7603 YE/BN

CAV_63 63

7603_YE/BN 7603 YE/BN

7603_YE/BN 7603 YE/BN

7603_YE/BN 7603 YE/BN

CAV_3 3

6817 LED Backlight Dimming Control 1

6817_YE 6817 YE

G301

G301, G304

J317 J317

Body Harness Routing - Left Rear of Passenger Compartment

X201 X201

Body Harness Routing - Right Front of Passenger Compartment

Instrument Panel Harness Routing - Front of Instrument Panel

X201 Body Harness to Instrument Panel Harness

K9 K9 Body Control Module

Right Front of Passenger Compartment Components

K9 Body Control Module X1

K9 Body Control Module X2

K9 Body Control Module X3

K9 Body Control Module X4

K9 Body Control Module X5

K9 Body Control Module X6

K9 Body Control Module X7

X53A X53A Fuse Block - Rear Body

Middle of Luggage Compartment Components

X53A Fuse Block - Rear Body X1

X53A Fuse Block - Rear Body X2

X53A Fuse Block - Rear Body X3

X53A Fuse Block - Rear Body X4

Interior_Lights_Dimming_Schematics_REF Interior Lights Dimming Schematics

Controls and Instrument Panel Switches

Door Switches

Steering Wheel Switches

S22B S22B Folding Top Control Switch (CM8)

Front of Instrument Panel Components

S22B Folding Top Control Switch

B43 B43 Folding Top Luggage Barrier Sensor (CM8)

5934 Front Tonneau Position Sensor Signal

5027 Sunroof Switch Serial Data 1 Signal

5028 Sunroof Switch Serial Data Signal 2

5029 Sunroof Switch Serial Data Signal 3

5030 Sunroof Switch Serial Data Signal 4

7162 Left Folding Top Header Latched Position Sensor Open Signal

7163 Right Folding Top Header Latched Position Sensor Open Signal

CAV_2 2

CAV_3 3

3249 Folding Top Position Sensor Voltage Reference

CAV_1 1

CAV_10 10

CAV_9 9

CAV_16 16

CAV_15 15

CAV_12 12

CAV_11 11

CAV_13 13

CAV_14 14

CAV_3 3

CAV_2 2

CAV_2 2

CAV_2 2

CAV_2 2

CAV_1 1

CAV_1 1

3249_YE 3249 YE

3249_YE 3249 YE

3249_YE 3249 YE

Folding Top Components (1 of 3) (CM8)

B250 Folding Top Tension Bow Up Position Sensor (CM8)

B251 B251 Folding Top Down Position Sensor (CM8)

Folding Top Components (1 of 3) (CM8)

B251 Folding Top Down Position Sensor (CM8)

B252 B252 Folding Top Up Position Sensor (CM8)

Folding Top Components (1 of 3) (CM8)

B252 Folding Top Up Position Sensor (CM8)

B249 B249 Folding Top Tension Bow Down Position Sensor (CM8)

Folding Top Components (1 of 3) (CM8)

B249 Folding Top Tension Bow Down Position Sensor (CM8)

B248 B248 Folding Top Stowage Compartment Lid Open Position Sensor (CM8)

Folding Top Components (1 of 3) (CM8)

B248 Folding Top Stowage Compartment Lid Open Position Sensor (CM8)

B245 B245 Folding Top Stowage Compartment Lid Fully Closed Position Sensor (CM8)

Folding Top Components (1 of 3) (CM8)

B245 Folding Top Stowage Compartment Lid Fully Closed Position Sensor (CM8)

B273L B273L Folding Top Header Unlatched Position Sensor - Left (CM8)

Folding Top Components (1 of 3) (CM8)

B273L Folding Top Header Unlatched Position Sensor - Left (CM8)

B273R B273R Folding Top Header Unlatched Position Sensor - Right (CM8)

Folding Top Components (1 of 3) (CM8)

B273R Folding Top Header Unlatched Position Sensor - Right (CM8)

Hydraulic Unit