

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


2006 FORD Mustang OEM Service and Repair Workshop Manual

[Go to manual page](#)

7. Remove the steering column opening lower trim panel.

1. Unclip and lower the steering column opening lower trim panel.


2. Remove the retainers and the steering column opening lower trim panel.

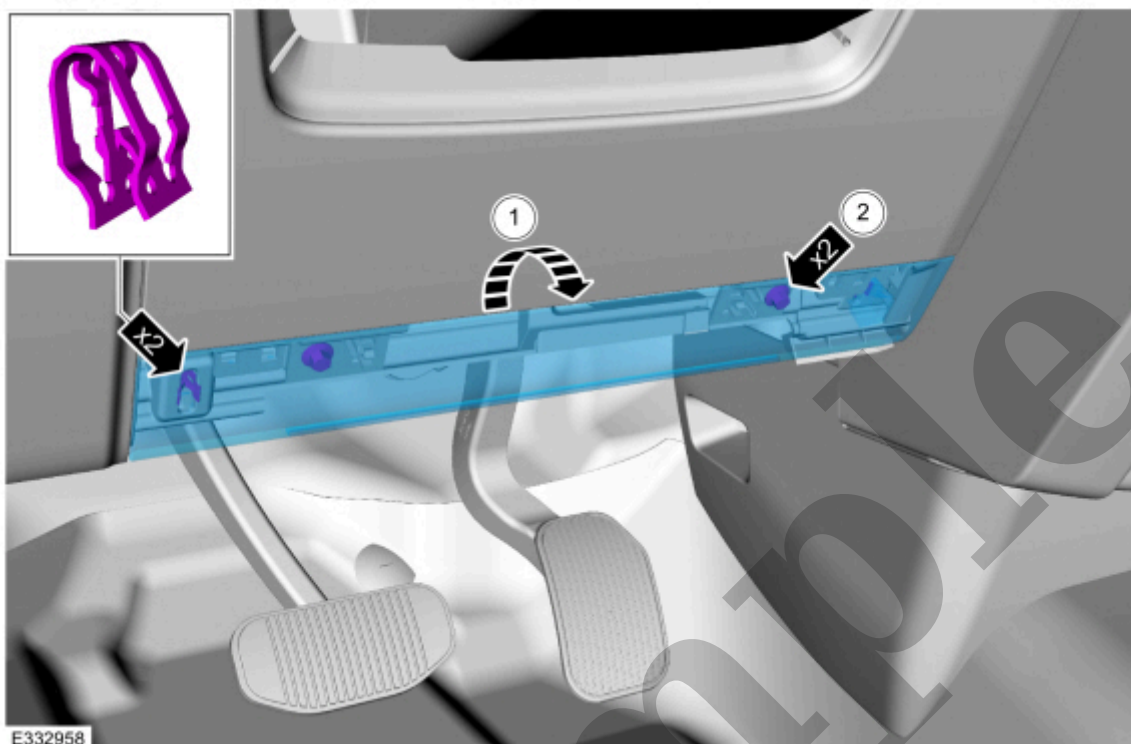

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

8. Remove the steering column opening trim panel.


Use the General Equipment: Interior Trim Remover

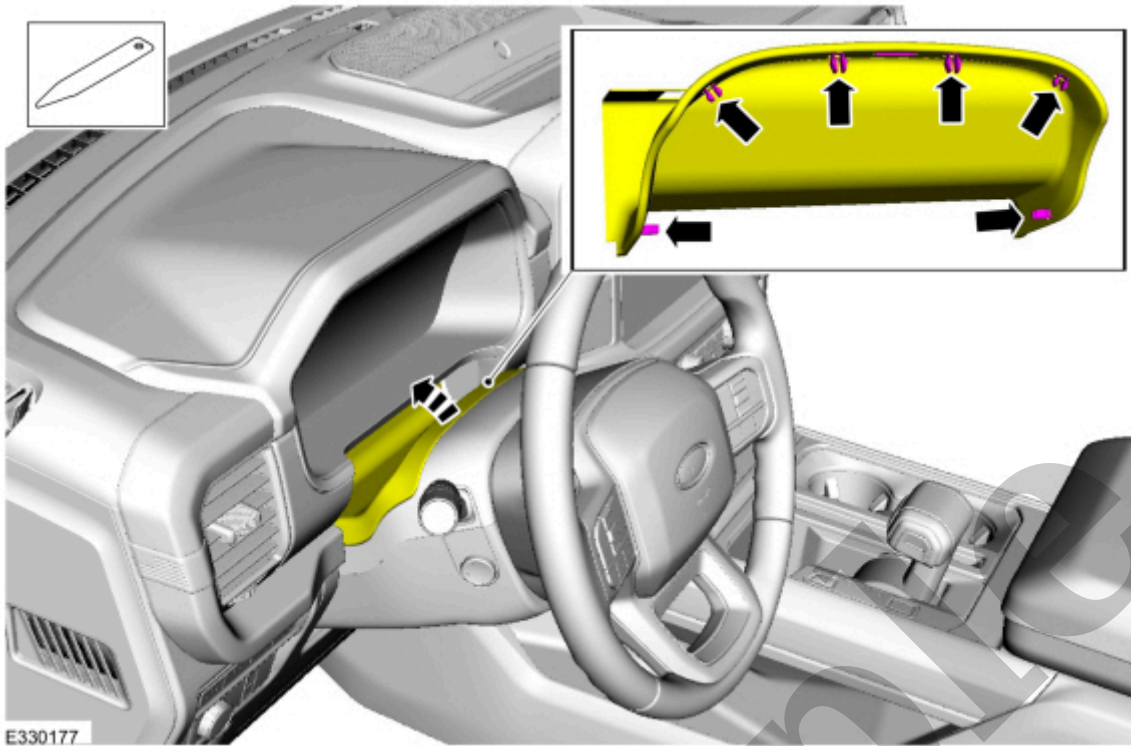


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

11. Remove the screws.

Torque : 22 lb.in (2.5 Nm)

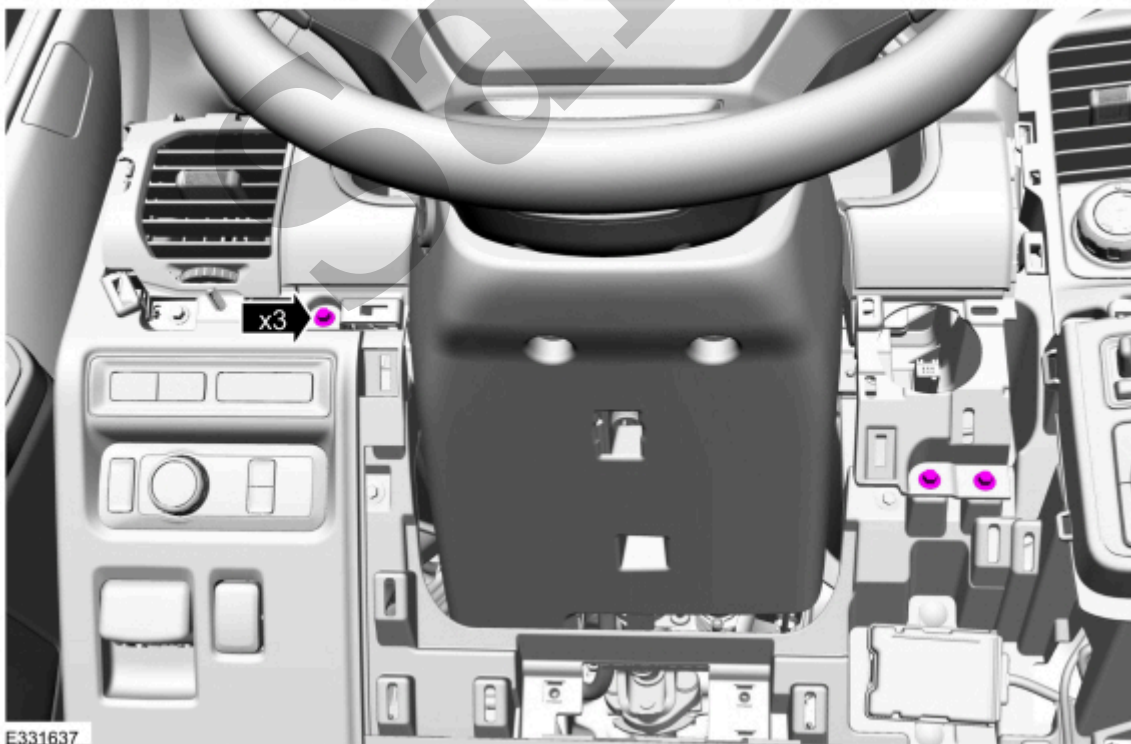


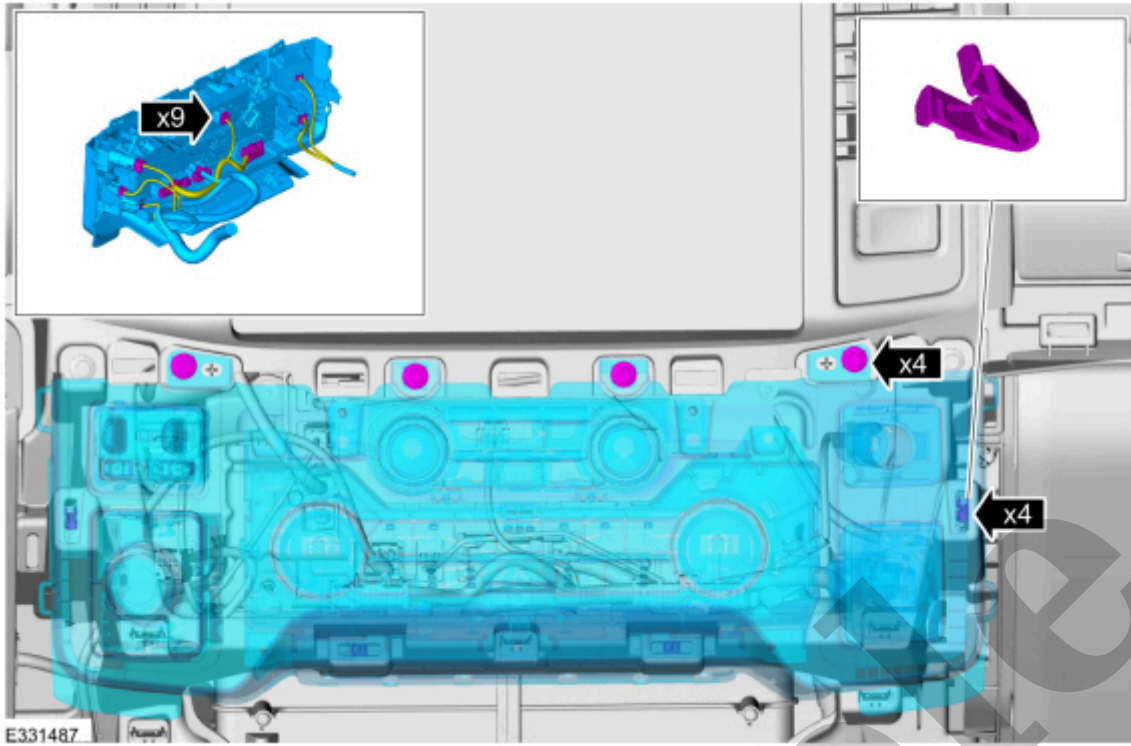

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

15. On vehicles without a floor console.

Remove the pin-type retainers and the RH (right-hand) lower instrument panel closeout trim panel.

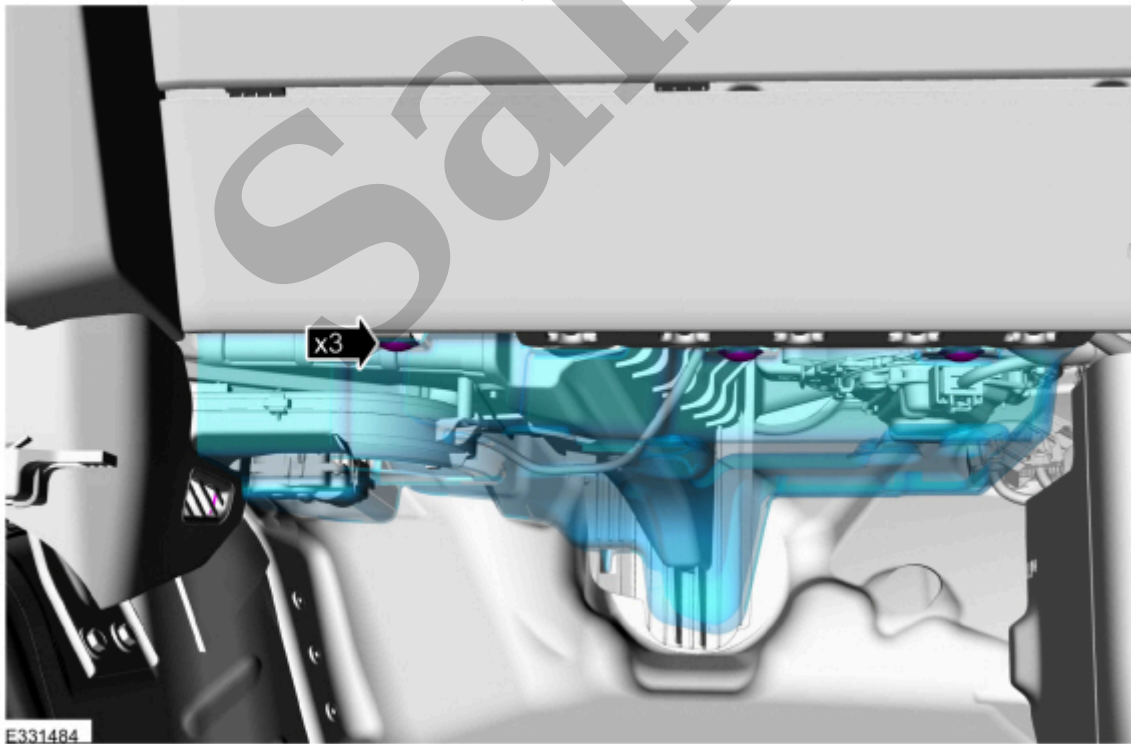


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

18. On vehicles without a floor console.

Release the clips and remove the LH (left-hand) lower centerstack trim panel.

Use the General Equipment: Interior Trim Remover

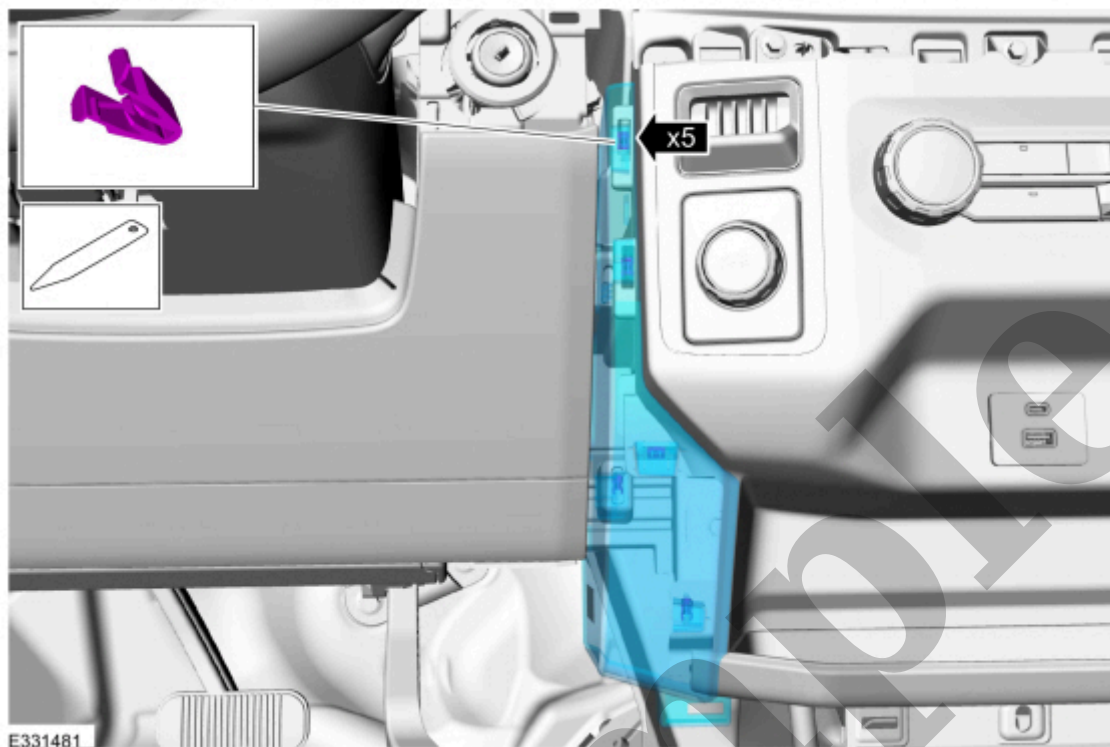


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

19. On vehicles without a floor console.

Release the clips and remove the RH (right-hand) lower centerstack trim panel.


Use the General Equipment: Interior Trim Remover

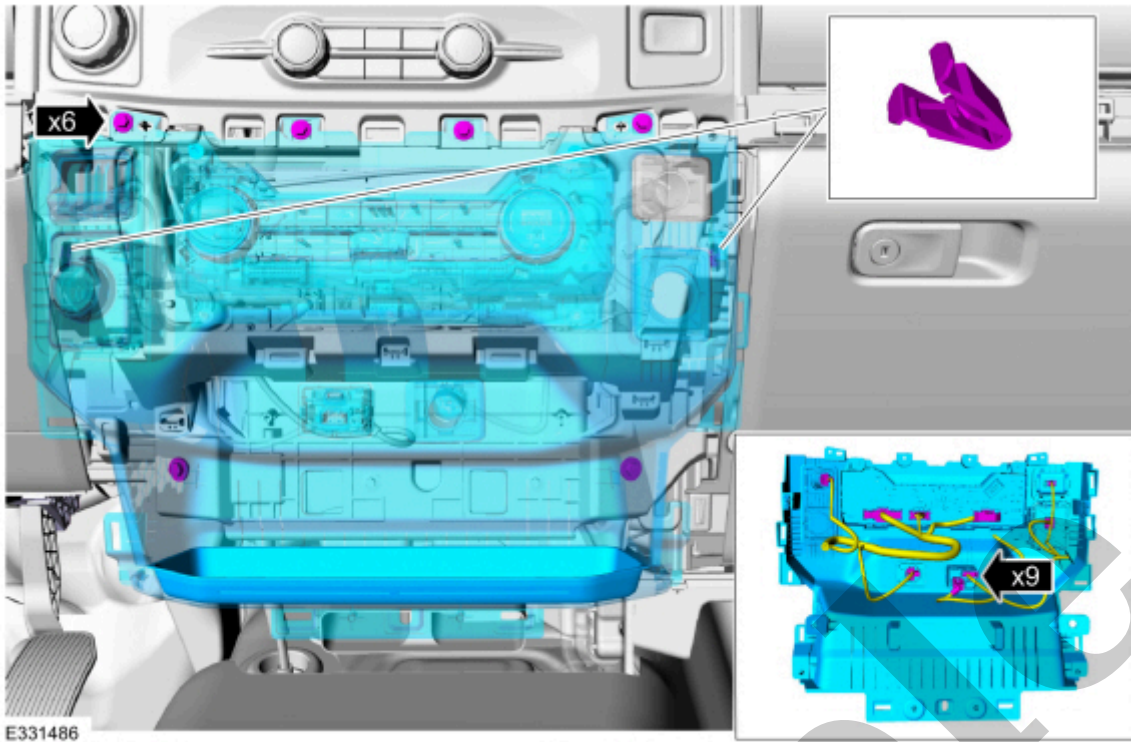

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

21. Remove the bolts.



Torque : 55 lb.in (6.2 Nm)

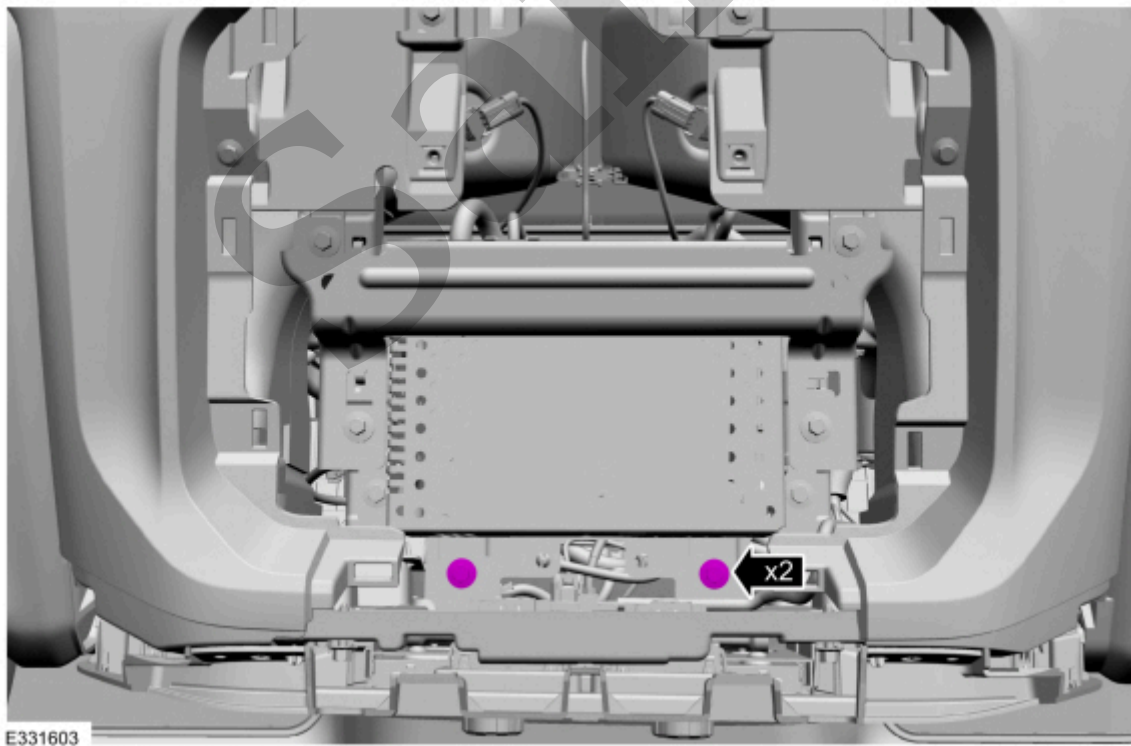

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Remove the bolts, disconnect the electrical connector and remove the FDIM (front display interface module).

Torque : 55 lb.in (6.2 Nm)

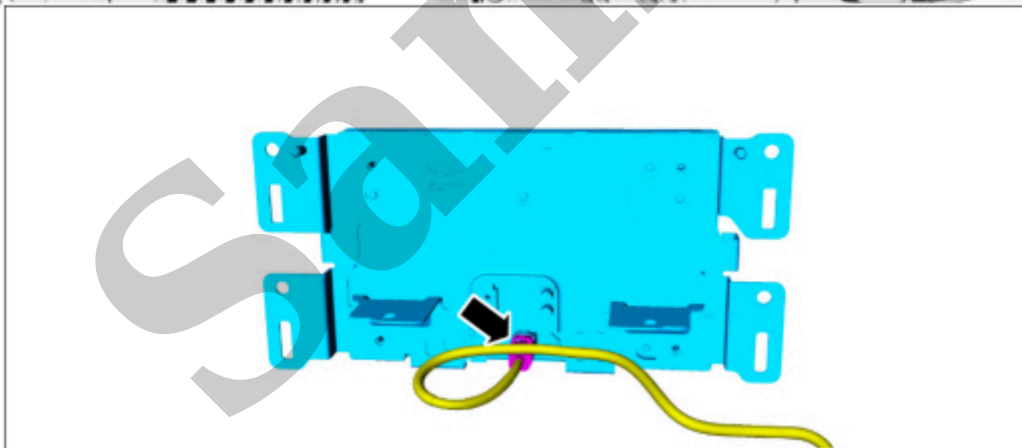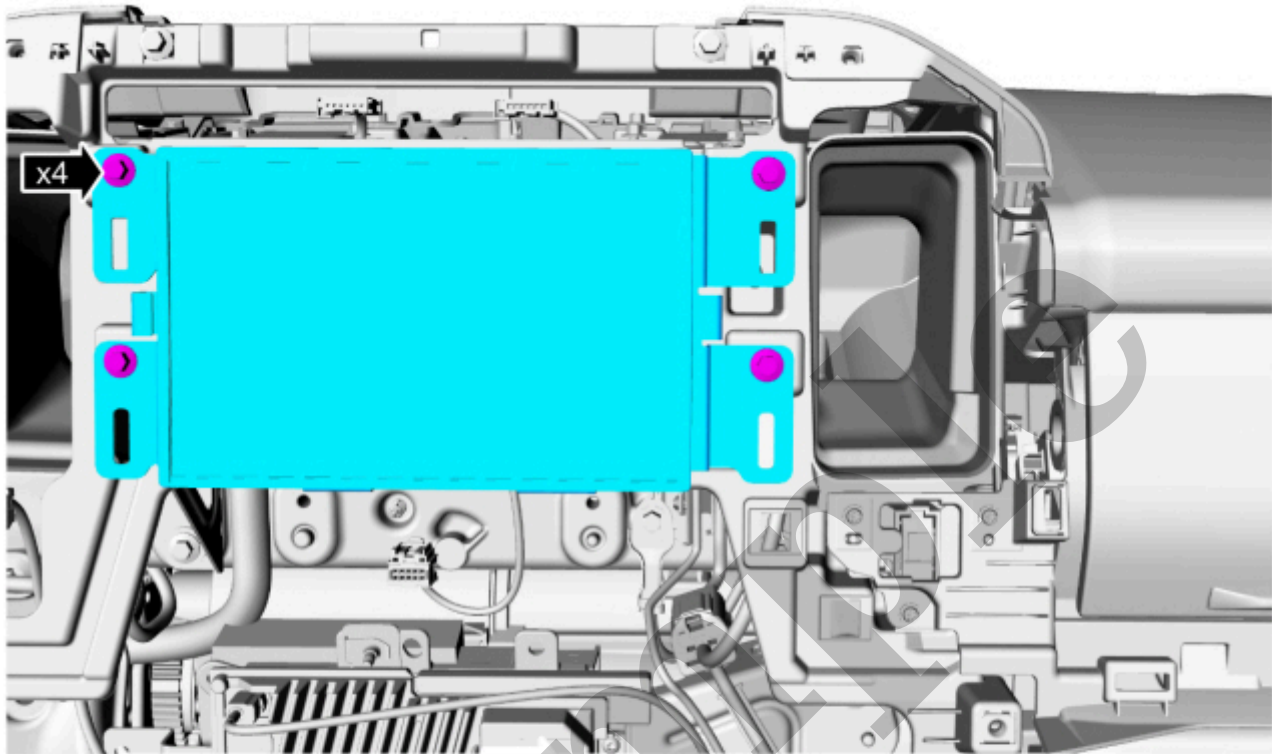

E331646


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

24. Remove the bolts and the bracket.

Torque : 55 lb.in (6.2 Nm)

26. Fully lower the glove box.

- Release the glove box stops.

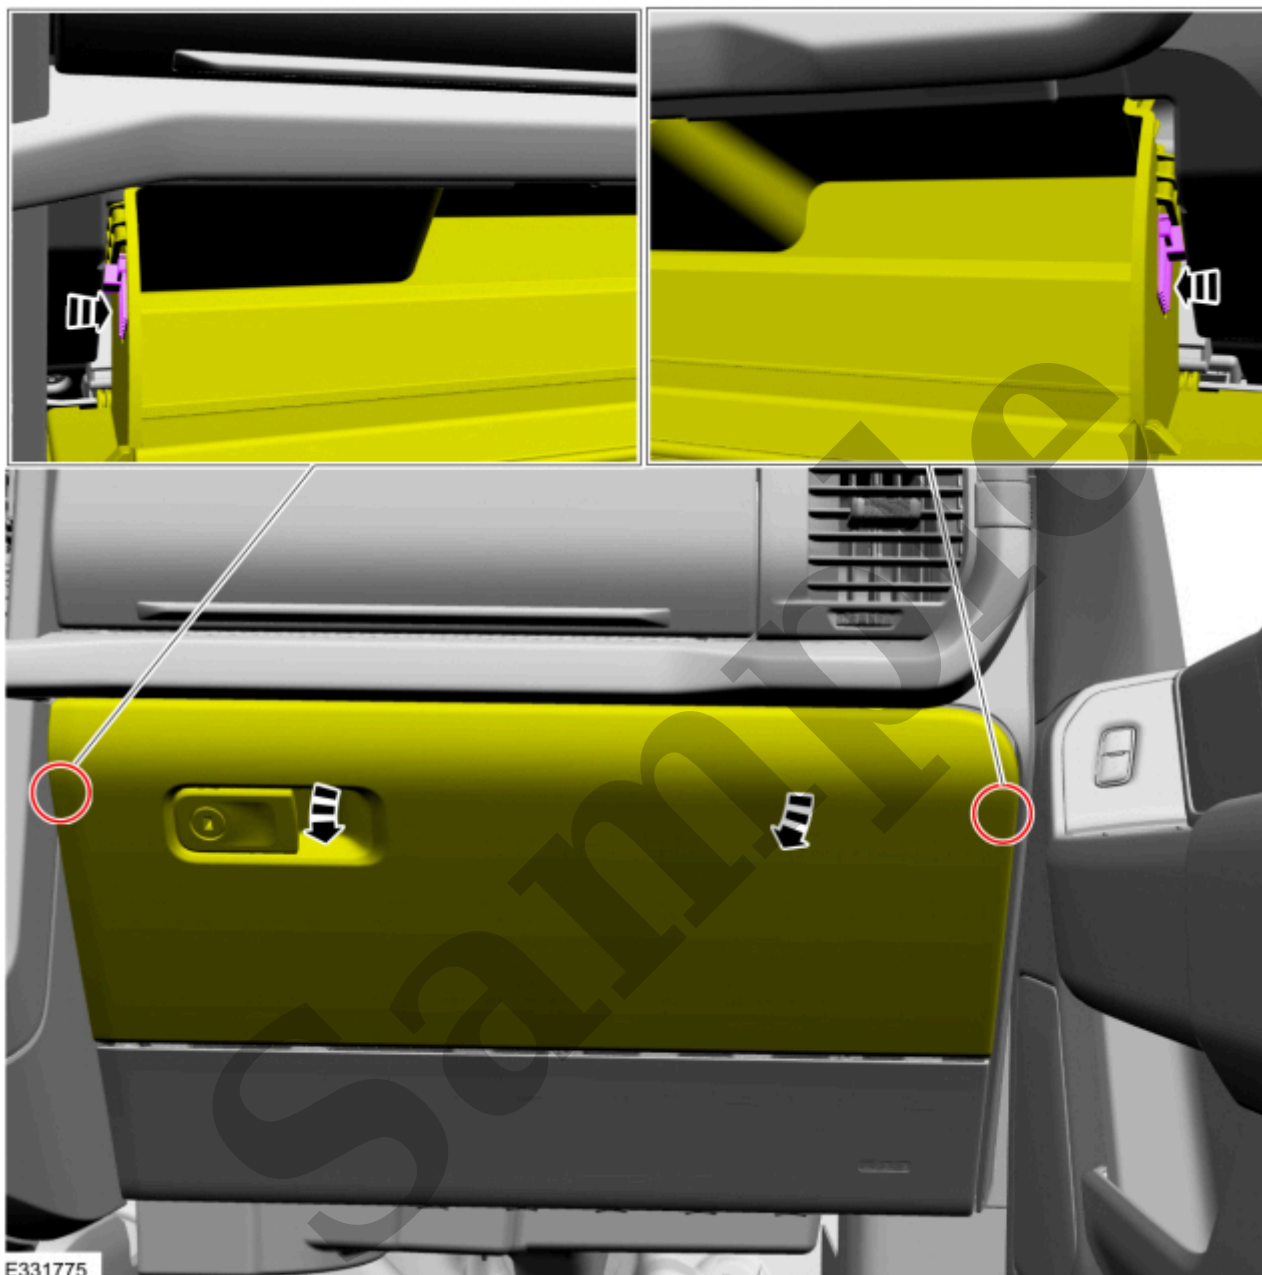


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

27. Disconnect the audio unit antenna cable connector.

29. Release the clips and remove the speaker grille.

Use the General Equipment: Interior Trim Remover

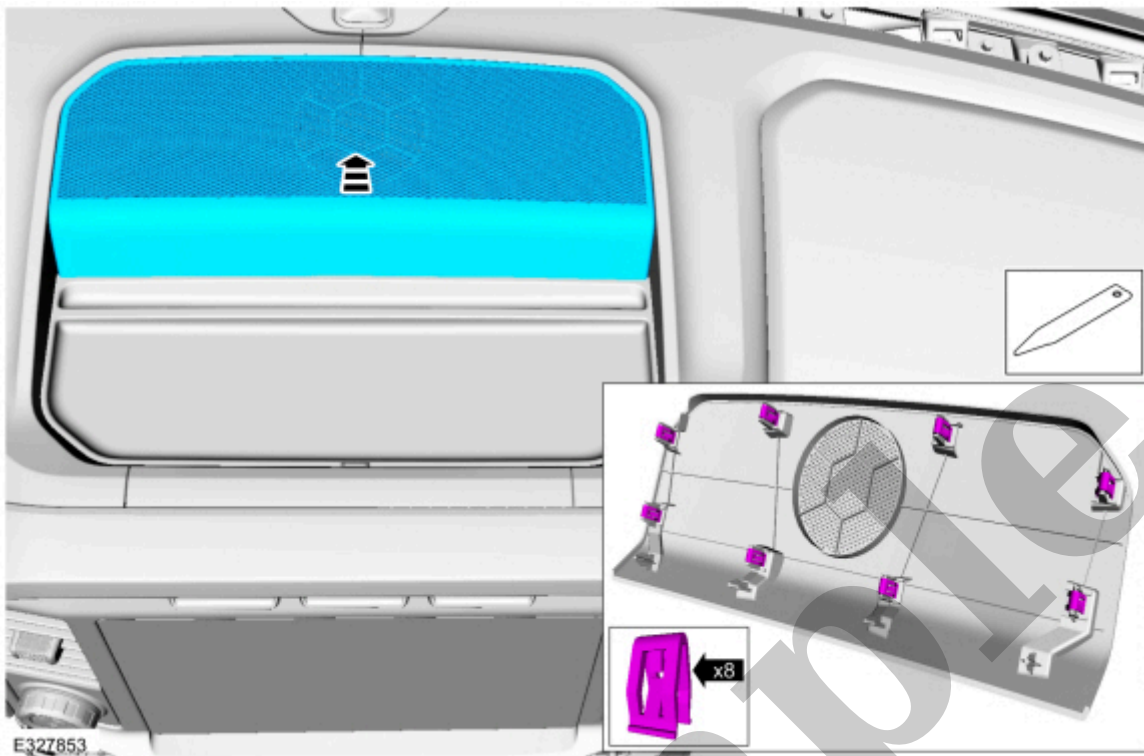


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

30. **NOTE**

If equipped.


Remove the rubber pad.

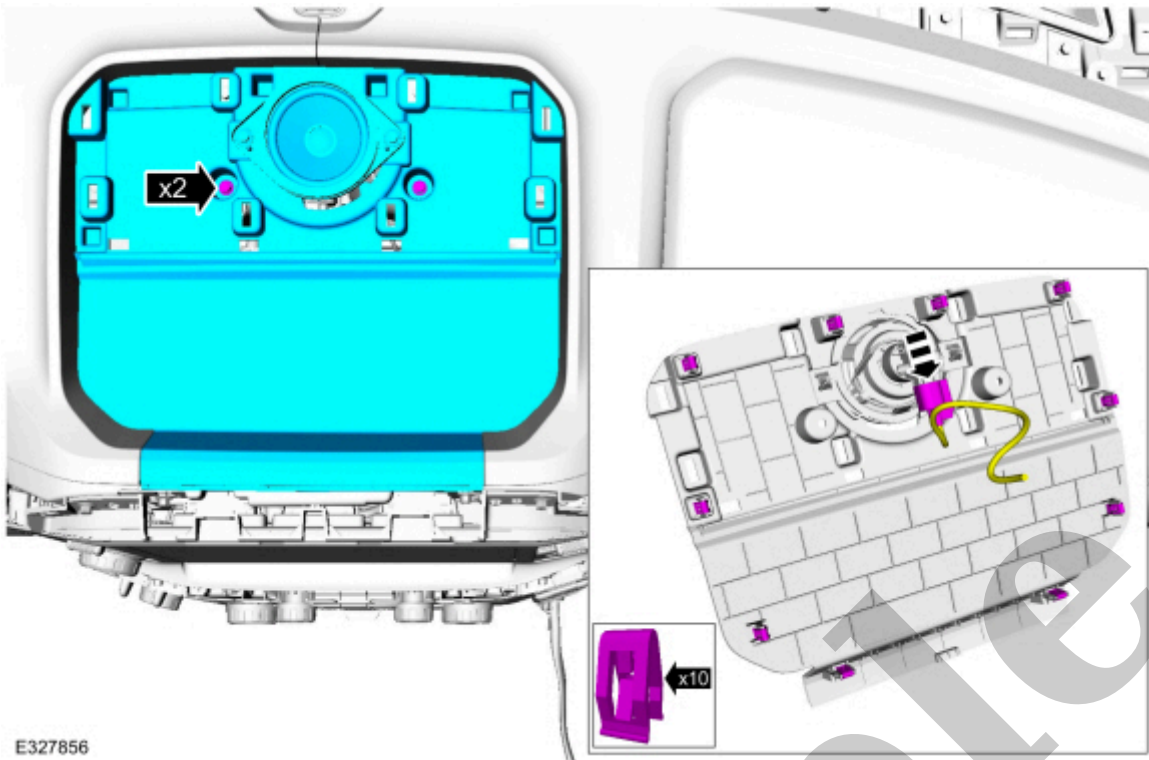

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

32. Release the clips and remove the LH (left-hand) instrument center trim panel.

Use the General Equipment: Interior Trim Remover

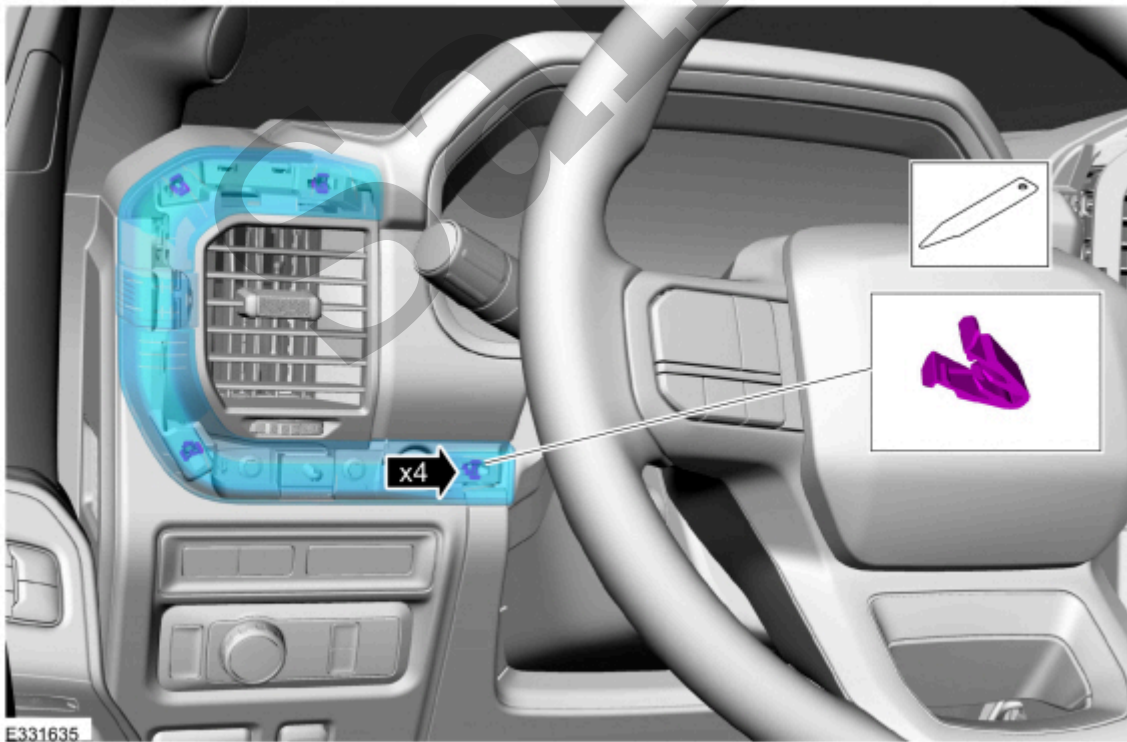

[Click here to learn about symbols, color coding, and icons used in this manual.](#)