

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

## 2006 NISSAN Platina OEM Service and Repair Workshop Manual

[Go to manual page](#)

**WARNING:**

- Before servicing, power switch OFF, disconnect battery negative terminal, and wait at least 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

## 1. CHECK HARNESS CONNECTOR

---

Check the harness connector for disconnection, looseness or damage.

Is the inspection result normal?

YES>>

[GO TO 2.](#)

NO-1>>

Damage: Replace malfunctioning harness and connector.

NO-2>>

Disconnection or looseness: Securely lock the connector.

## 2. CHECK WIRING HARNESS

---

Check the wiring harness externals.

Is the inspection result normal?

YES>>

[GO TO 3.](#)

NO>>

Replace malfunctioning harness and connector.

## 3. REPLACE CURTAIN AIR BAG MODULE LH

---

1. Replace curtain air bag module LH. Refer to [Removal & Installation](#).

2. Perform DTC confirmation procedure. Refer to [DTC Description](#).

Is DTC detected?

YES>>

[GO TO 4.](#)

NO>>

INSPECTION END

## 4. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

---

Replace air bag diagnosis sensor unit. Refer to [Removal & Installation](#).

>>

Sample

## DTC DETECTION LOGIC

DTC No.	CONSULT screen items	DTC Detection Condition	
		Diagnosis condition	When power switch is ON.
B0021-55	Left Curtain Deployment Control 1	Signal (terminal)	Curtain air bag module LH signal
		Threshold	When a mismatch is detected between in the configuration data stored in the air bag diagnosis sensor unit and vehicle specification.
		Diagnosis delay time	2 seconds or more.

## POSSIBLE CAUSE

- Connection malfunction of harness and connector
- Mistake of configuration for air bag diagnosis sensor unit
- Internal malfunction of air bag diagnosis sensor unit

## FAIL-SAFE

## DTC CONFIRMATION PROCEDURE

### 1. CHECK SELF-DIAG RESULT

 With CONSULT

1. Power switch ON.
2. Perform "Self Diagnostic Result" mode of "AIR BAG" using CONSULT.

Is malfunctioning part detected?

YES>>

Refer to [Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

**WARNING:**

- Before servicing, power switch OFF, disconnect battery negative terminal, and wait at least 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

## 1. CHECK HARNESS CONNECTOR

---

Check the harness connector for disconnection, looseness or damage.

Is the inspection result normal?

YES>>

[GO TO 2.](#)

NO-1>>

Damage: Replace malfunctioning harness and connector.

NO-2>>

Disconnection or looseness: Securely lock the connector.

## 2. CHECK WIRING HARNESS

---

Check the wiring harness externals.

Is the inspection result normal?

YES>>

[GO TO 3.](#)

NO>>

Replace malfunctioning harness and connector.

## 3. PERFORM CONFIGURATION

---

1. Perform configuration for air bag diagnosis sensor unit. Refer to [Description](#).

2. Perform DTC confirmation procedure. Refer to [DTC Description](#).

Is DTC detected?

YES>>

[GO TO 4.](#)

NO>>

INSPECTION END

## 4. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

---

Replace air bag diagnosis sensor unit. Refer to [Removal & Installation](#).

>>

Sample

## DTC DETECTION LOGIC

DTC No.	CONSULT screen items	DTC Detection Condition	
B0022-55	Left Curtain Deployment Control 2	Diagnosis condition	When power switch is ON.
		Signal (terminal)	Front curtain air bag module LH signal
		Threshold	When a mismatch is detected between in the configuration data stored in the air bag diagnosis sensor unit and vehicle specification.
		Diagnosis delay time	2 seconds or more.

## POSSIBLE CAUSE

- Connection malfunction of harness and connector
- Mistake of configuration for air bag diagnosis sensor unit
- Internal malfunction of air bag diagnosis sensor unit

## FAIL-SAFE

## DTC CONFIRMATION PROCEDURE

### 1. CHECK SELF-DIAG RESULT

 With CONSULT

1. Power switch ON.
2. Perform "Self Diagnostic Result" mode of "AIR BAG" using CONSULT.

Is malfunctioning part detected?

YES>>

Refer to [Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

**WARNING:**

- Before servicing, power switch OFF, disconnect battery negative terminal, and wait at least 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

## 1. CHECK HARNESS CONNECTOR

---

Check the harness connector for disconnection, looseness or damage.

Is the inspection result normal?

YES>>

[GO TO 2.](#)

NO-1>>

Damage: Replace malfunctioning harness and connector.

NO-2>>

Disconnection or looseness: Securely lock the connector.

## 2. CHECK WIRING HARNESS

---

Check the wiring harness externals.

Is the inspection result normal?

YES>>

[GO TO 3.](#)

NO>>

Replace malfunctioning harness and connector.

## 3. PERFORM CONFIGURATION

---

1. Perform configuration for air bag diagnosis sensor unit. Refer to [Description](#).

2. Perform DTC confirmation procedure. Refer to [DTC Description](#).

Is DTC detected?

YES>>

[GO TO 4.](#)

NO>>

INSPECTION END

## 4. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

---

Replace air bag diagnosis sensor unit. Refer to [Removal & Installation](#).

>>



Sample

## DTC DETECTION LOGIC

DTC No.	CONSULT screen items	DTC Detection Condition	
		B0029-09	Right Curtain Deployment Control 1
Signal (terminal)	Curtain air bag module RH signal		
Threshold	Curtain air bag module RH circuit is shorted to other		
Diagnosis delay time	2 seconds or more.		

## POSSIBLE CAUSE

- Connection malfunction or short circuit of harness and connector
- Internal malfunction of curtain air bag module RH
- Internal malfunction of air bag diagnosis sensor unit

## FAIL-SAFE

## DTC CONFIRMATION PROCEDURE

### 1. CHECK SELF-DIAG RESULT

 With CONSULT

1. Power switch ON.
2. Perform "Self Diagnostic Result" mode of "AIR BAG" using CONSULT.

Is malfunctioning part detected?

YES>>

Refer to [Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END