

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2006 VOLVO S60 OEM Service and Repair Workshop Manual

Go to manual page



NOTE: The graphic shows the back of the component before removal.

WARNING: The supplemental restraint system (SRS) is active for a certain length of time after the power supply has been disconnected. Wait for a minimum of 30 seconds before disconnecting or removing any SRS components.




Remove back rest, rear panel. Refer to: BACK REST REAR PANEL


Release the catches.



Torque: Air bag to seat (SIPS), 7Nm Remove the nuts.

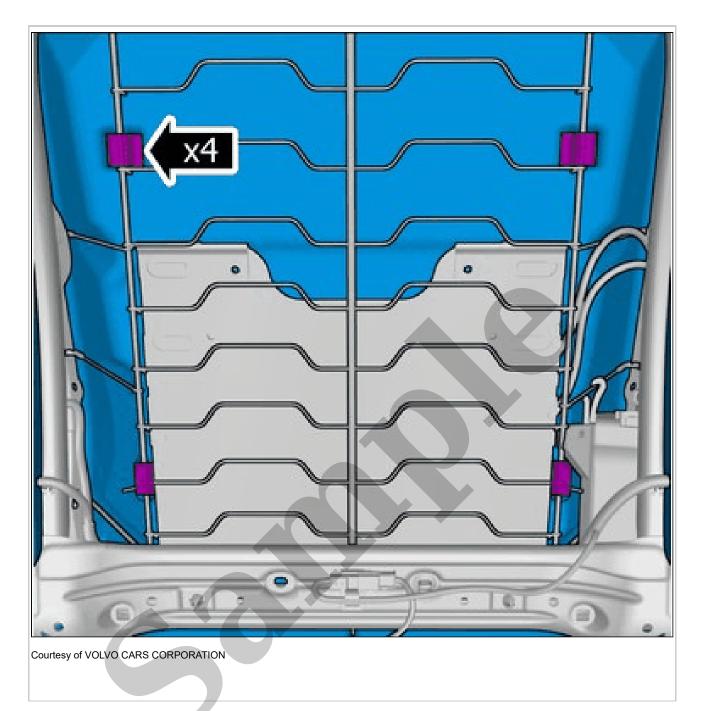


Special Tool: 115 8962 CRIMP PLIERS Remove the fasteners.

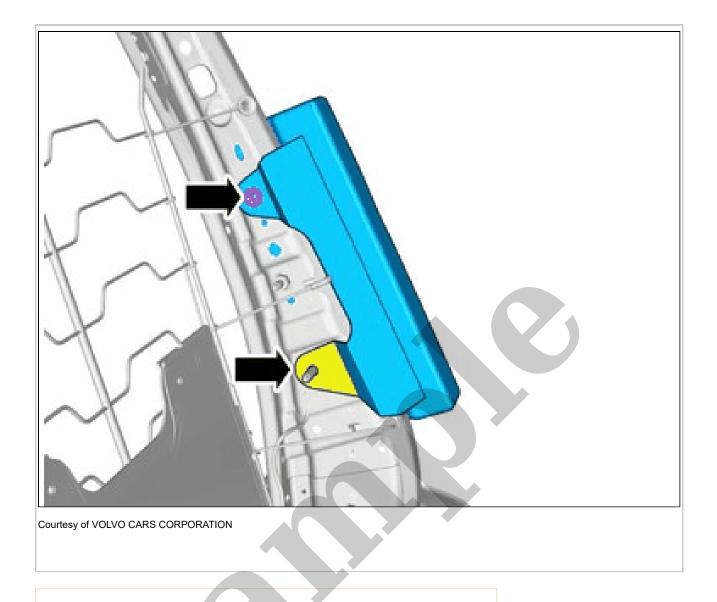


CAUTION: The clip should always be replaced during

removal.

Remove the clip. Fold marked part aside. ALL VEHICLES

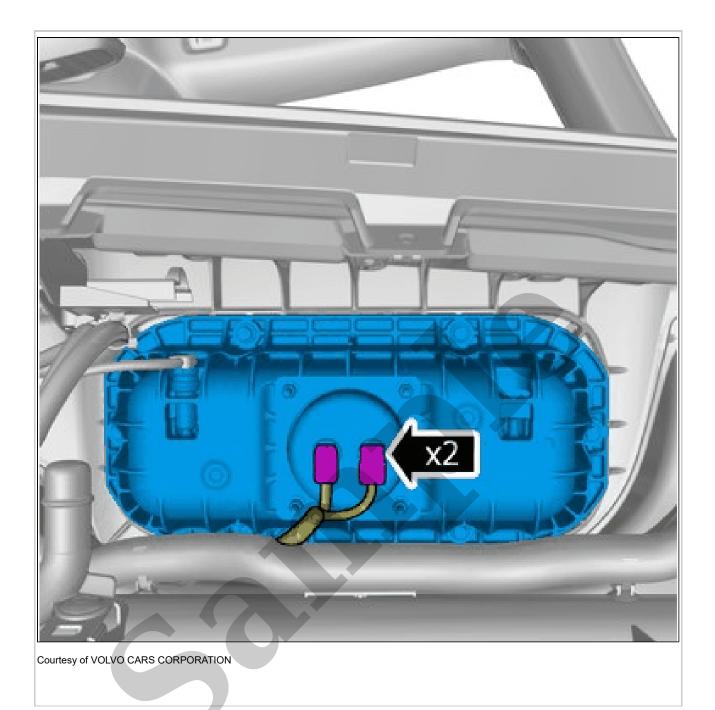

Disconnect the connectors.

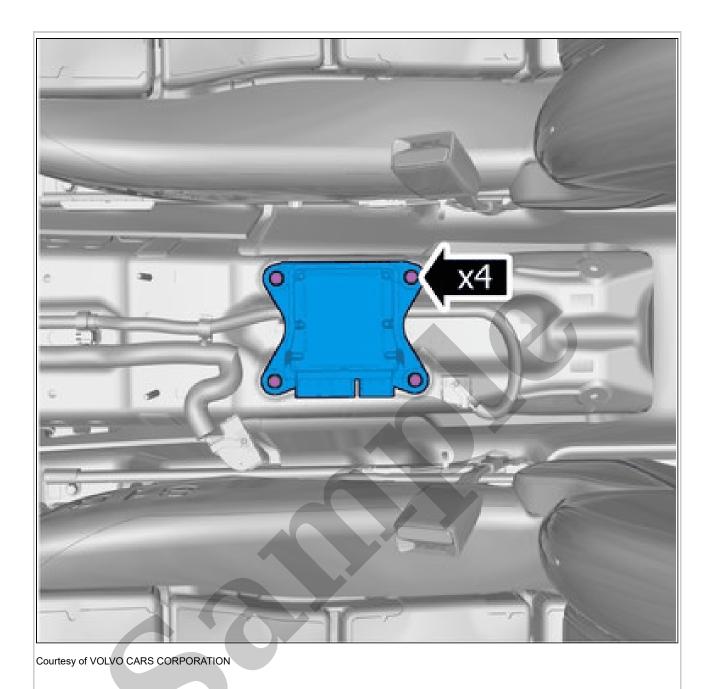

Remove the screws. Remove the marked part. **Torque:** Supplemental Restraint System Module (SRS), to Body, 10Nm **INSTALLATION**

To install, reverse the removal procedure.


NOTE: The following steps are only necessary when

installing a new component.

Order and download the appropriate software according to: VIDA/Software/Hardware Changes Initiate according: Diagnostics / Components / Control Modules / Supplemental Restraint System Module (SRS) / Diagnostics Sequences / Supplemental Restraint System (SRS) yaw rate offset



Loosen the marked detail.

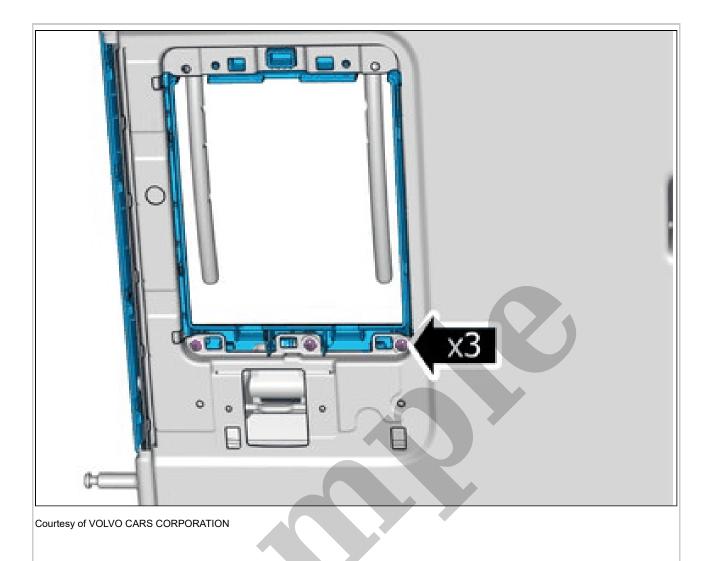

Remove the screws.