

# Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


## 2007 FORD F-150 Regular Cab OEM Service and Repair Workshop Manual

[Go to manual page](#)

## All vehicles

5. Release the B-pillar trim panel clips.

Use the General Equipment: Interior Trim Remover

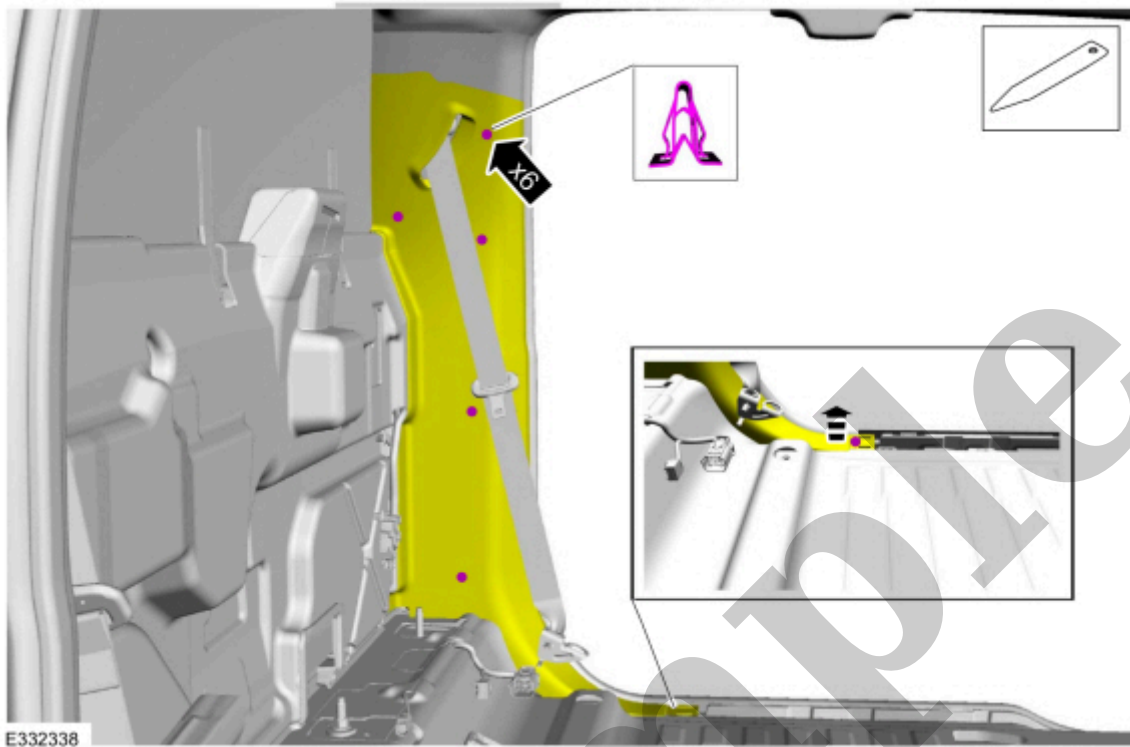

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

### 6. NOTE

Seats removed for clarity.

Remove the B-pillar trim panel.

1. Release the B-pillar trim panel clip from the tether clip.
2. Rotate the tether clip line to align the end with the opening.
3. Slide the tether clip end out of the B-pillar trim panel.
4. Feed the rear seatbelt retractor and pretensioner through the opening in the B-pillar trim panel.

2. Inspect and position the front and rear door weather strip lip so that it overlaps the top of the B-pillar trim panel.




[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Check the seatbelt system for correct operation.

Refer to: [Seatbelt System Functional Tests](#)(501-20A Seatbelt Systems, General Procedures).

Copyright © Ford Motor Company

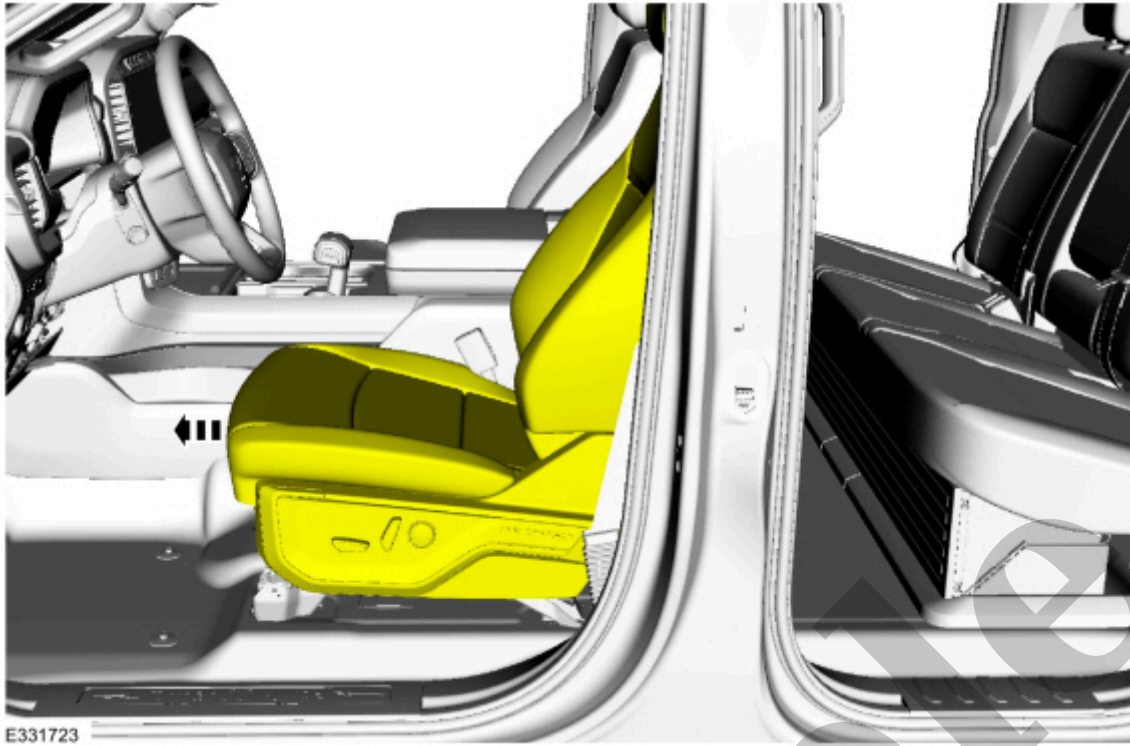

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

2. Remove the front scuff plate trim panel.

Refer to: [Front Scuff Plate Trim Panel - Regular Cab/SuperCrew](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Remove the rear scuff plate trim panel.

Refer to: [Rear Scuff Plate Trim Panel](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).

4. Release the tabs and remove the front seatbelt retractor and pretensioner opening trim cover.


Use the General Equipment: Interior Trim Remover

6. Remove the lower B-pillar trim panel.

1. Release the lower B-pillar trim panel clips.

Use the General Equipment: Interior Trim Remover

2. Position the front seatbelt retractor and pretensioner through the opening in the lower B-pillar trim panel.

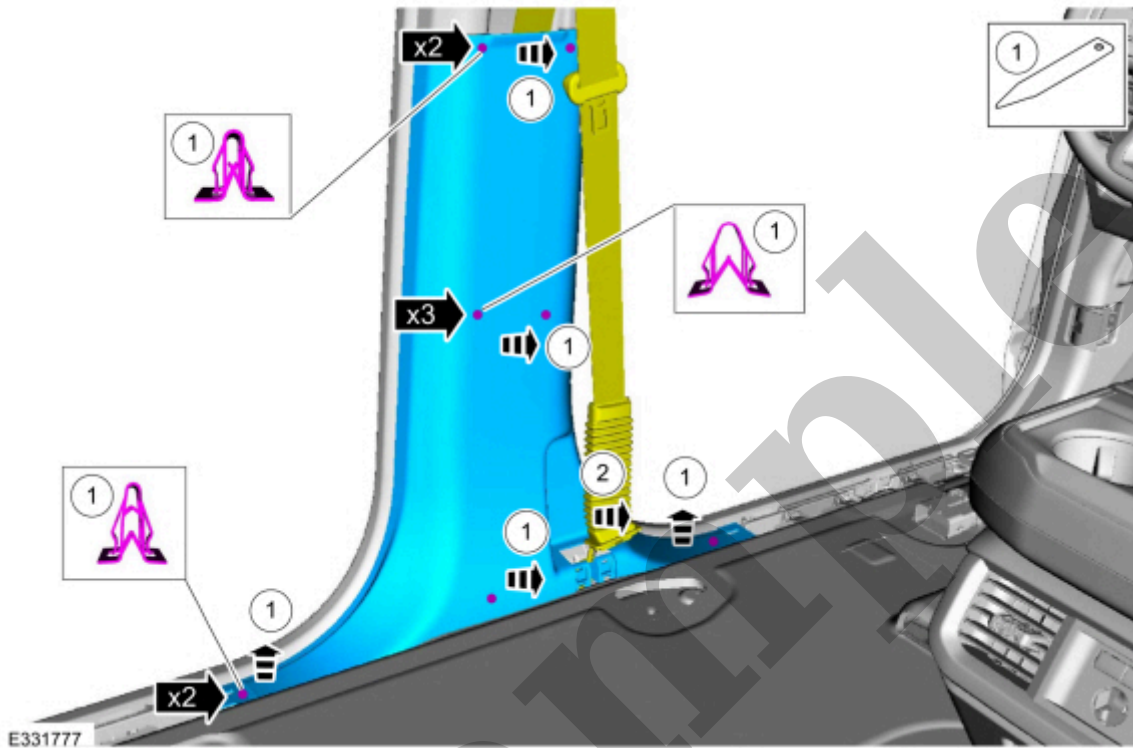

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


### Upper B-Pillar Trim Panel

7. Release the tab and remove the D-ring trim cover.

Use the General Equipment: Interior Trim Remover

9. Release the upper B-pillar trim panel clips.

Use the General Equipment: Interior Trim Remover

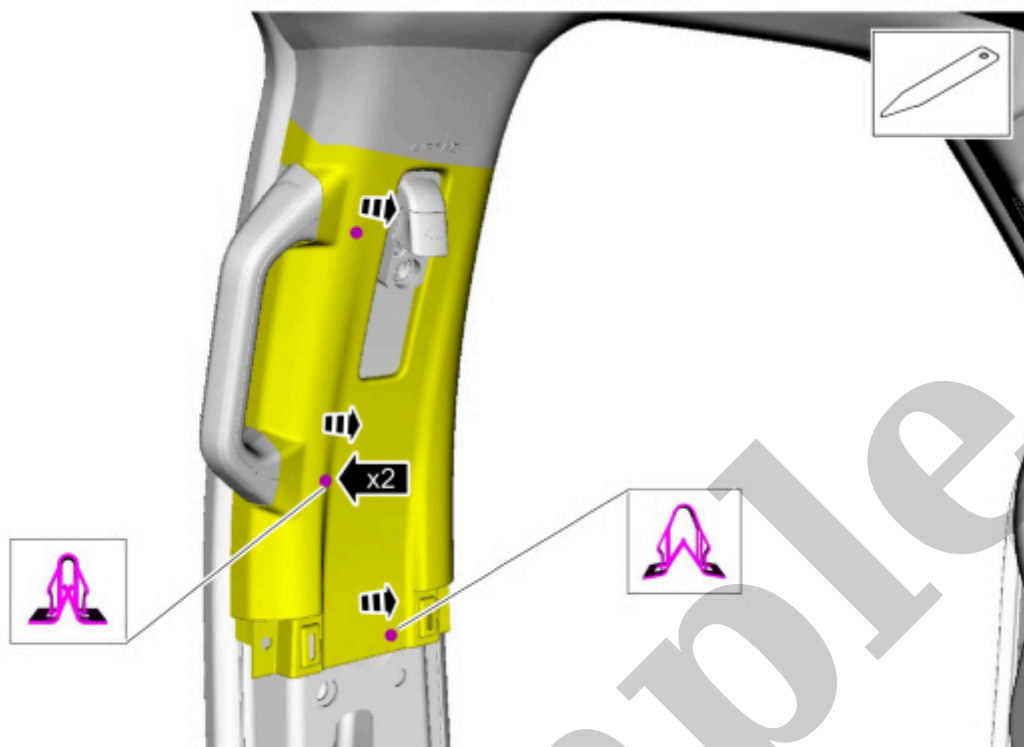

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

#### 10. NOTICE

The upper B-pillar trim panel must be positioned downward to allow the upper clips to release correctly. Failure to follow this direction may cause damage to the upper B-pillar trim panel.


Slide the upper B-pillar trim panel down, aligning the clips to the slots in the sheet metal.

## 1. NOTE

During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

To install, reverse the removal procedure.

2. Inspect and position the front and rear door weather strip lip so that it overlaps the top of the B-pillar trim panels.

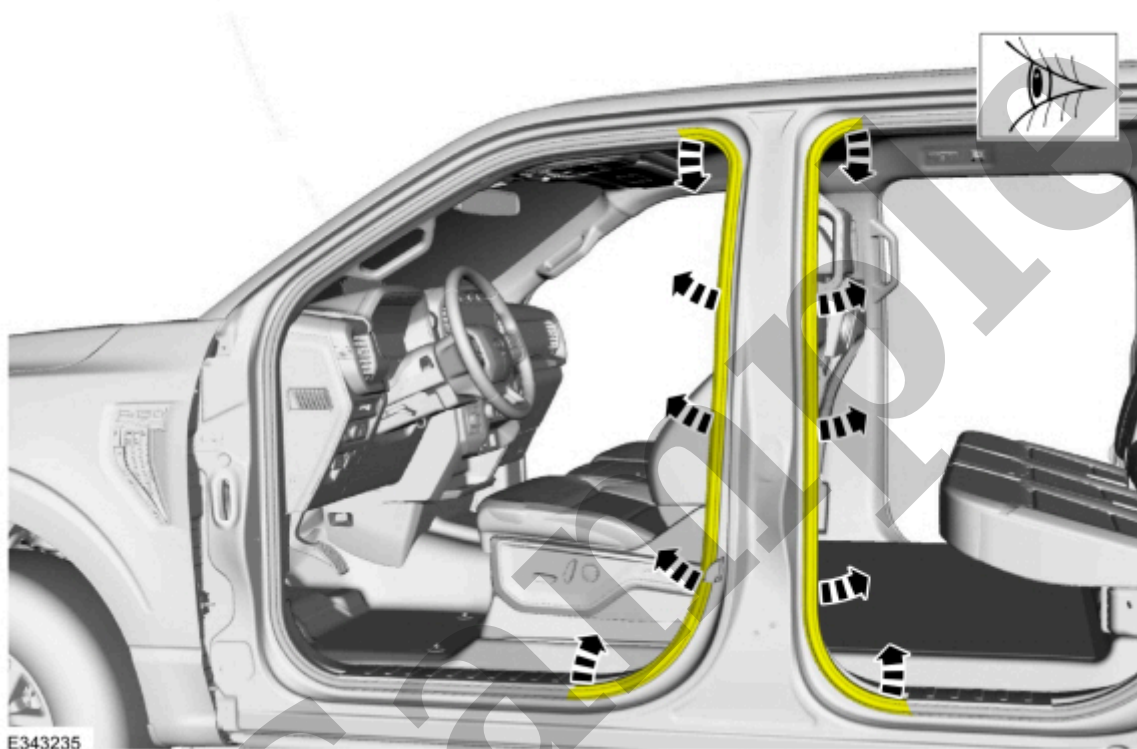

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Check the seatbelt system for correct operation.

Refer to: [Seatbelt System Functional Tests](#)(501-20A Seatbelt Systems, General Procedures).

Copyright © Ford Motor Company





[Click here to learn about symbols, color coding, and icons used in this manual.](#)

#### Left hand side

#### 3. NOTE

The seat backrest latch is only accessible when the seat cushion is raised.

#### NOTE

During installation the striker should be in its lowest position for the latch to engage.


Fold the LH (left-hand) rear seat backrest down.

1. Raise the seat cushion.
2. Release the backrest latch.
3. Fold the backrest down.



## All vehicles


5. Release the C-pillar trim panel clips.

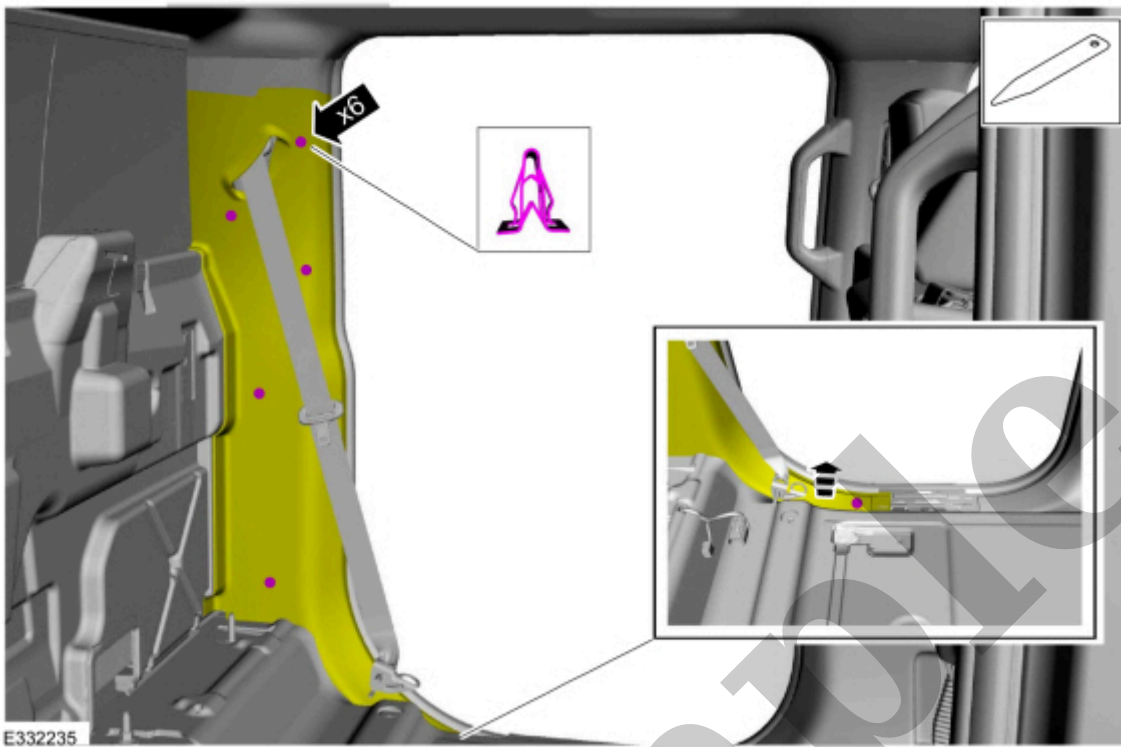

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. Remove the C-pillar trim panel.

1. Release the C-pillar trim panel clip from the tether clip.
2. Rotate the tether clip line to align the end with the opening.
3. Slide the tether clip end out of the C-pillar trim panel.
4. Feed the rear seatbelt retractor and pretensioner through the opening in the C-pillar trim panel.

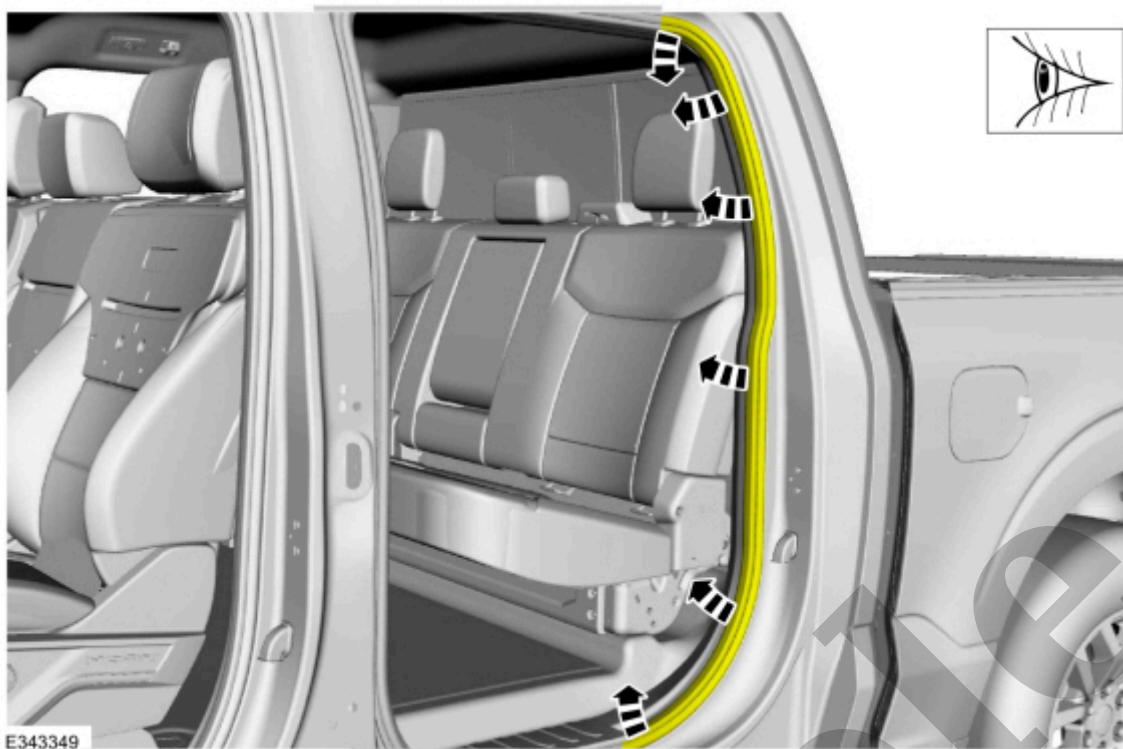

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. Check the seatbelt system for correct operation.

Refer to: [Seatbelt System Functional Tests](#)(501-20A Seatbelt Systems, General Procedures).

Copyright © Ford Motor Company