


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2007 FORD Focus C-Max OEM Service and Repair Workshop Manual

Go to manual page

- 3. Release the tabs at the edges
 - Remove the drive vanes.

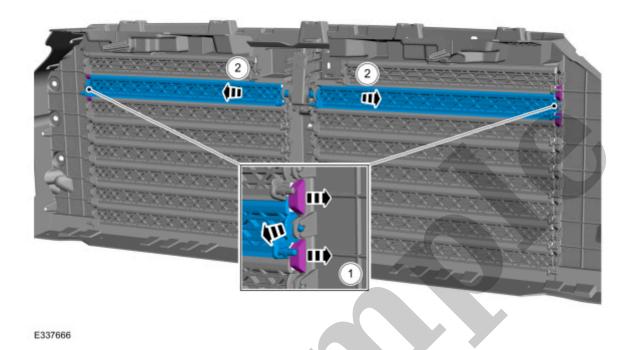


Click here to learn about symbols, color coding, and icons used in this manual.

4. NOTE

The upper active grille shutter actuator is not interchangeable with the lower active grill shutter actuator. Do not attempt to replace one actuator with the other.


- Remove the screw.
- Release the tab and remove the upper active grille shutter actuator

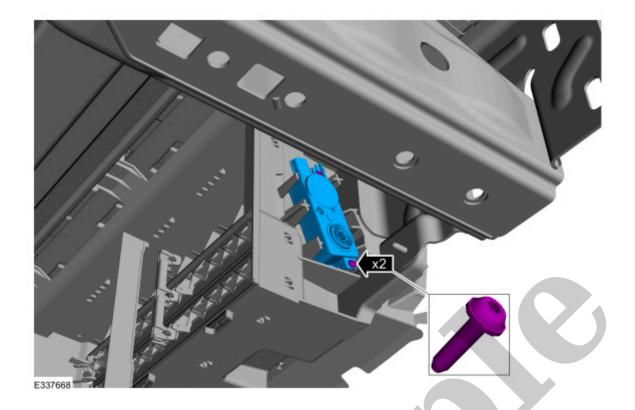

Installation

1. To install, reverse the removal procedure.


Copyright © Ford Motor Company

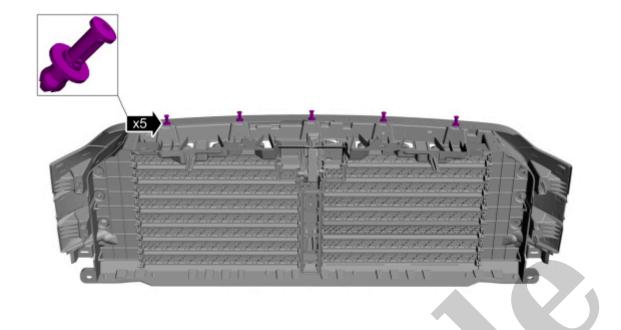

E337656


Click here to learn about symbols, color coding, and icons used in this manual.

3. Remove the retainers and the deflector.

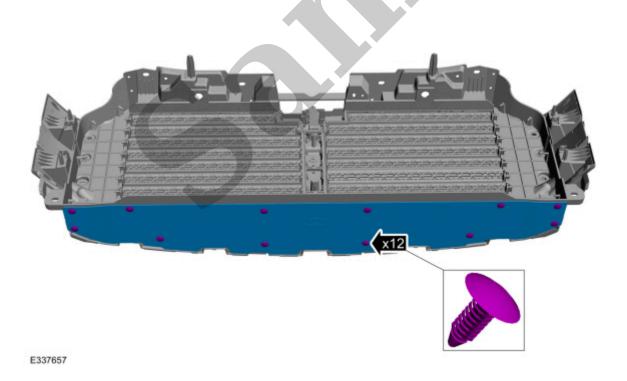


Click here to learn about symbols, color coding, and icons used in this manual.

4. Remove the clips.

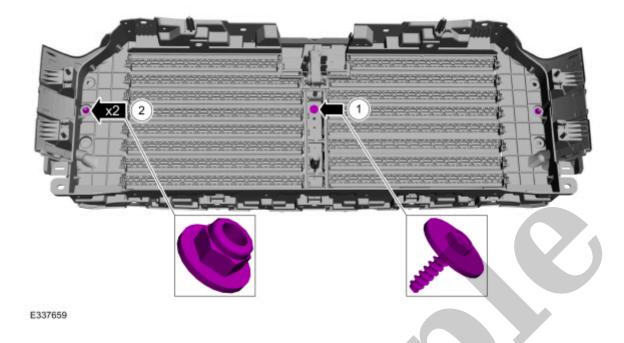


6. Separate the active grille shutter from the radiator grille.

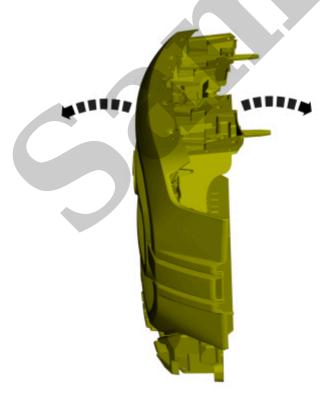


Click here to learn about symbols, color coding, and icons used in this manual.

E337660

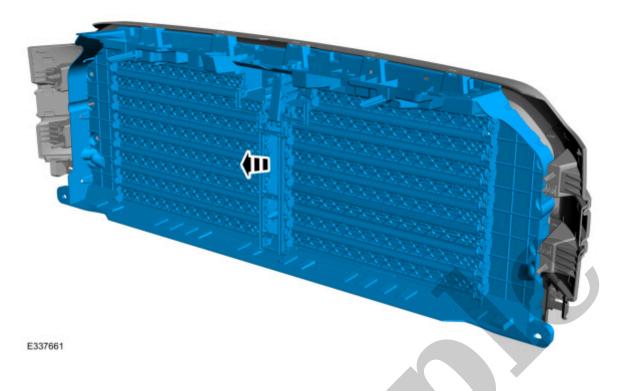


9. If equipped.

Remove the pin-type retainers and the wire harness.

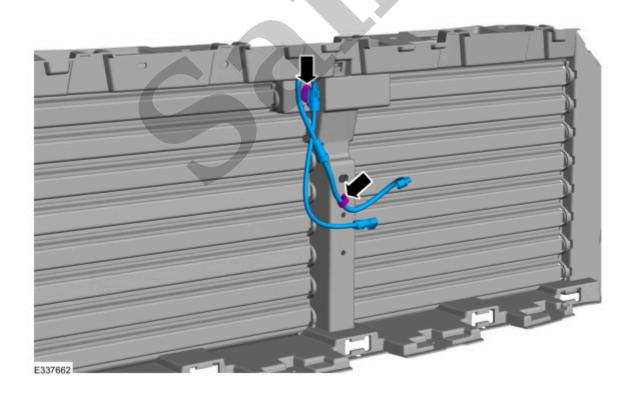

Click here to learn about symbols, color coding, and icons used in this manual.

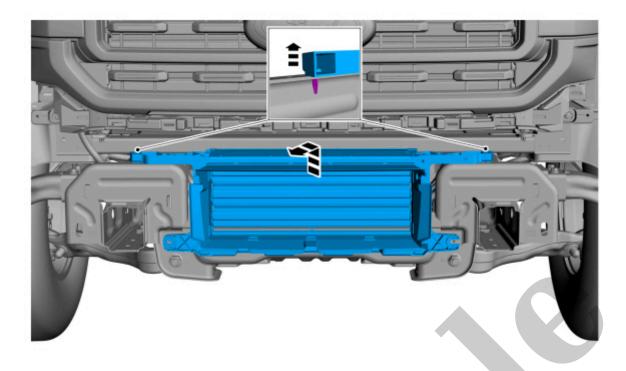


E337664

Click here to learn about symbols, color coding, and icons used in this manual.


Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

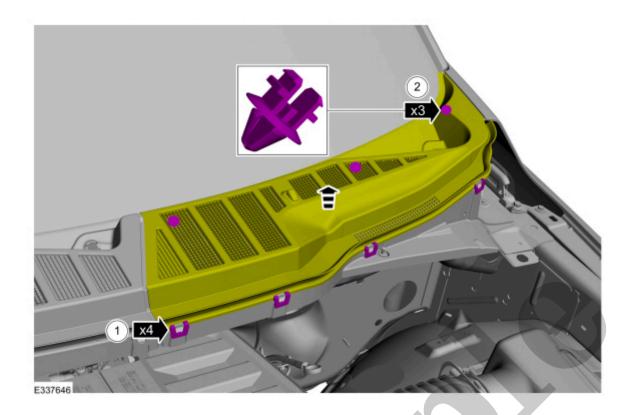

3. Disconnect the windshield washer tube and remove the cowl panel grille.

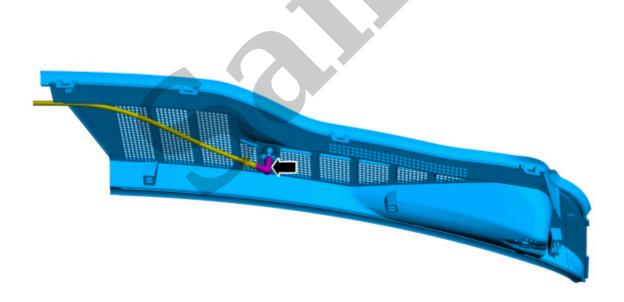

E337647

Click here to learn about symbols, color coding, and icons used in this manual.


RH side

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company



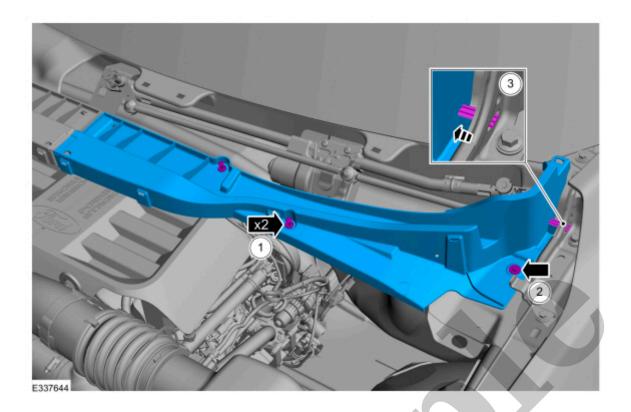

- 3. 1. Remove the pin type retainers.
 - 2. Remove the screw.

Torque: 28 lb.in (3.2 Nm)

3. Slide out and remove the LH (left-hand) side cowl panel.