

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2007 NISSAN Murano OEM Service and Repair Workshop Manual

[Go to manual page](#)

DTC DETECTION LOGIC

| DTC No. | CONSULT screen items | DTC Detection Condition | |
|----------------------|---|-------------------------|-------------------------------|
| | | B0091-93 | Left Side Restraints Sensor 1 |
| Signal (terminal) | Front door satellite sensor LH signal | | |
| Threshold | Reset malfunction of front door satellite sensor LH | | |
| Diagnosis delay time | 2 seconds or more. | | |

POSSIBLE CAUSE

- Connection malfunction of harness or connector
- Internal malfunction of front door satellite sensor LH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAG RESULT

 With CONSULT

1. Power switch ON.
2. Perform "Self Diagnostic Result" mode of "AIR BAG" using CONSULT.

Is malfunctioning part detected?

YES>>

Refer to [Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

WARNING:

- Before servicing, power switch OFF, disconnect battery negative terminal, and wait at least 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK HARNESS CONNECTOR

Check the harness connector for disconnection, looseness or damage.

Is the inspection result normal?

YES>>

[GO TO 2.](#)

NO-1>>

Damage: Replace malfunctioning harness and connector.

NO-2>>

Disconnection or looseness: Securely lock the connector.

2. CHECK WIRING HARNESS

Replace malfunctioning harness and connector.

Is the inspection result normal?

YES>>

[GO TO 3.](#)

NO>>

Replace wiring harness.

3. REPLACE FRONT DOOR SATELLITE SENSOR LH

1. Replace front door satellite sensor LH. Refer to [Removal & Installation](#).

2. Perform DTC confirmation procedure. Refer to [DTC Description](#).

Is DTC detected?

YES>>

[GO TO 4.](#)

NO>>

INSPECTION END

4. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

Replace air bag diagnosis sensor unit. Refer to [Removal & Installation](#).

>>

Sample

DTC DETECTION LOGIC

| DTC No. | CONSULT screen items | DTC Detection Condition | |
|----------|--------------------------------|-------------------------|---|
| | | Diagnosis condition | When power switch is ON. |
| B0096-11 | Right Side Restraints Sensor 1 | Signal (terminal) | Front door satellite sensor RH signal |
| | | Threshold | Front door satellite sensor RH circuit is shorted to ground |
| | | Diagnosis delay time | 2 seconds or more. |
| | | | |

POSSIBLE CAUSE

- Connection malfunction or short circuit to ground of harness and connector
- Internal malfunction of front door satellite sensor RH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAG RESULT

 With CONSULT

1. Power switch ON.
2. Perform "Self Diagnostic Result" mode of "AIR BAG" using CONSULT.

Is malfunctioning part detected?

YES>>

Refer to [Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

WARNING:

- Before servicing, power switch OFF, disconnect battery negative terminal, and wait at least 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK HARNESS CONNECTOR

Check the harness connector for disconnection, looseness or damage.

Is the inspection result normal?

YES>>

[GO TO 2.](#)

NO-1>>

Damage: Replace malfunctioning harness and connector.

NO-2>>

Disconnection or looseness: Securely lock the connector.

2. CHECK WIRING HARNESS

Check the wiring harness externals.

Is the inspection result normal?

YES>>

[GO TO 3.](#)

NO>>

Replace malfunctioning harness and connector.

3. REPLACE FRONT DOOR SATELLITE SENSOR RH

1. Replace front door satellite sensor RH. Refer to [Removal & Installation](#).

2. Perform DTC confirmation procedure. Refer to [DTC Description](#).

Is DTC detected?

YES>>

[GO TO 4.](#)

NO>>

INSPECTION END

4. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

Replace air bag diagnosis sensor unit. Refer to [Removal & Installation](#).

>>

Sample

DTC DETECTION LOGIC

| DTC No. | CONSULT screen items | DTC Detection Condition | |
|----------|--------------------------------|-------------------------|--|
| | | Diagnosis condition | When power switch is ON. |
| B0096-12 | Right Side Restraints Sensor 1 | Signal (terminal) | Front door satellite sensor RH signal |
| | | Threshold | Front door satellite sensor RH circuit is shorted to power supply circuit. |
| | | Diagnosis delay time | 2 seconds or more. |
| | | | |

POSSIBLE CAUSE

- Connection malfunction or short circuit to power supply of harness and connector
- Internal malfunction of front door satellite sensor RH
- Internal malfunction of air bag diagnosis sensor unit

FAIL-SAFE

DTC CONFIRMATION PROCEDURE

1. CHECK SELF-DIAG RESULT

 With CONSULT

1. Power switch ON.
2. Perform "Self Diagnostic Result" mode of "AIR BAG" using CONSULT.

Is malfunctioning part detected?

YES>>

Refer to [Diagnosis Procedure](#).

NO-1>>

To check malfunction symptom before repair: Refer to [Intermittent Incident](#).

NO-2>>

Confirmation after repair: INSPECTION END

WARNING:

- Before servicing, power switch OFF, disconnect battery negative terminal, and wait at least 3 minutes or more. (To discharge backup capacitor.)
- Never use unspecified tester or other measuring device.

1. CHECK HARNESS CONNECTOR

Check the harness connector for disconnection, looseness or damage.

Is the inspection result normal?

YES>>

[GO TO 2.](#)

NO-1>>

Damage: Replace malfunctioning harness and connector.

NO-2>>

Disconnection or looseness: Securely lock the connector.

2. CHECK WIRING HARNESS

Check the wiring harness externals.

Is the inspection result normal?

YES>>

[GO TO 3.](#)

NO>>

Replace malfunctioning harness and connector.

3. REPLACE FRONT DOOR SATELLITE SENSOR RH

1. Replace front door satellite sensor RH. Refer to [Removal & Installation](#).

2. Perform DTC confirmation procedure. Refer to [DTC Description](#).

Is DTC detected?

YES>>

[GO TO 4.](#)

NO>>

INSPECTION END

4. REPLACE AIR BAG DIAGNOSIS SENSOR UNIT

Replace air bag diagnosis sensor unit. Refer to [Removal & Installation](#).

>>

Sample