

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2008 CHEVROLET Classic OEM Service and Repair Workshop Manual

[Go to manual page](#)

- The intermediate shaft(s)
- The steering gear


After disconnecting these components, do not rotate the steering wheel or move the front tires and wheels. Failure to follow this procedure may cause the SIR coil assembly to become un-centered and cause possible damage to the SIR coil. If you think the SIR coil has become un-centered, refer to your specific SIR coil's centering procedure to re-center SIR Coil.

With the front wheels of the vehicle in the straight ahead position, use the **CH-42640 anti-rotation pin** to lock the steering column.


9. Disconnect the battery negative cable. [Battery Negative Cable Disconnection and Connection](#)

10. Disconnect any electrical connectors as necessary.

11. Intermediate Steering Shaft@Steering Column »Separate— [Intermediate Steering Shaft Replacement](#)

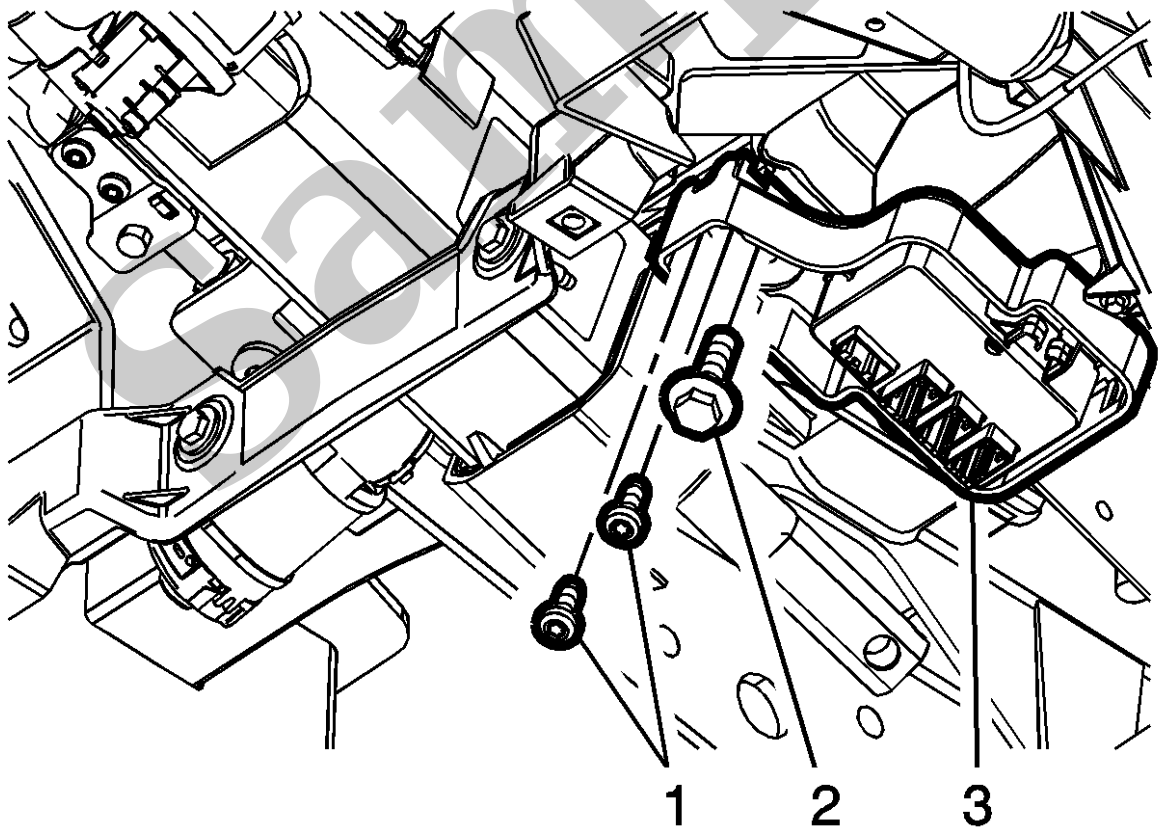


12.

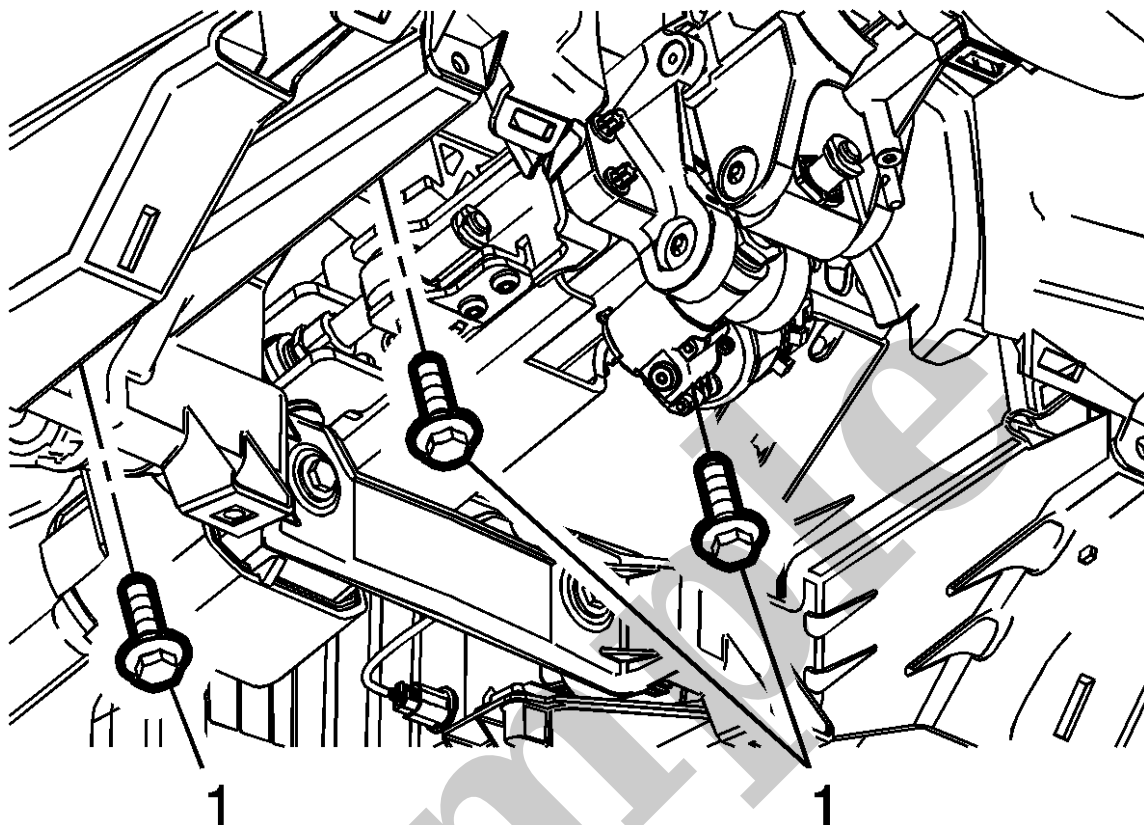


17.

Steering Column Bracket Bolt(1) »Remove[3x]

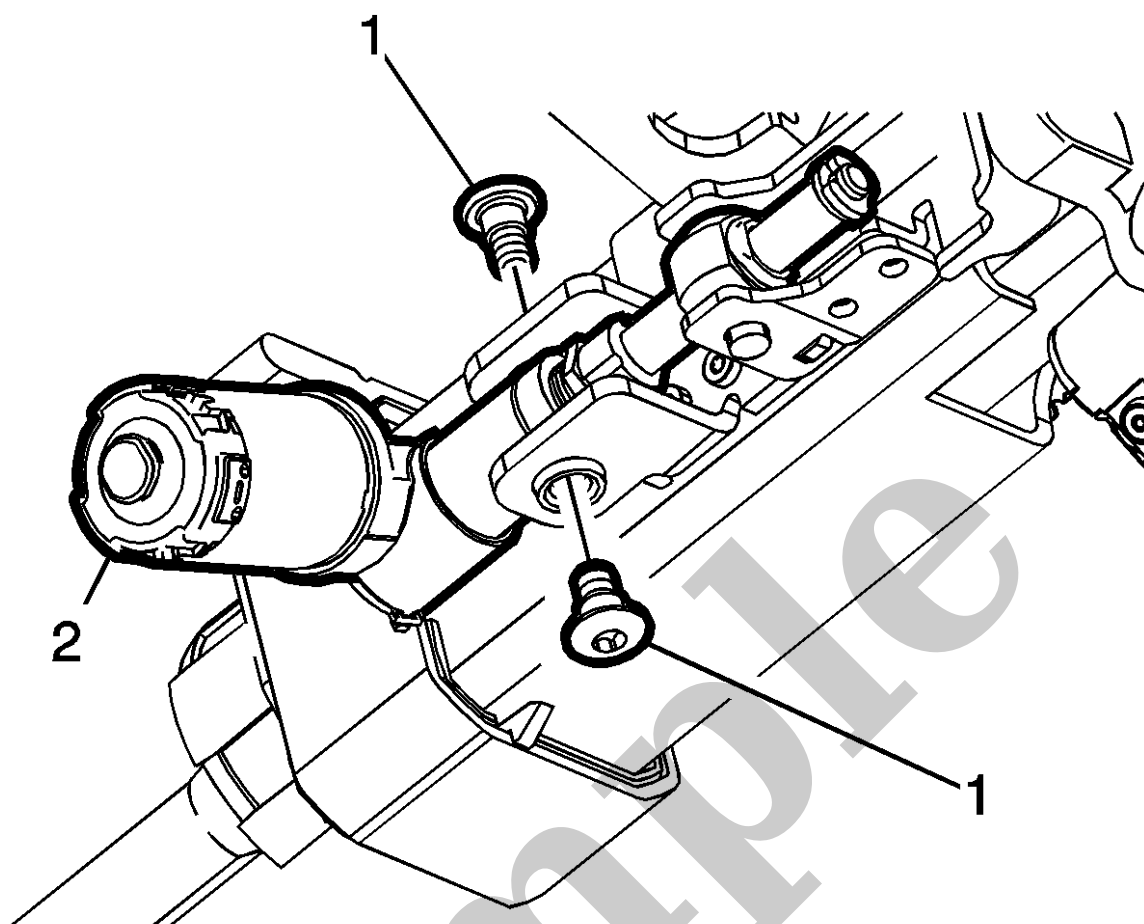

20.
Remove the lower steering column telescope actuator bracket bolt (1) from the top of the steering column telescope actuator bracket.
21. Guide the steering column downward into the dash and remove the lower steering column telescope actuator bracket bolt (1) from the bottom of the steering column telescope actuator bracket.
22. Remove the steering column telescope actuator motor (2) from the vehicle.

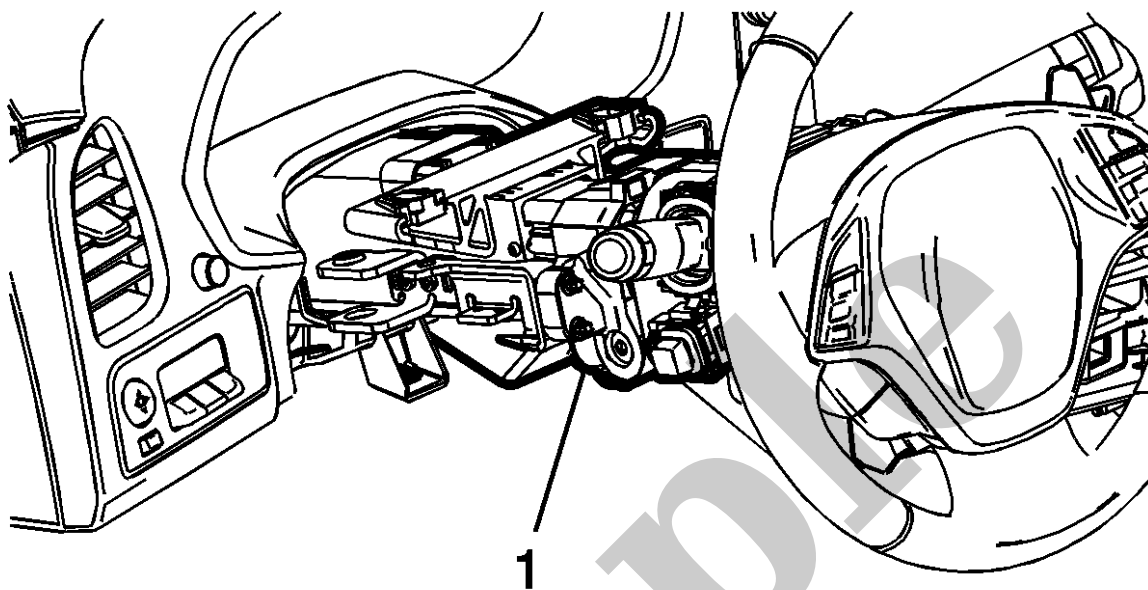

1.

Position the steering column (1) in the vehicle.