


Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.


2008 CHEVROLET Express OEM Service and Repair Workshop Manual

Go to manual page

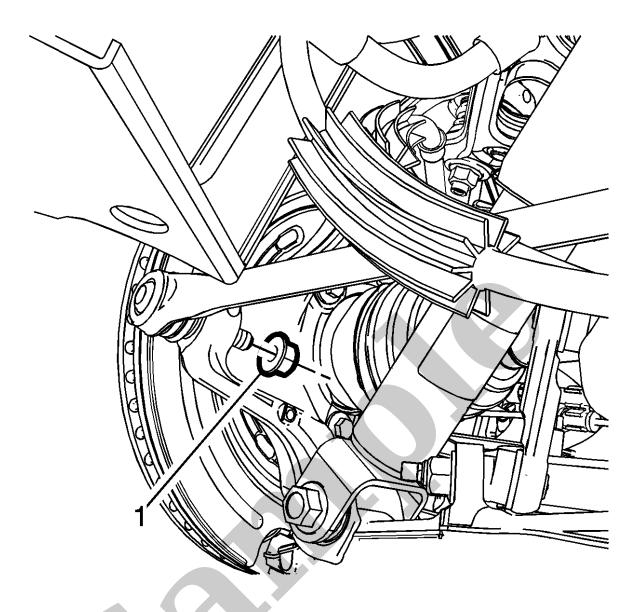


Remove the adjust link nut (1).

- 9. Disconnect the parking brake rear cable from the knuckle and the park brake actuator. Parking Brake Rear Cable Replacement - Left Side or Parking Brake Rear Cable Replacement - Right Side
- 10. Separate the wheel drive shaft from the wheel bearing and hub. Rear Wheel Drive Shaft Replacement

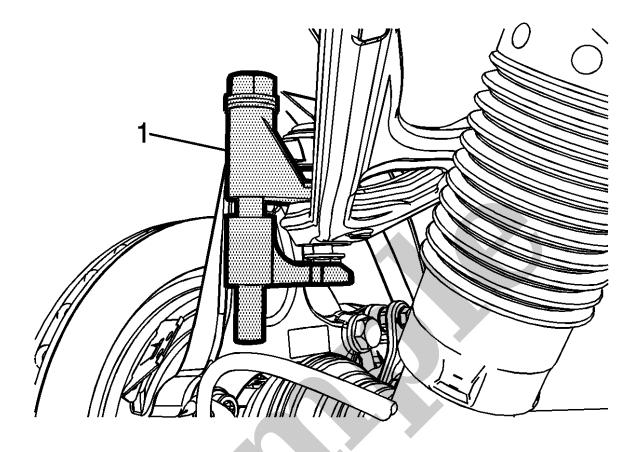


Using the **J-42188-B** *separator* (1), separate the upper control arm ball joint stud from the knuckle.

13. Support the knuckle assembly.

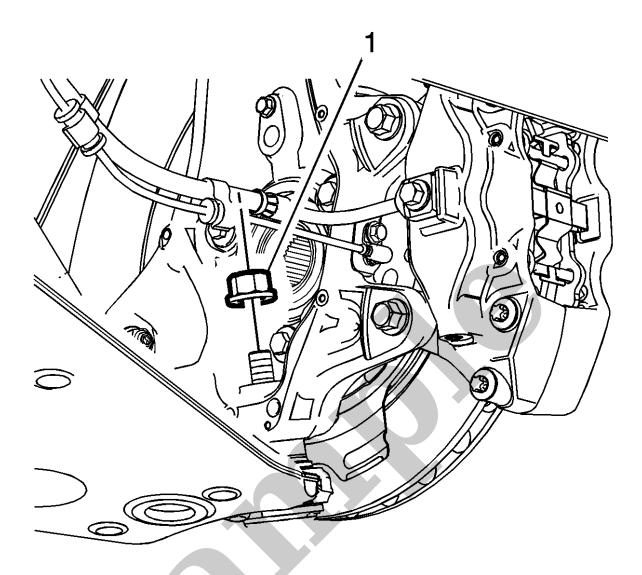

Remove and DISCARD the rear axle lower control arm ball joint nut(1).

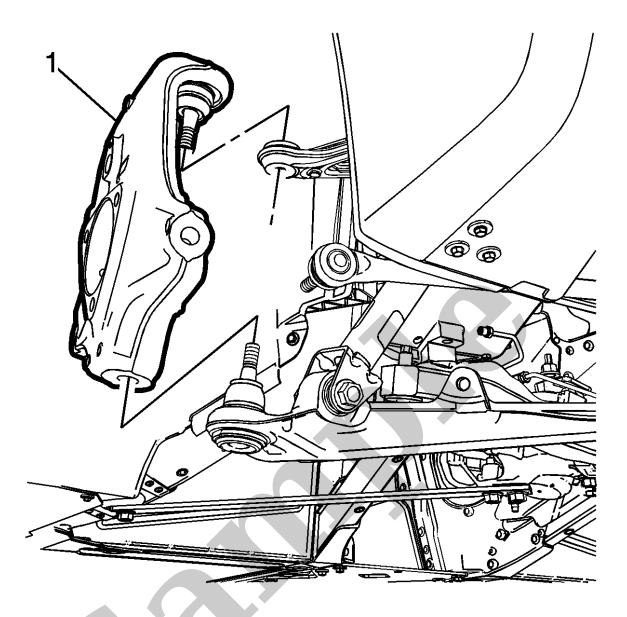

Remove the knuckle assembly (1).

- 19. If replacing the knuckle, remove the parking brake actuator lever . Rear Parking Brake Actuator Lever Replacement
- 20. If replacing the knuckle, remove the wheel bearing and hub assembly. Rear Wheel Bearing and Hub Replacement
- 21. If replacing the knuckle, remove the parking brake backing plate. Rear Parking Brake Anchor Backing Plate Replacement

Installation Procedure

1. If replacing the knuckle, install the parking brake backing plate. Rear Parking Brake Anchor Backing Plate Replacement