

Your Ultimate Source for OEM Repair Manuals

FactoryManuals.net is a great resource for anyone who wants to save money on repairs by doing their own work. The manuals provide detailed instructions and diagrams that make it easy to understand how to fix a vehicle.

2008 FORD Focus RS OEM Service and Repair Workshop Manual

[Go to manual page](#)



Exterior Front Door Handle

<i>501-14 Handles, Locks, Latches and Entry Systems</i>	<i>2022 F-150</i>
<i>Removal and Installation</i>	<i>Procedure revision date: 05/18/2021</i>

Exterior Front Door Handle

Removal

NOTE


Left hand (LH) shown, right hand (RH) similar.

NOTE

Removal steps in this procedure may contain installation details.

Vehicles with passive entry

1. Remove the front door trim panel.
Refer to: [Front Door Trim Panel](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the front door watershield.

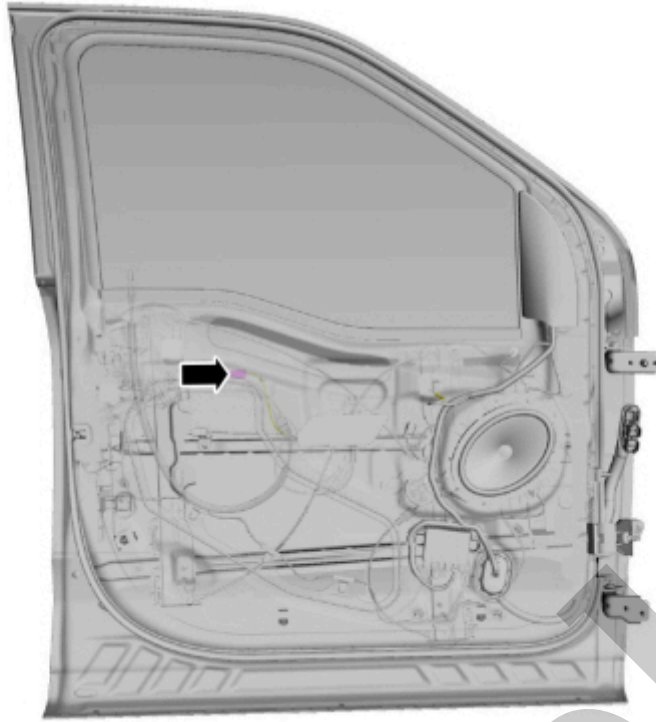

E334062

[Click here to learn about symbols, color coding, and icons used in this manual.](#)


All vehicles

4. Remove the exterior front door handle access plug.




E334063

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

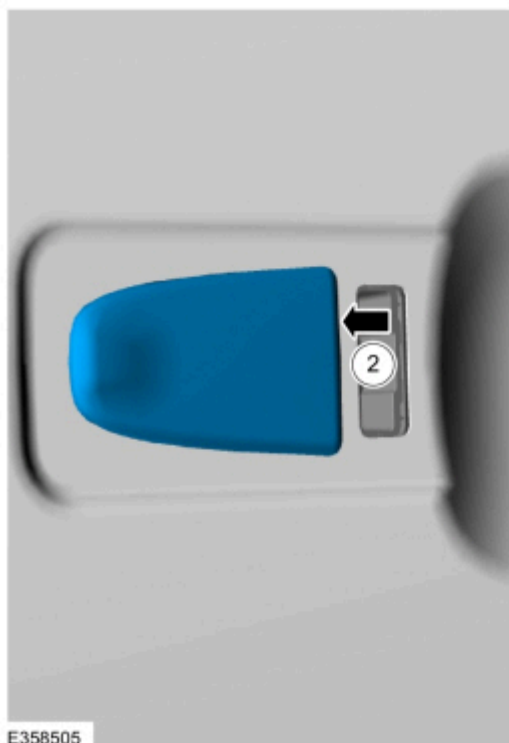

E358505

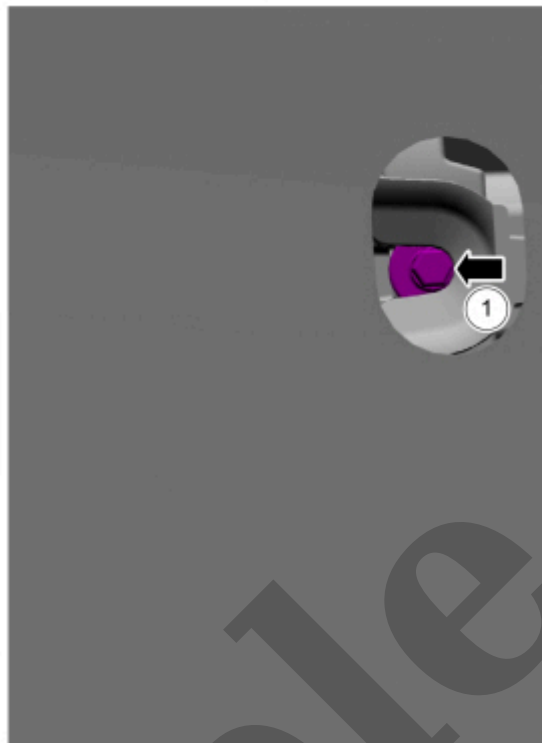


[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

Copyright © Ford Motor Company

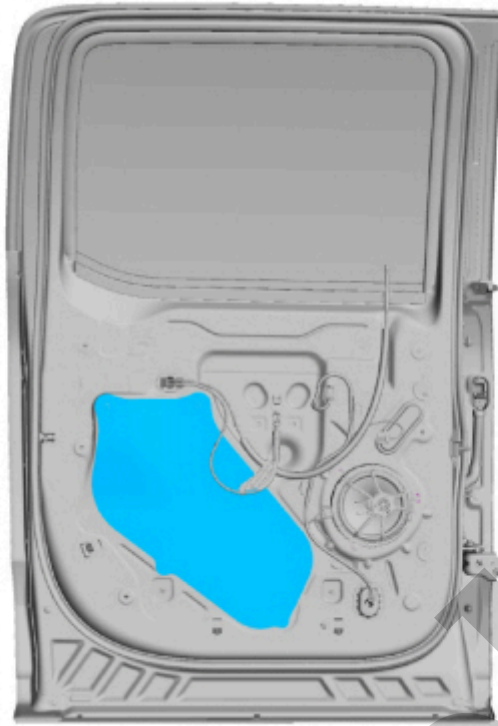

E334066

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

3. **NOTE**

The rear door is shown transparent for clarity.


Disconnect the exterior rear door handle electrical connector.

5. Remove the exterior rear door handle.

1. Hold the exterior rear door handle open.
2. Turn the release screw enough to release the exterior rear door handle.

Torque : 62 lb.in (7 Nm)

3. Remove the exterior rear door handle.

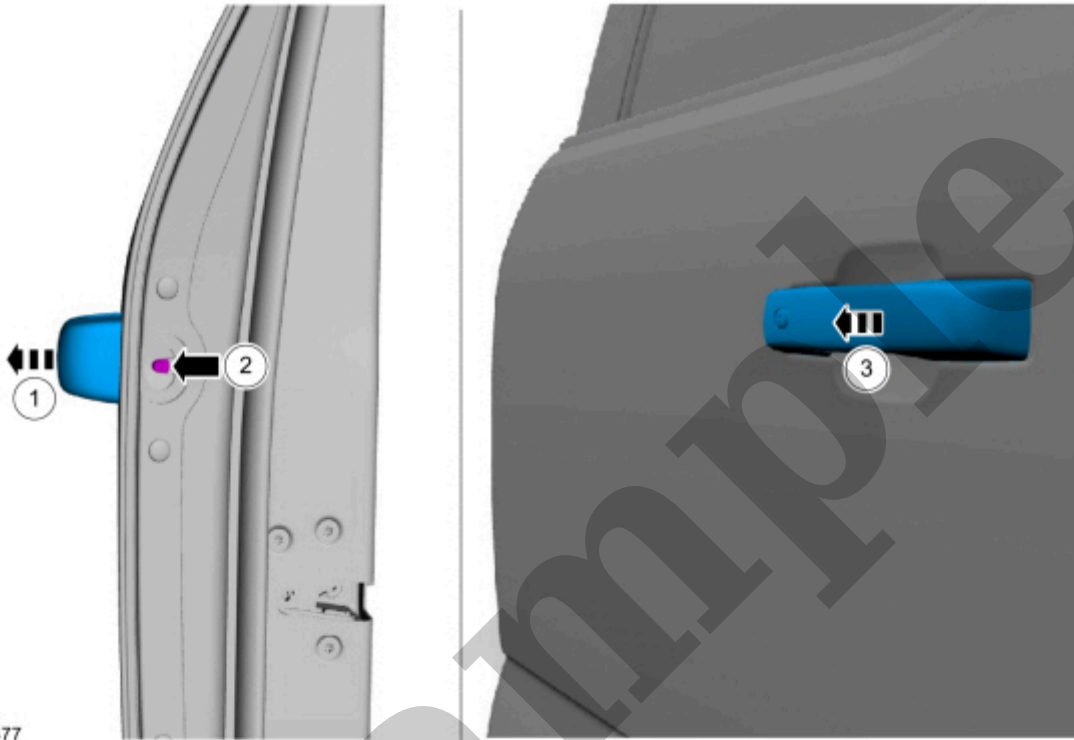

E334477

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

6. If required.

Remove the exterior rear door handle plug.

1. Turn the release screw enough to release the exterior rear door handle plug.
2. Remove the exterior rear door handle plug.



Exterior Rear Door Handle Reinforcement - SuperCrew

<i>501-14 Handles, Locks, Latches and Entry Systems</i>	<i>2022 F-150</i>
<i>Removal and Installation</i>	<i>Procedure revision date: 03/4/2021</i>

Exterior Rear Door Handle Reinforcement - SuperCrew

Removal

NOTE

Left hand (LH) shown, right hand (RH) similar.

1. Remove the rear door latch.


Refer to: [Rear Door Latch - SuperCrew](#)(501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

2. NOTE

This step is only necessary when installing a new component.

Release the cable tension by turning the release screw until the handle lever releases from the stop.

1. Turn the release screw until the handle lever releases from the stop.
2. Release the handle lever from the stop.

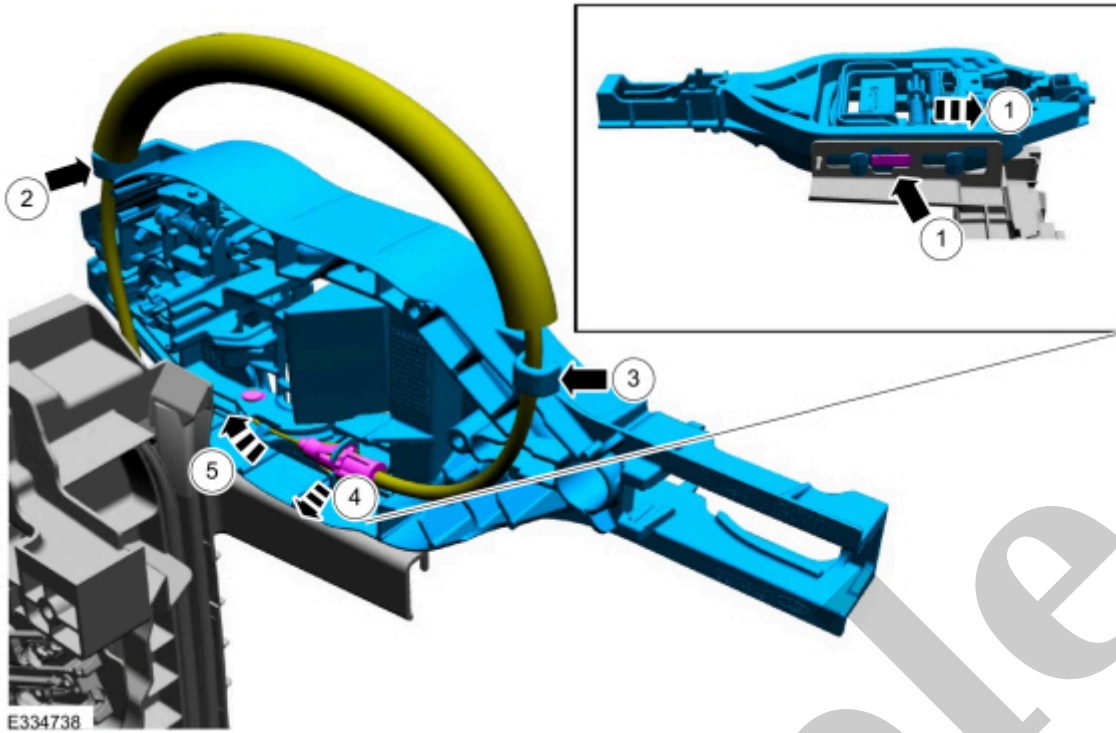

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

Installation

1. To install, reverse the removal procedure.

2. NOTE

This step is only necessary when installing a new component.

NOTE

This step must be done correctly or the exterior door handle will not engage the lever on installation.

Position the exterior rear door handle reinforcement in the service position.

1. While keeping tension on the cable and holding the handle lever in the engaged position against the stop.
2. Turn the release screw until the handle lever is positioned against the stop.



Front Door Latch

<i>501-14 Handles, Locks, Latches and Entry Systems</i>	<i>2022 F-150</i>
<i>Removal and Installation</i>	<i>Procedure revision date: 07/12/2022</i>

Front Door Latch

Removal

NOTE

Left hand (LH) shown, right hand (RH) similar.

NOTE

Removal steps in this procedure may contain installation details.

1. Remove the front door trim panel.

Refer to: [Front Door Trim Panel](#)(501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the exterior front door handle.

Refer to: [Exterior Front Door Handle](#)(501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
3. If equipped.

Remove the front door lock cylinder.

Refer to: [Door Lock Cylinder](#)(501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
4. Remove the front door watershield.

1. Tape the front door window glass in place.


2. Remove the window regulator nuts.

Torque : 93 lb.in (10.5 Nm)

3. Release the aft retaining clip from front door window glass.

Use the General Equipment: Interior Trim Remover

4. Position the front door window regulator aside.

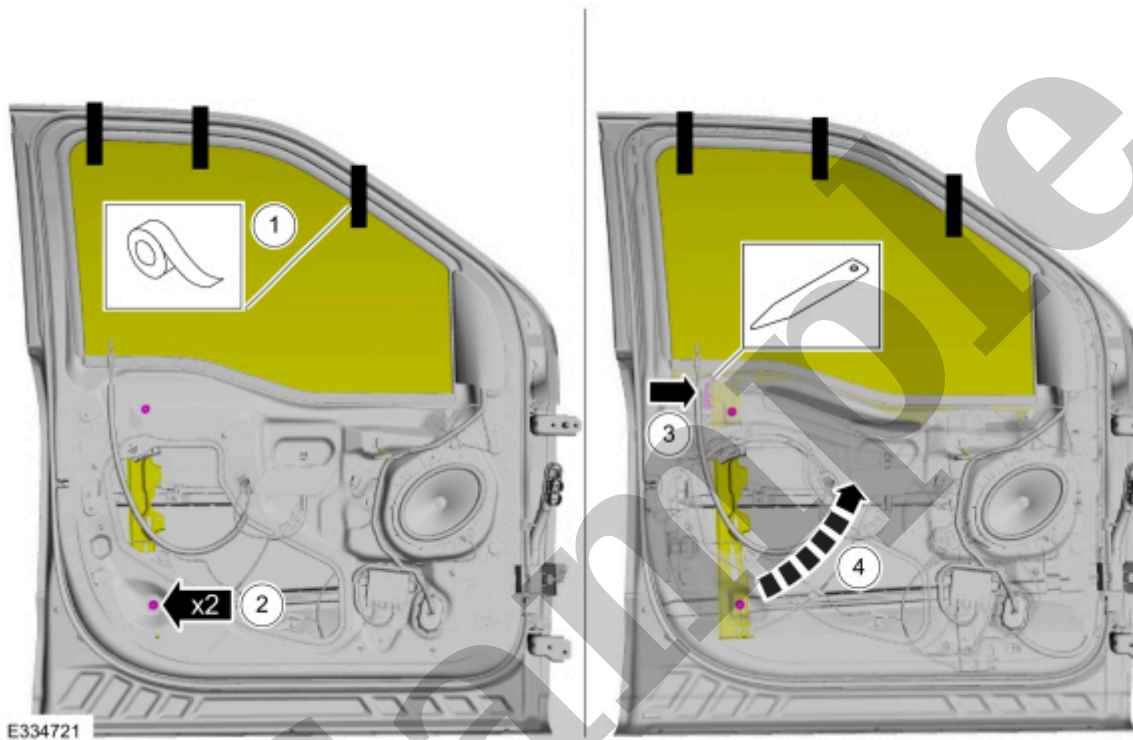

[Click here to learn about symbols, color coding, and icons used in this manual.](#)

7. Remove the screw from the exterior front door handle reinforcement.

Torque : 62 lb.in (7 Nm)